
 


Caution!

- Don't use electric screwdriver to unscrew or screw the hinges which will damage the fixing between the plastic insert and wooden board.

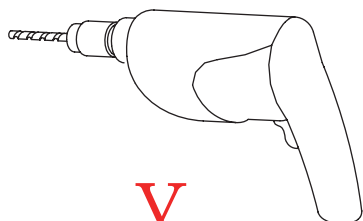


X



✓

- Don't turn in the opposite direction when loosening the screw, as overtightening might put too much stress between plastic insert and wood and thus lead to spinning.

Loosen the screw

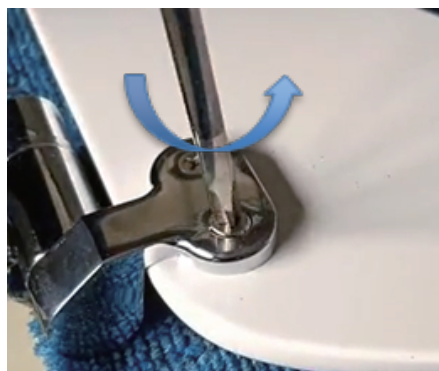

Tighten the screw

