
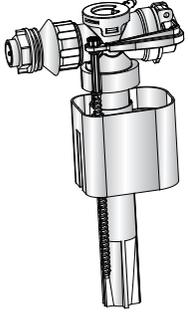
 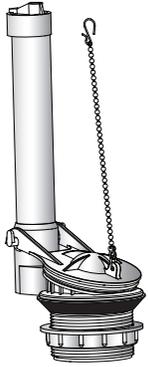
 





Parts supplied:

| | | | | | |
|---|---|--|---|--|--|
|  <p>Inlet Valve 1x</p> |  <p>Flush Valve 1x</p> |  <p>Handle 1x</p> |  <p>Lever 1x</p> |  <p>Spring 1x</p> |  <p>Flush Cone 1x</p> |
| | |  <p>Cover 1x</p> |  <p>fixing block 1x</p> | |  <p>Plastic Washer 1x</p> |
| | | | | |  <p>Cone Washer 1x</p> |
| | | | | |  <p>Fixing Nut 1x</p> |





- Please read these instructions carefully to avoid damage to the valves, and to ensure correct installation.
- Do not use bleach or bleach based cleaning products in the cistern, as these will cause damage to the seals.
 We cannot be held responsible or liable for any failure which results from the use of bleach based products.
- Water temperature range +2C to +45C.
- Water pressure 0.2 to 8 bar.

1: Inlet Valve installation and adjustment settings

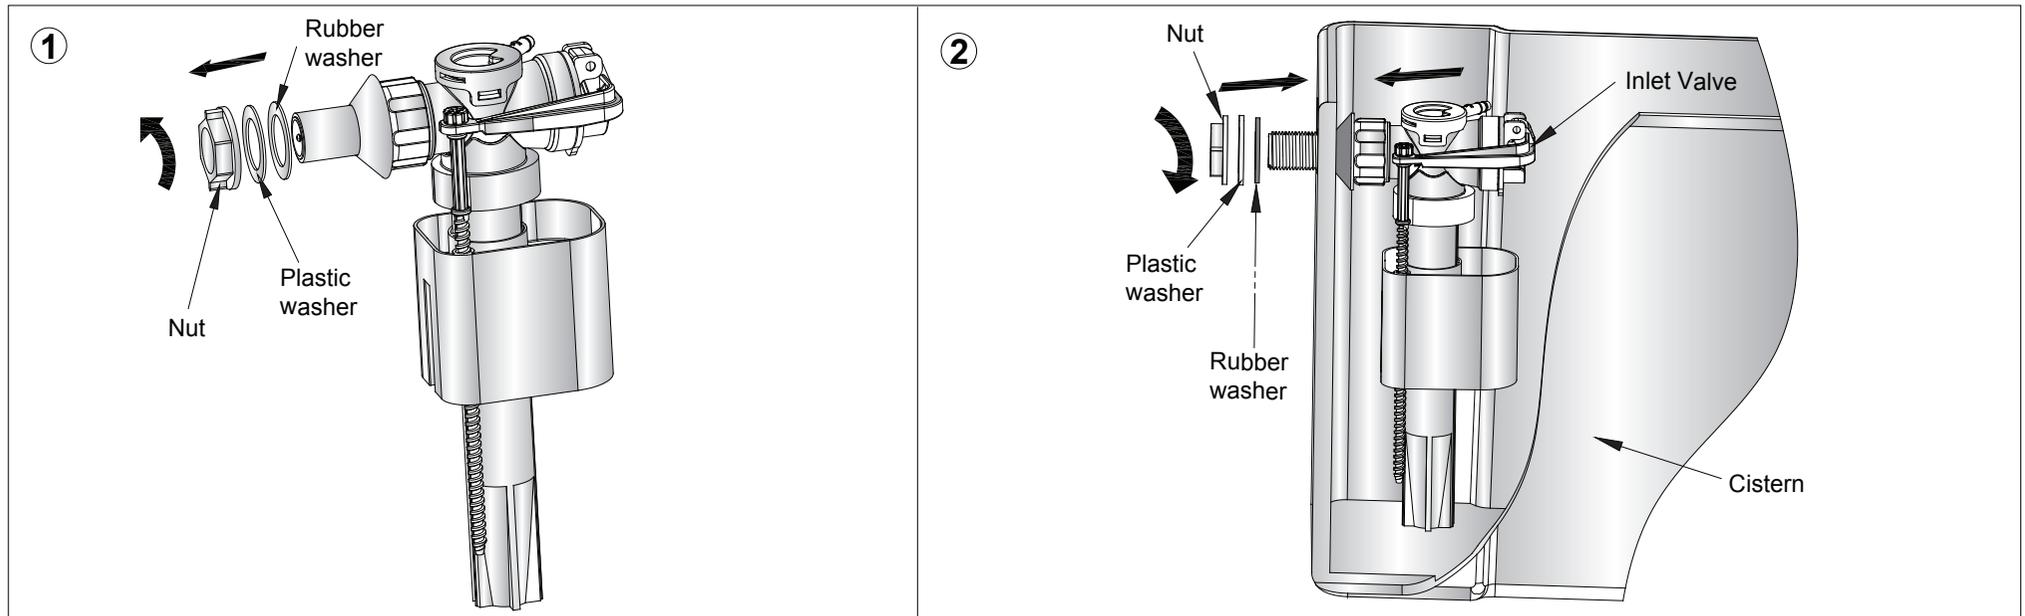

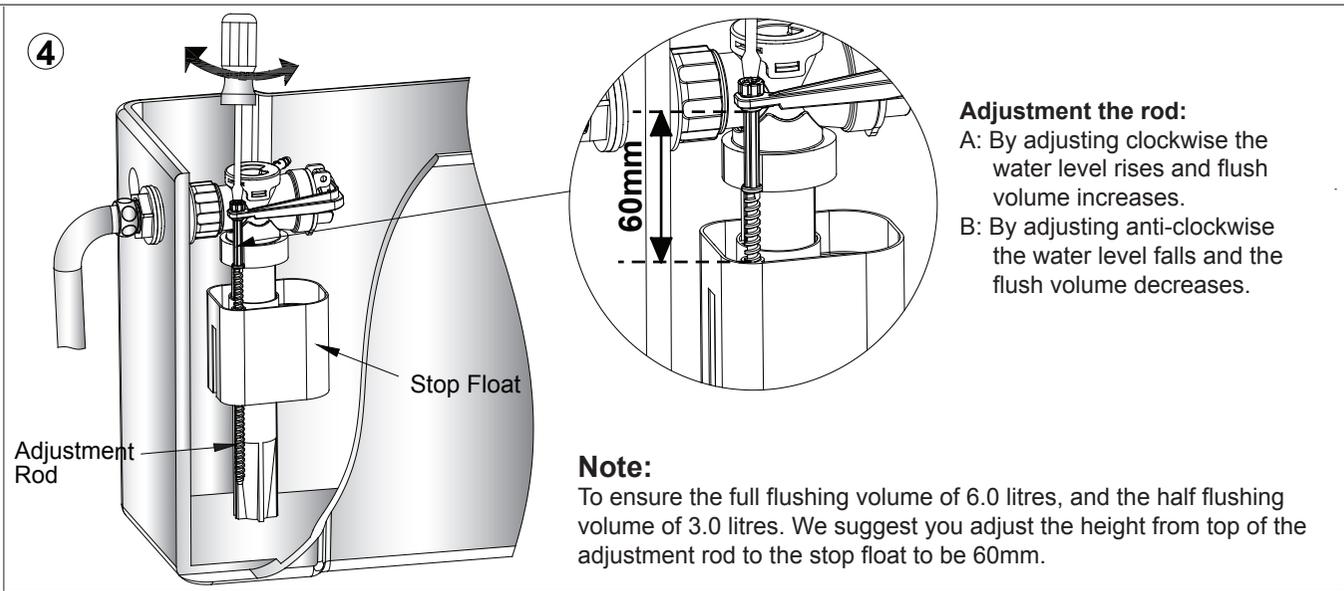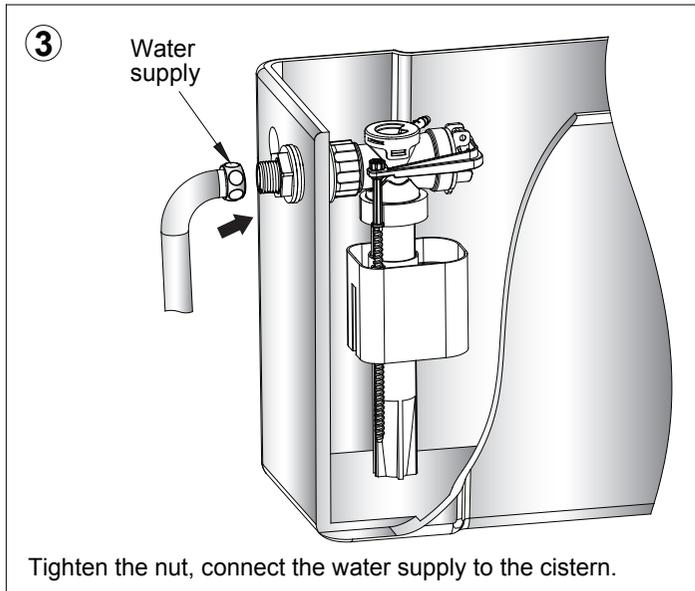

2: Filter cleaning (Please clean periodically)

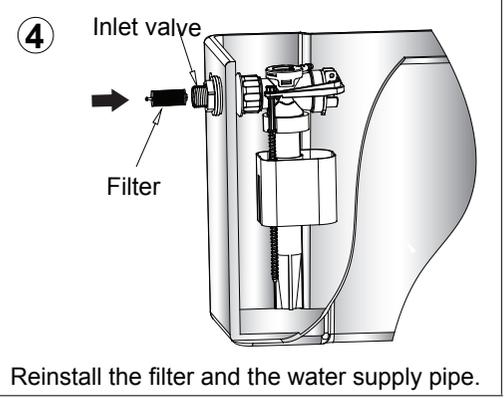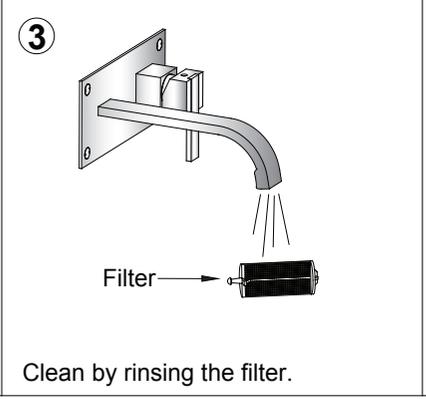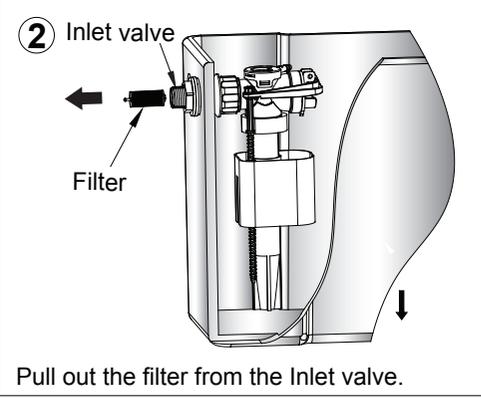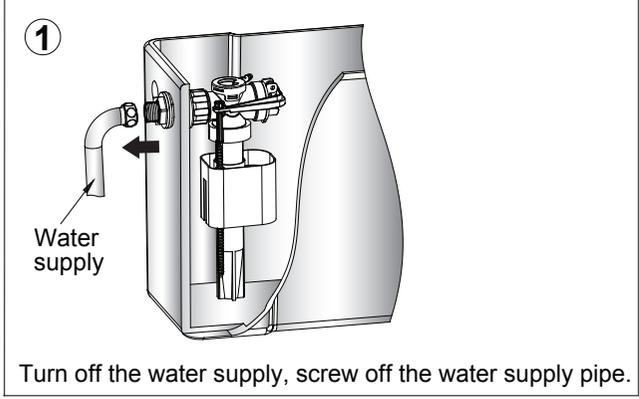


3: Inlet Valve trouble shooting


| Problem | Reason | Solution |
|---------------------------|---|--|
| Incorrect water level | Incorrect adjustment. | Adjust the Water level correctly as per diagram above. |
| Inlet Valve does not work | Water supply is closed. | Open the water supply |
| | The filter is blocked. | Clean the filter. |
| | The Stop Float has been over adjusted beyond its operational range. | Adjust the adjustment rod. |
| Leakage | The Inlet Valve fixing nut has not been tightened. | Tighten the nut. |

Flush Valve Installation And Problem Solving

1: Flush Valve installation

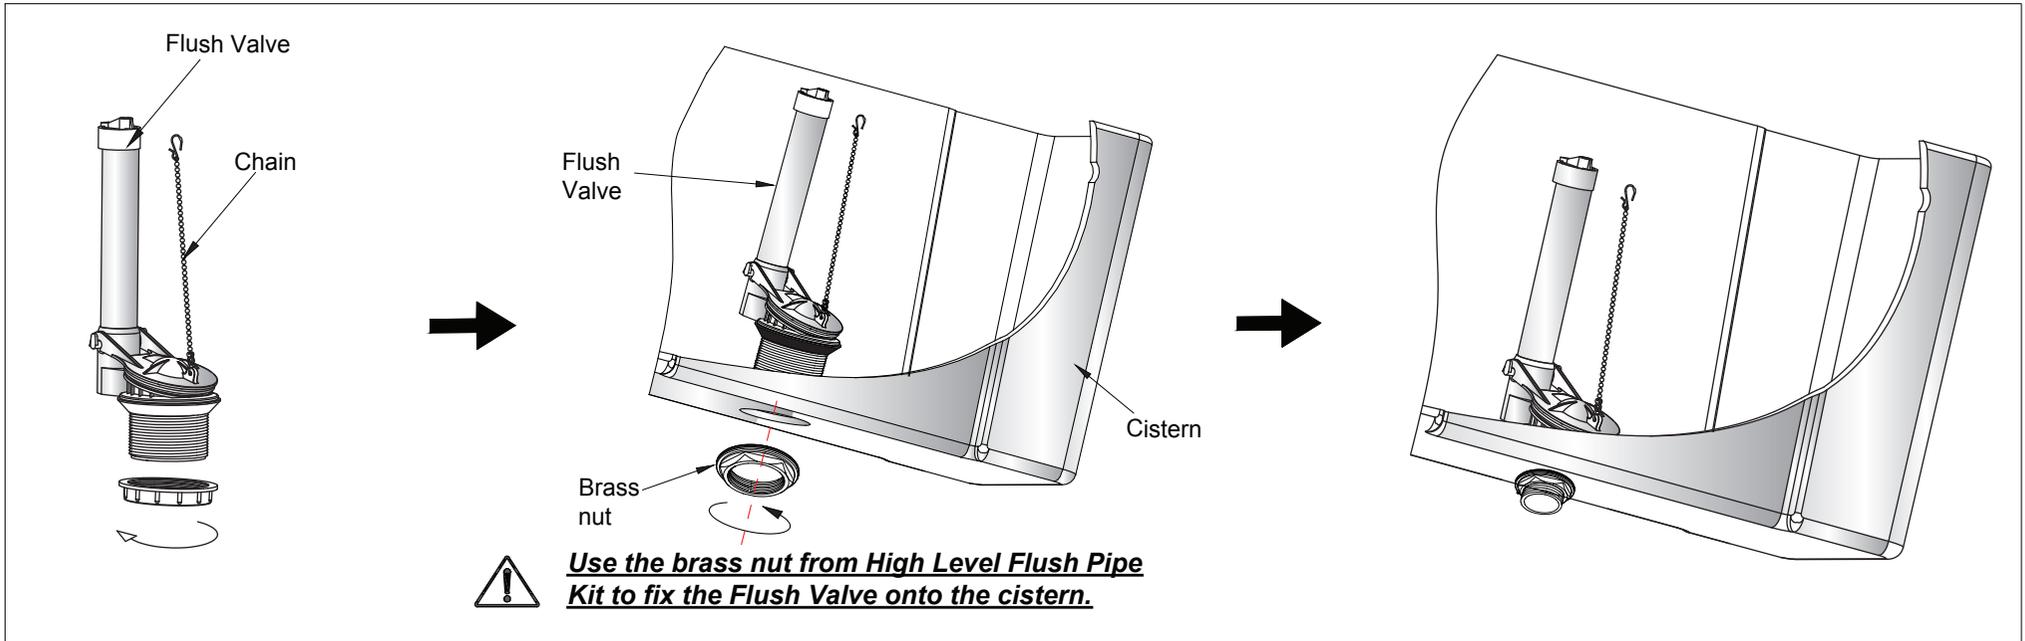

2: Flush Valve Cleaning

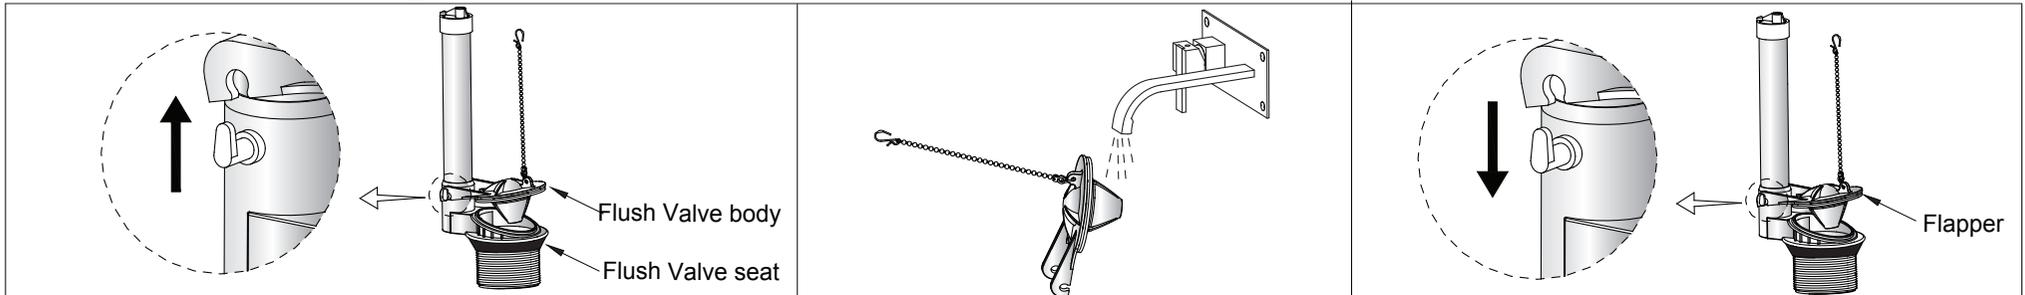


3: Flush Valve trouble shooting

| Problem | Reason | Solution |
|--|---|--|
| Leakage | <ol style="list-style-type: none"> 1. Incorrect installation. 2. Flush valve body is stuck. 3. Chain is too short. 4. The flapper doesn't adhere to the flush valve seat. | <ol style="list-style-type: none"> 1. Install again according to the correct installation procedure. 2. Unpick and wash flush valve body. 3. Readjust the length of chain. 4. Install again. |
| No flush, low flush or half flush volume | Chain is too long. | Readjust the length of chain. |

Flush Lever Installation

1: Install Flush Lever Onto Cistern

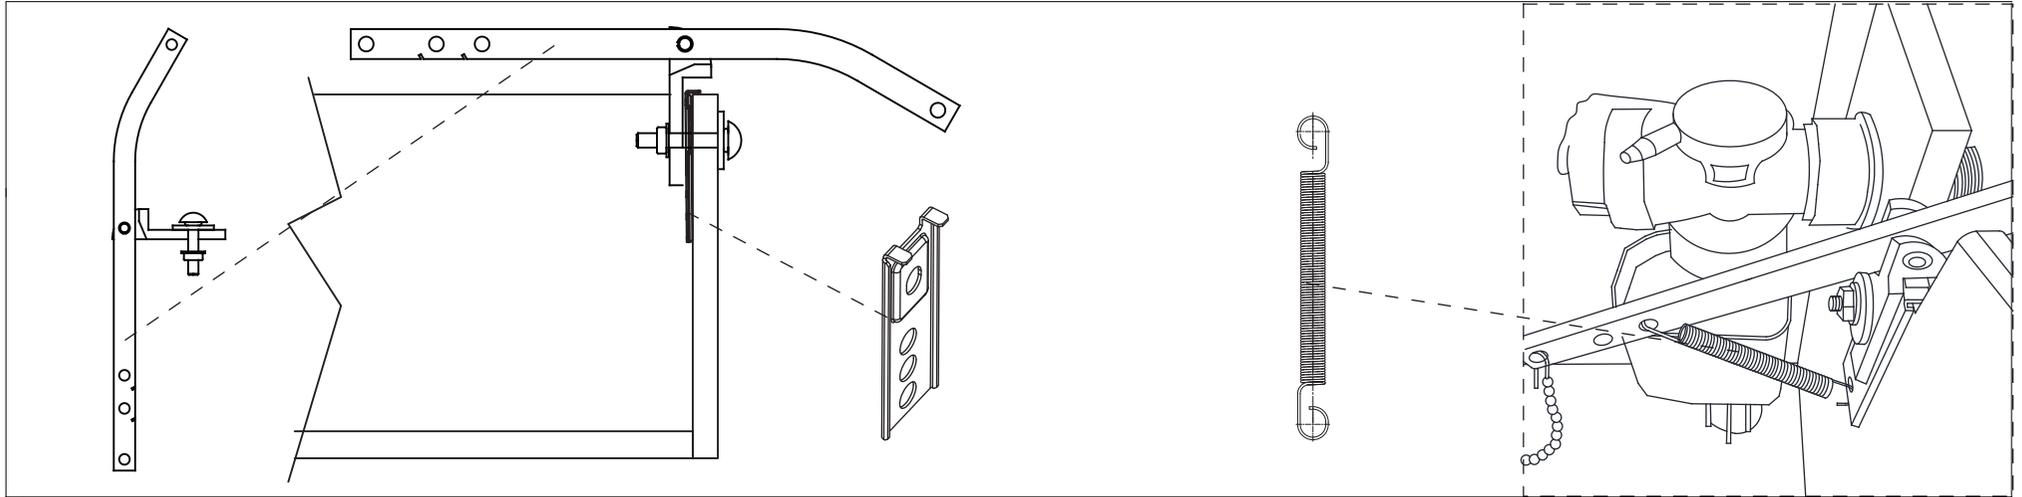

2: Connect Flush valve With Flush Lever

