


CLASSIQUE

Hinged Inline Bath Screen

Burlington®

PRODUCT CODES:

CQBSILC0850
CQBSILGC0850
CQBSILLC0850

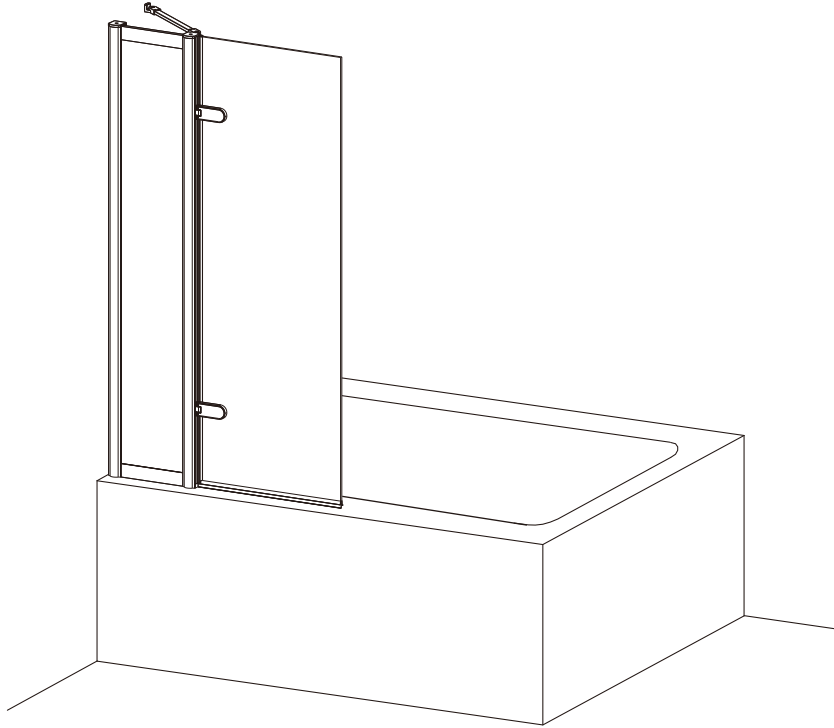

CQ1909PRFNx



CQ1850PRFNx

Optional profile finial (not supplied with bath screen)

1. Pre-Installation Checklist

☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Bathtub **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

⚠ Safety Notes:

- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

2. Unpacking & Components

Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

Missing/Damaged Parts?

Contact Bathroom Brands immediately: ☎0345 873 8840.

3. Step-by-Step Installation

A. Frame Assembly

1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×4 total).
- Cover ends with profile caps if any.

B. Door Installation

3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

C. Final Checks

5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

4. Care & Maintenance

- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.

Ensure seals are flush to prevent leaks.


ORIENTATION

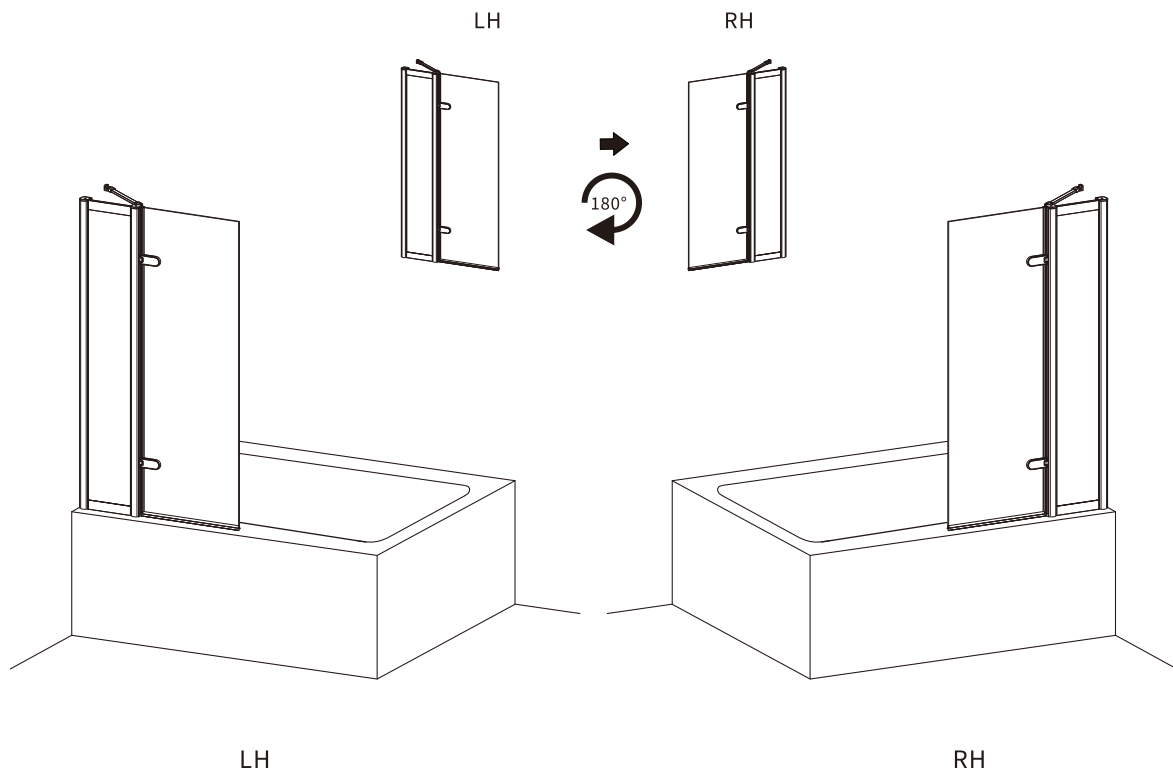

This product is reversible for left or right hand opening.
Please follow the diagram, and detail below for your choice of installation.

Tools Required (not supplied):

Spirit Level




Torque Screw Driver



Pencil



Snips



Drill



6mm Drill Bit



Silicone



Measuring Tape




Knife




COMPONENTS

Burlington®

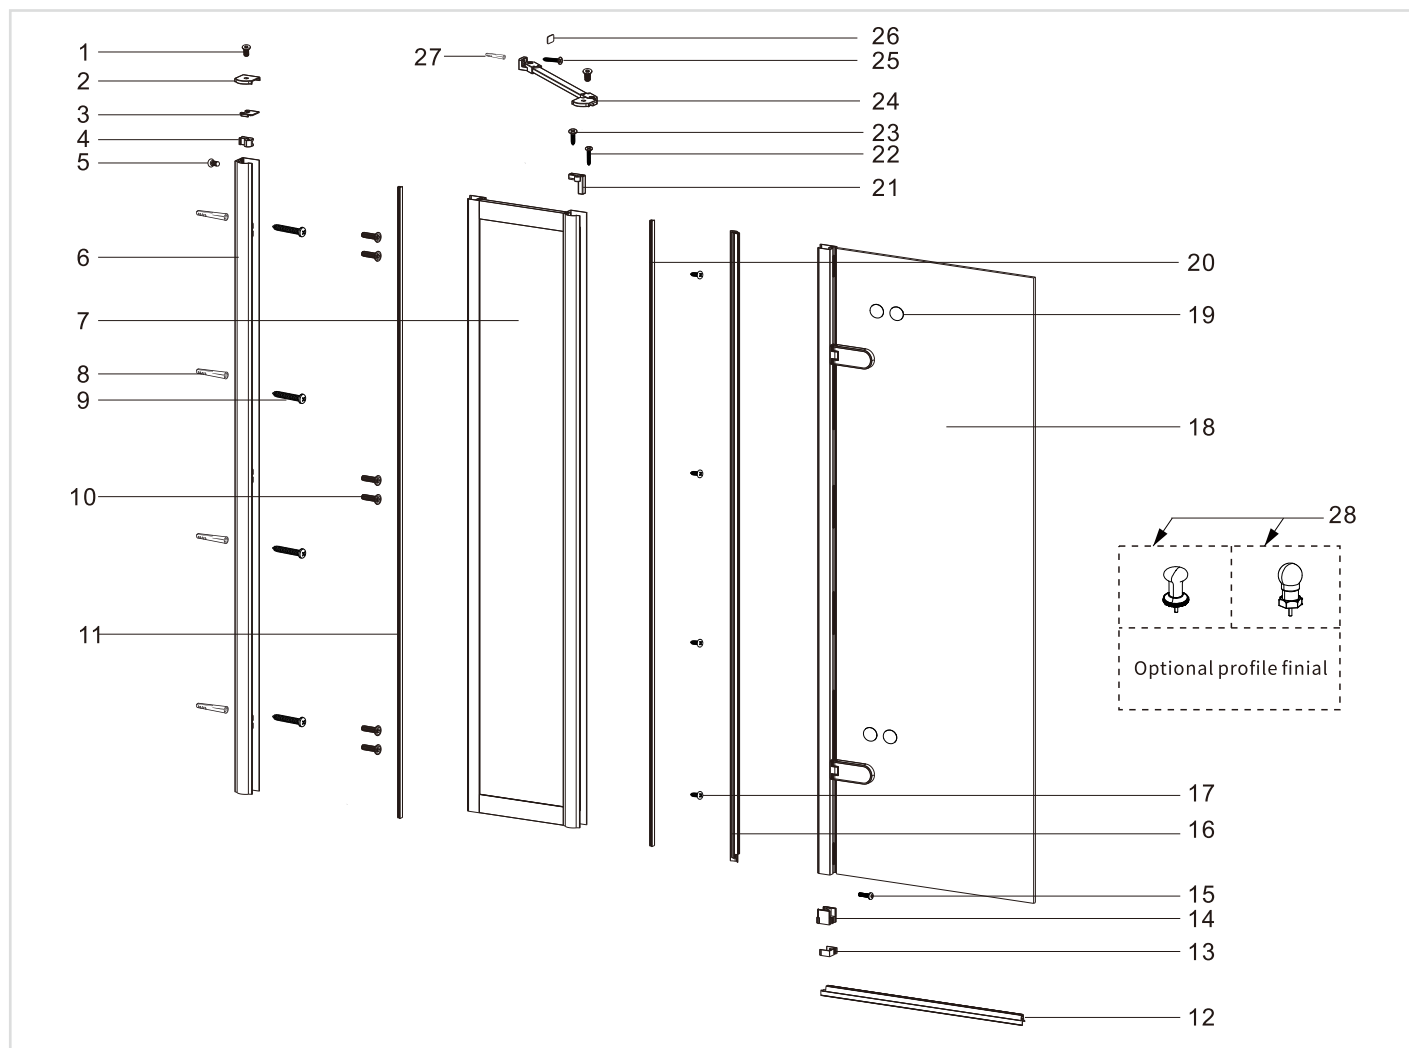


1 M5*14mm Screw  x2	2 Wall Profile Cap  L x1 R x1	3 Adjustment Profile Cap  x1	4 Fixing Part Of Profile Cap  x1
5 M4*12mm Screw  x1	6 Wall Profile  x1	7 Fixed Panel  x1	8 Wall Plug  x4
9 ST4*50mm Screw  x4	10 M5*30mm Screw  x6	11 Profile Cover  L=1500mm x1	12 Bottom Seal  x1
13 Cover Cap  x1	14 Gasket  x1	15 M4*10mm Screw  x1	16 Vertical Door Seal  x1
17 ST4*8mm Screw  x4	18 Moving Door  x1	19 Hinge Cap  x4	20 Profile Cover  L=1487mm x1
21 Fixing Part Of Bracing Bar  Lx1 Rx1	22 ST4*50mm Screw  x1	23 ST4X30mm Screw  x1	24 Bracing Bar  x1
25 ST5*40mm Screw  x1	26 Screw Cap Of Bracing Bar  x1	27 Wall Plug  x1	28 Optional Profile Finial  x2
29 Allen Key  4mm 3mm 2.5mm			

TOP

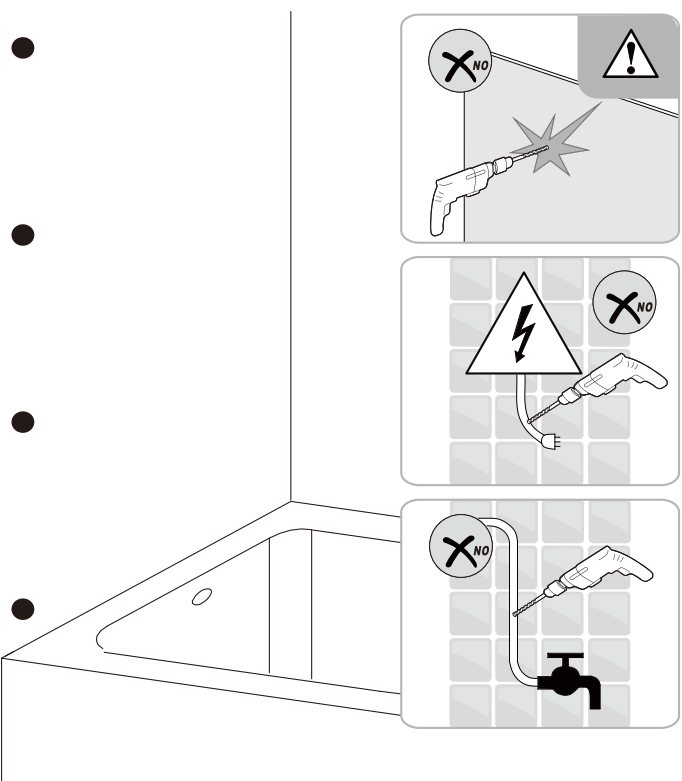
2

INSTALLATION

3

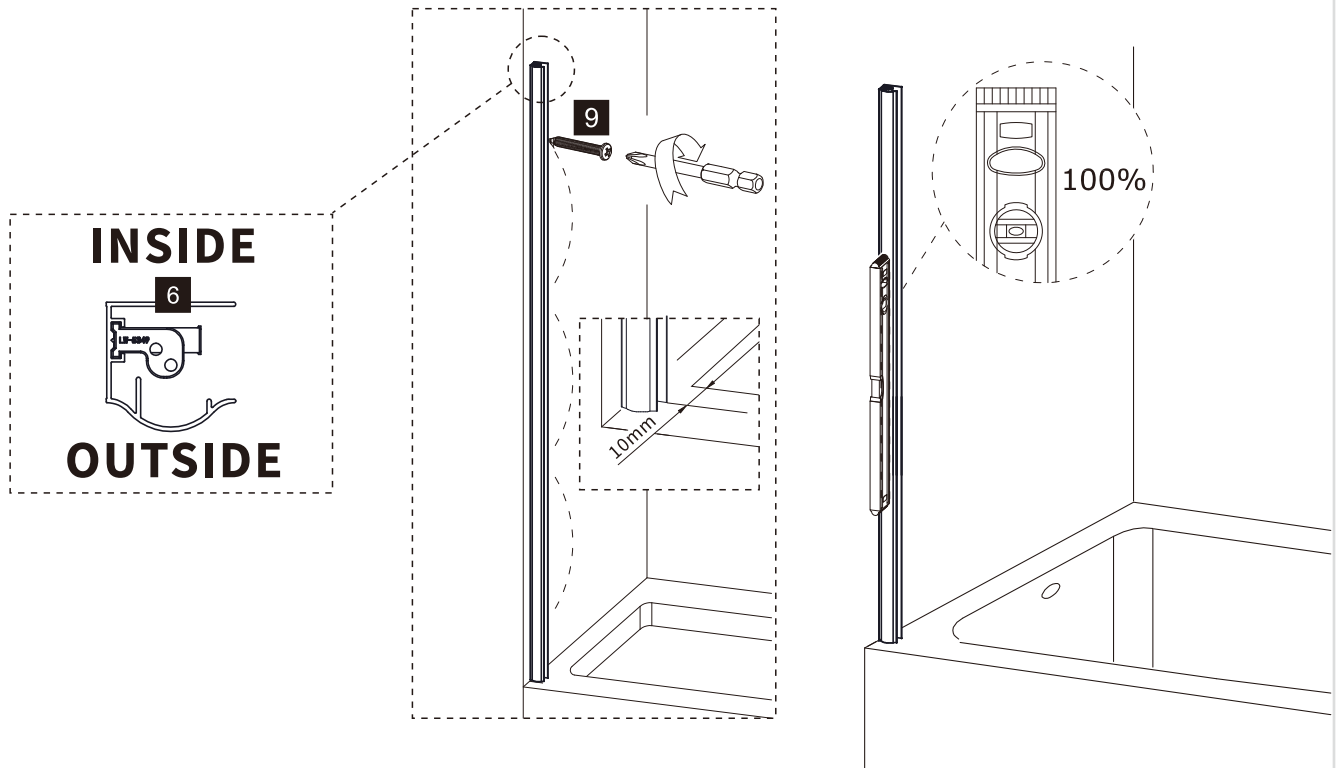


4

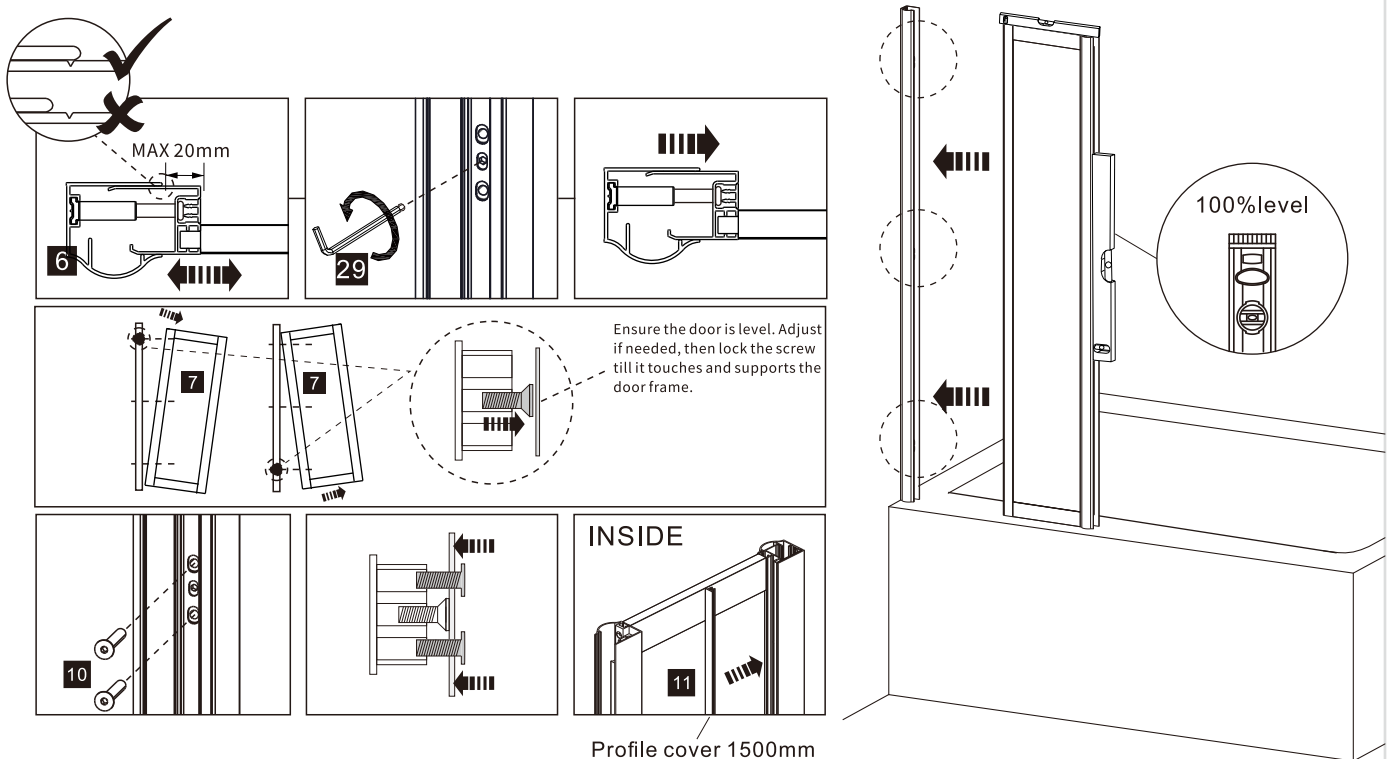



INSTALLATION

Burlington®

5

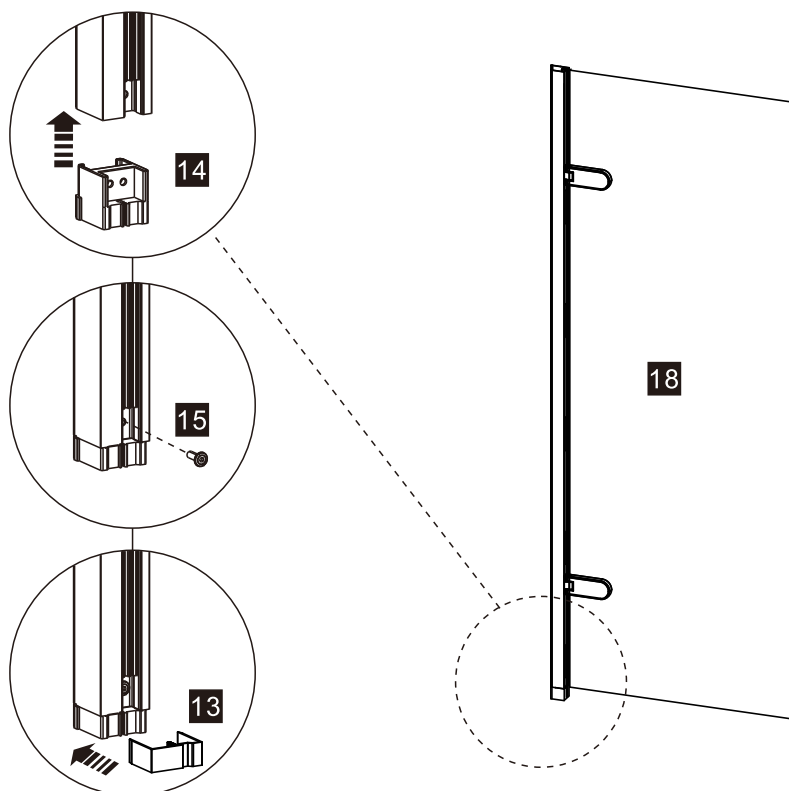


6

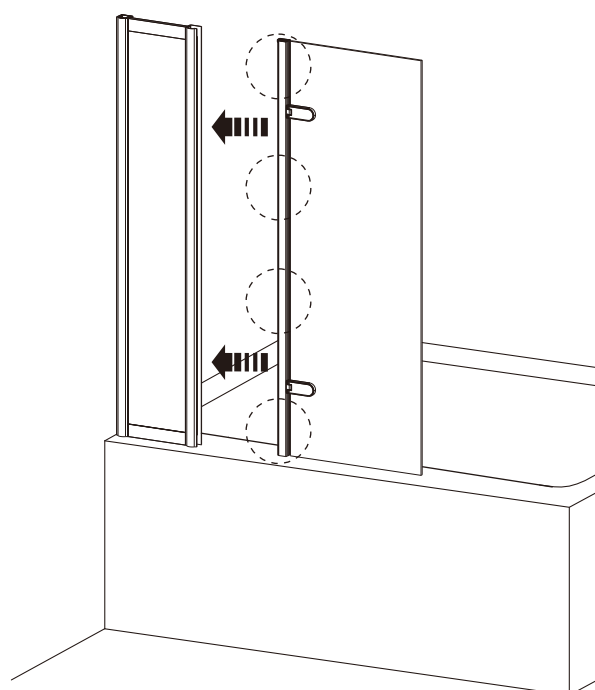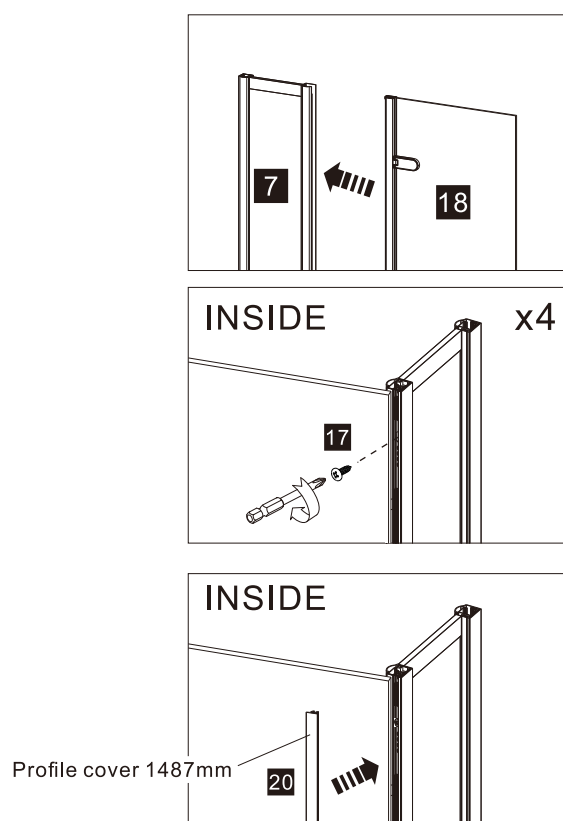


INSTALLATION

7


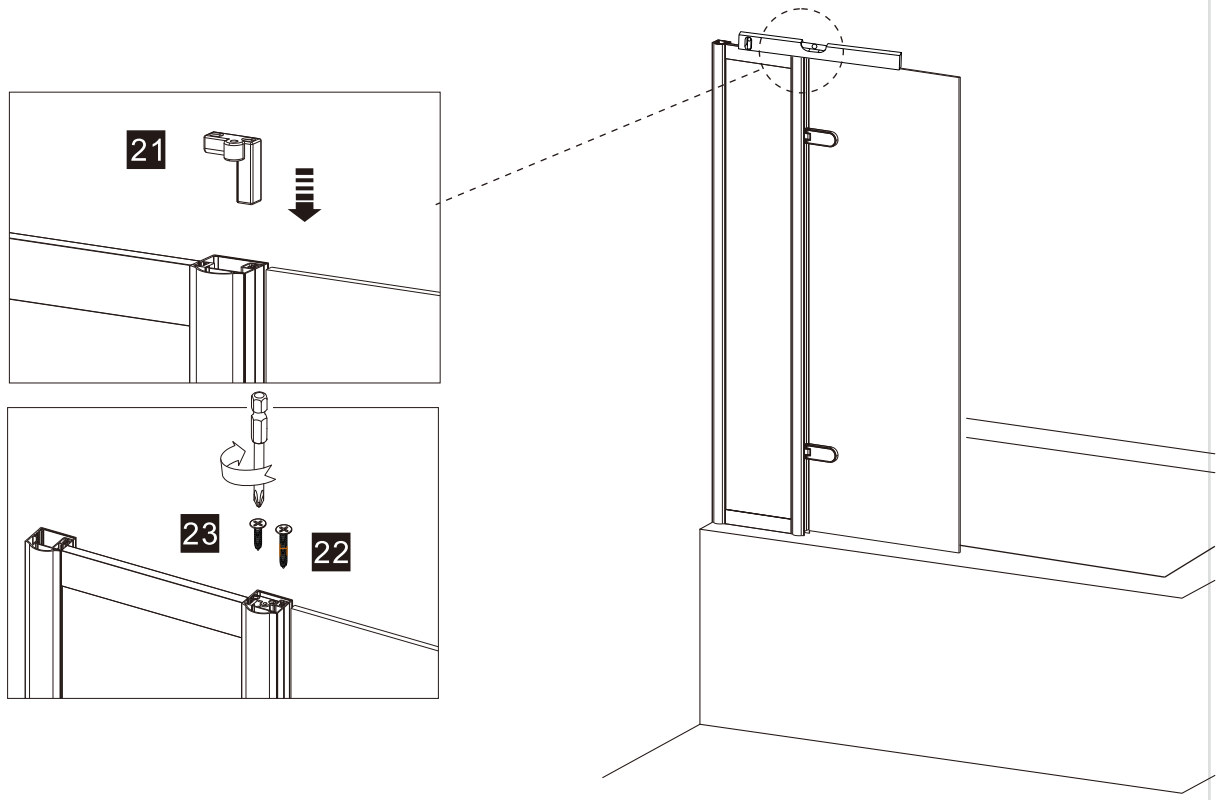


8

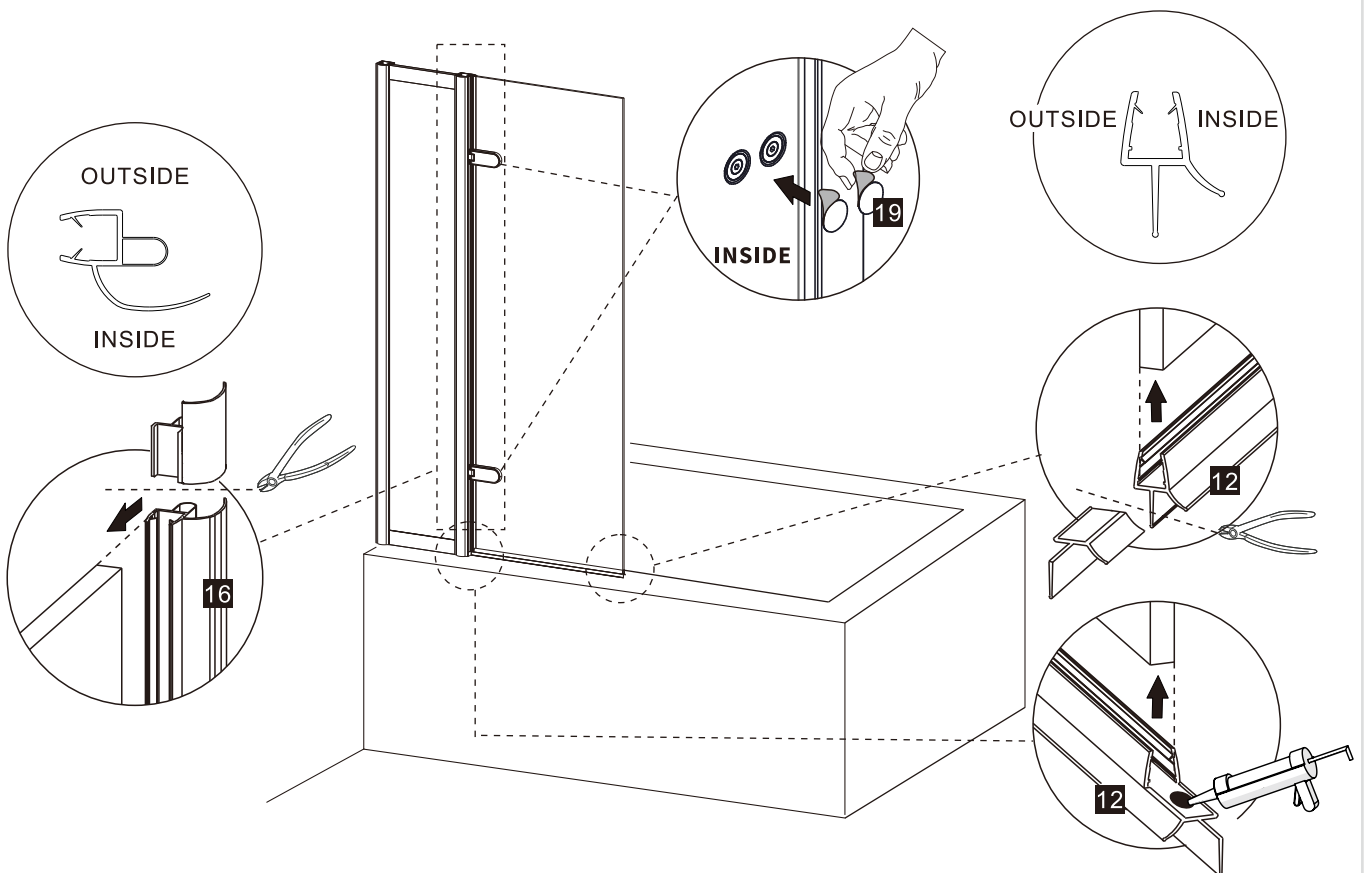


INSTALLATION

Burlington®

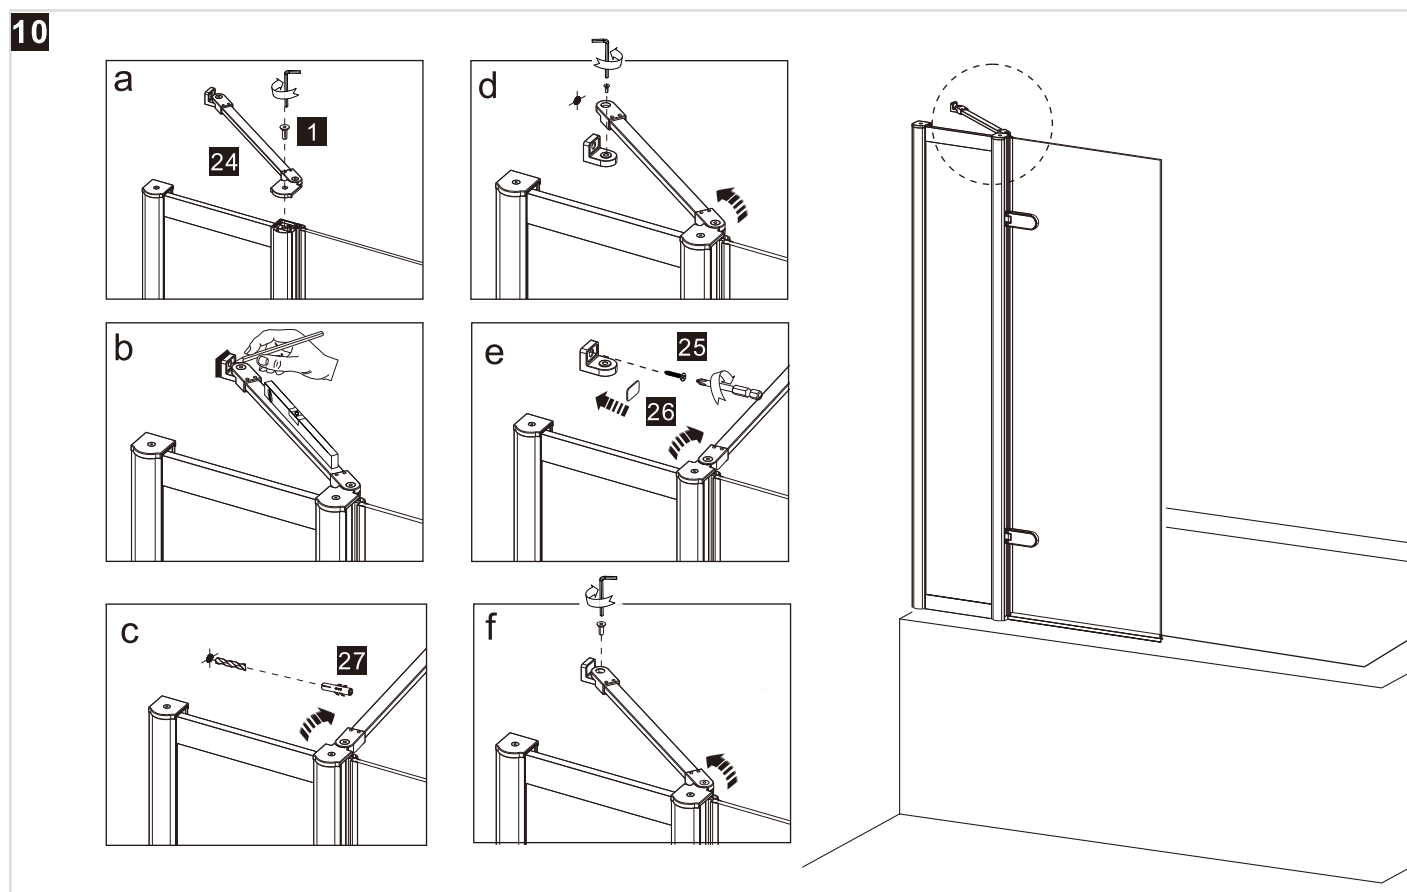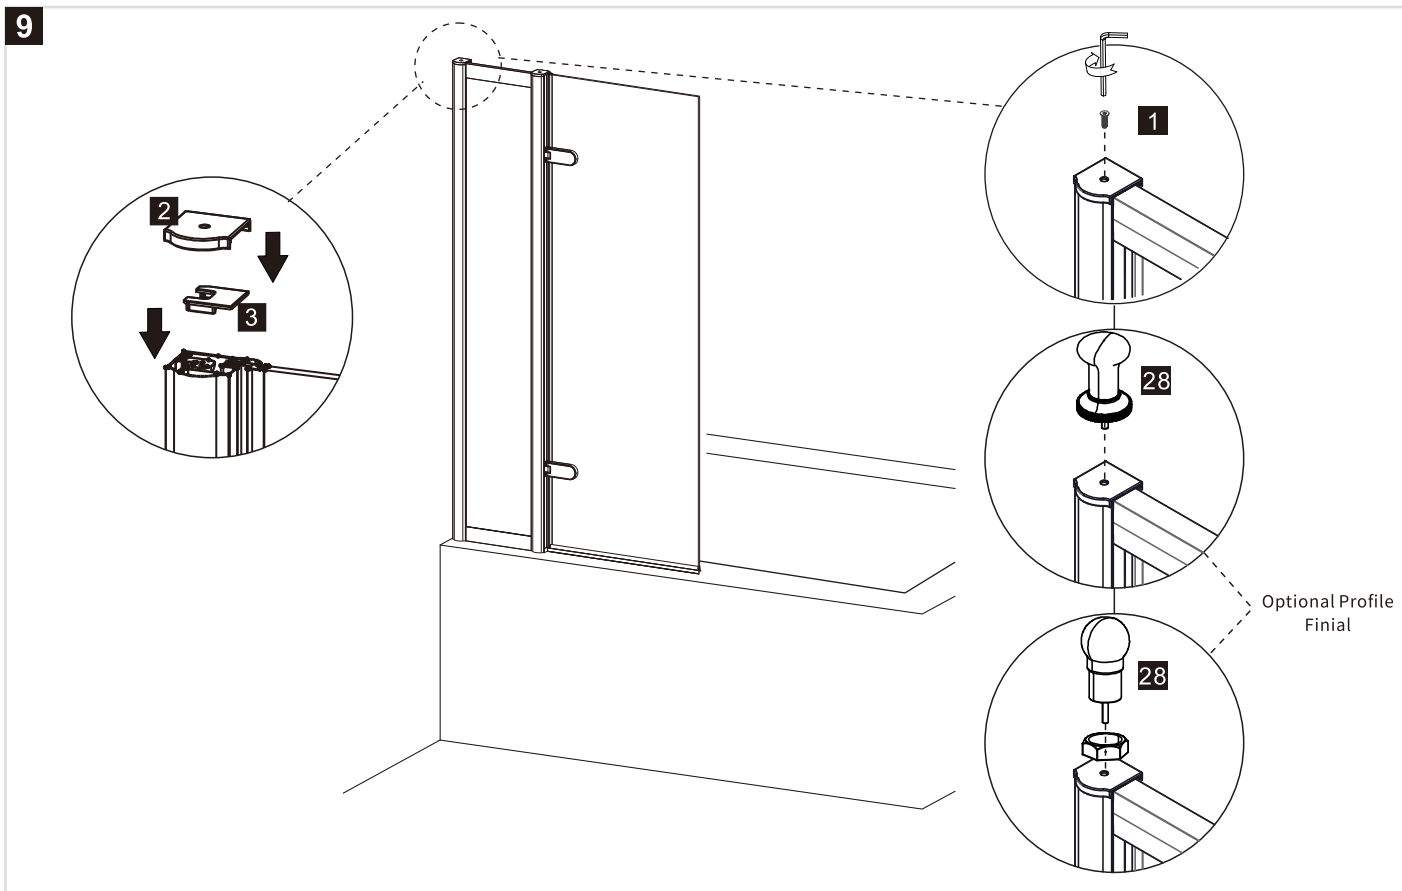


INSTALLATION

11

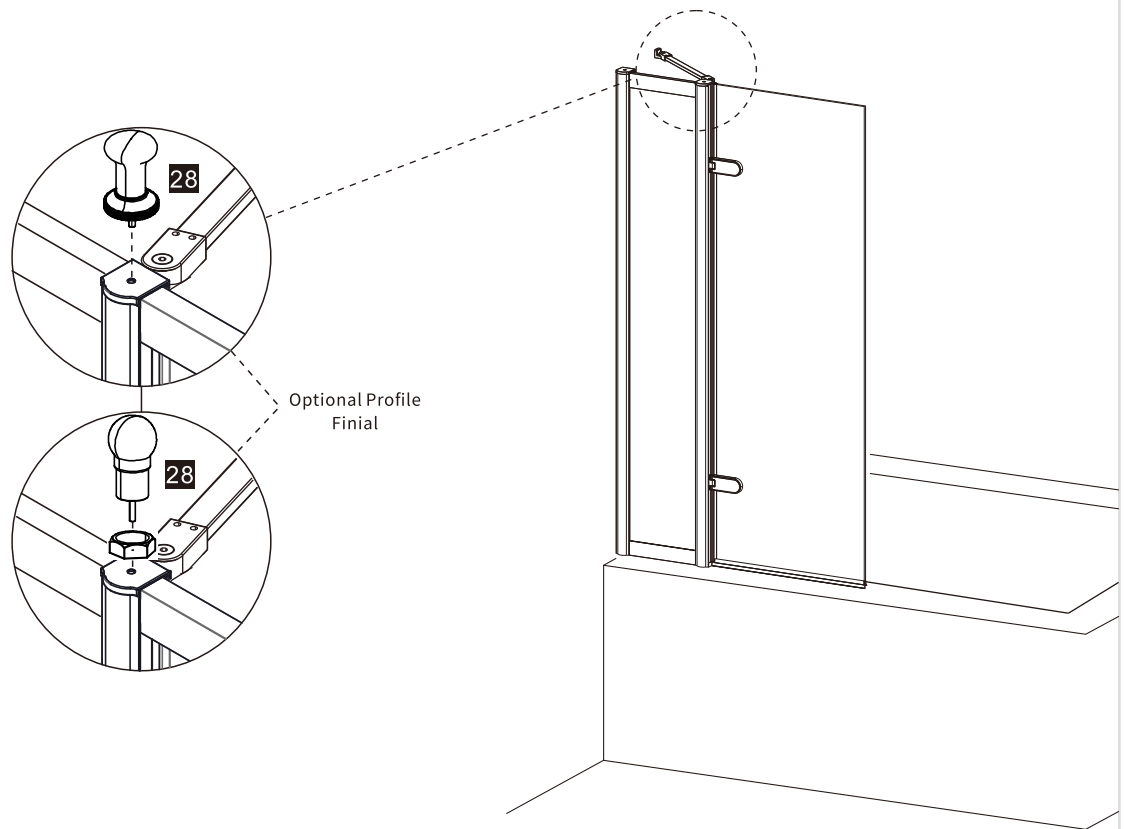

12

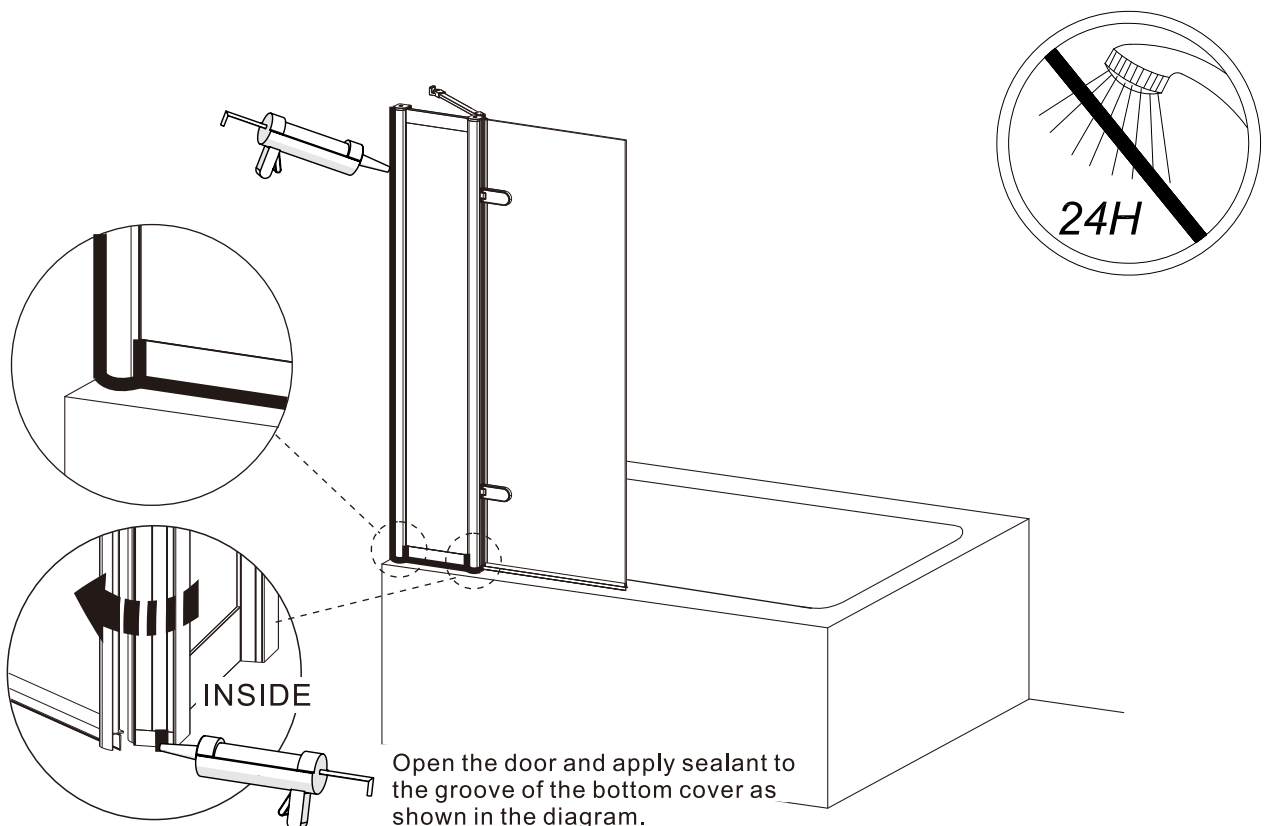

Burlington[®]

Burlington[®]

Part of the
Bathroom Brands Group

We reserve the right to make technical modifications without prior notice.

Burlington[®]

Lake View House
Rennie Drive, Dartford
Kent DA1 5FU
United Kingdom
0345 873 8840
www.crosswater.co.uk