

CLASSIQUE

Hinged Single Bath Screen


Burlington®

PRODUCT CODES:

CQBSSC0850

CQBSGC0850

CQBSLC0850

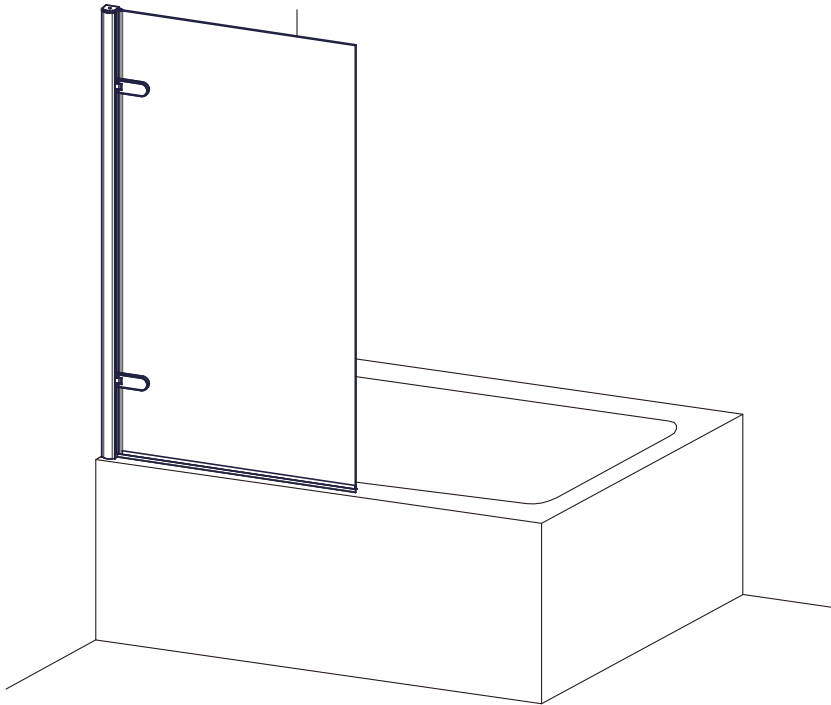

CQ1909PRFNx



CQ1850PRFNx

Optional profile finial (not supplied with shower doors)

1. Pre-Installation Checklist

☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Bathtub **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

⚠ Safety Notes:

- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

2. Unpacking & Components

Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

Missing/Damaged Parts?

Contact Bathroom Brands immediately: ☎0345 873 8840.

3. Step-by-Step Installation

A. Frame Assembly

1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×4 total).
- Cover ends with profile caps if any.

B. Door Installation

3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

C. Final Checks

5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

4. Care & Maintenance

- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.

Ensure seals are flush to prevent leaks.

ORIENTATION

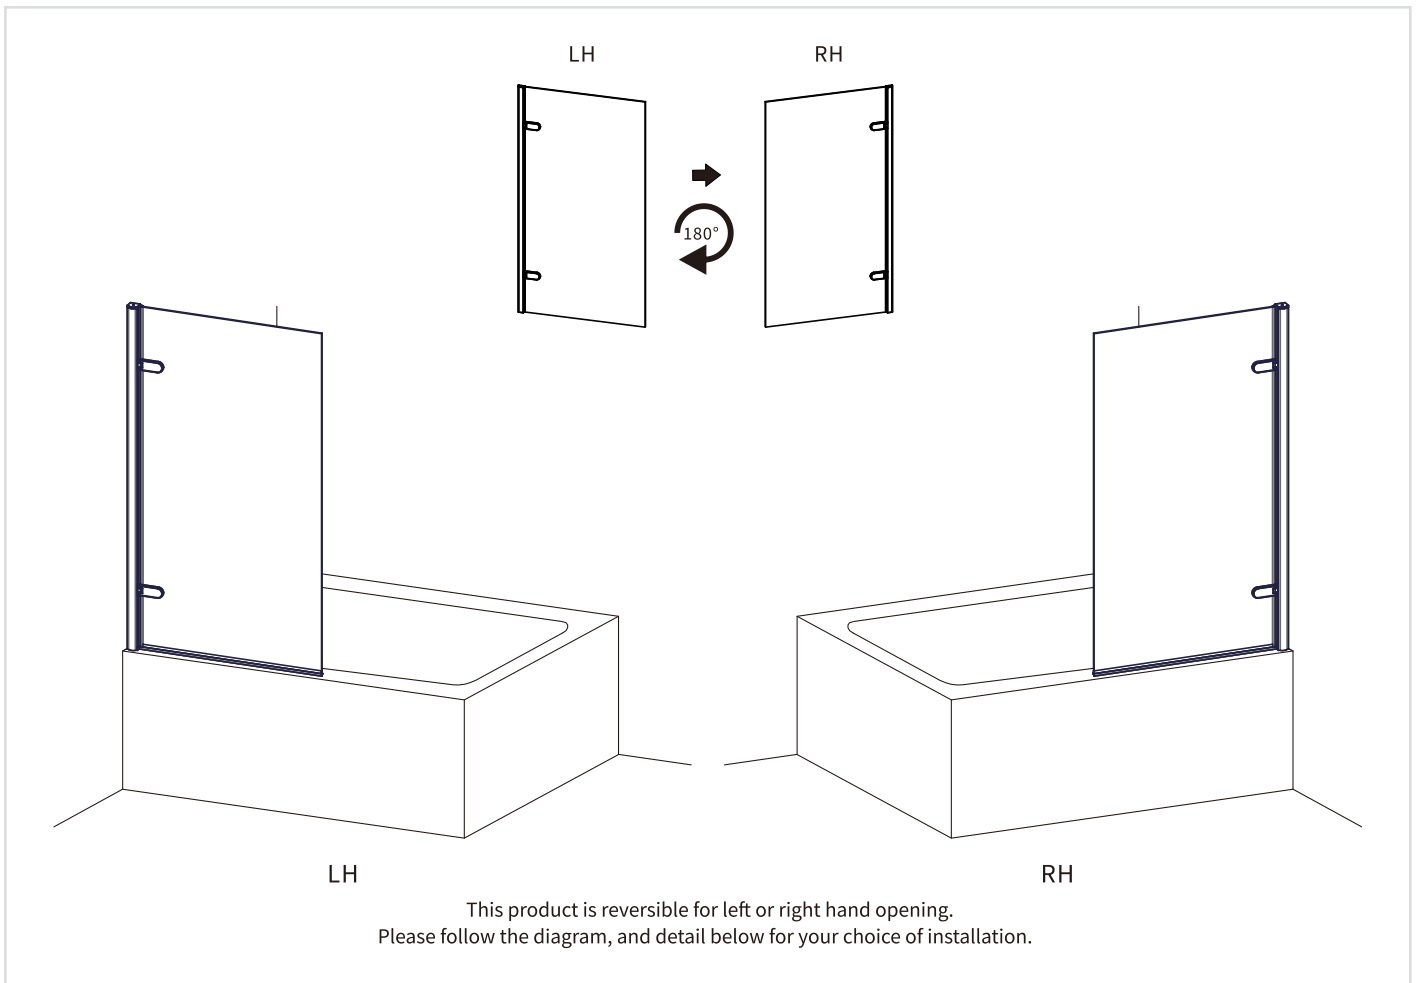



Tools Required (not supplied):

Spirit Level		Torque Screw Driver	
Pencil		Snips	
Drill		6mm Drill Bit	
Silicone		Measuring Tape	
Knife			

COMPONENTS



Burlington®

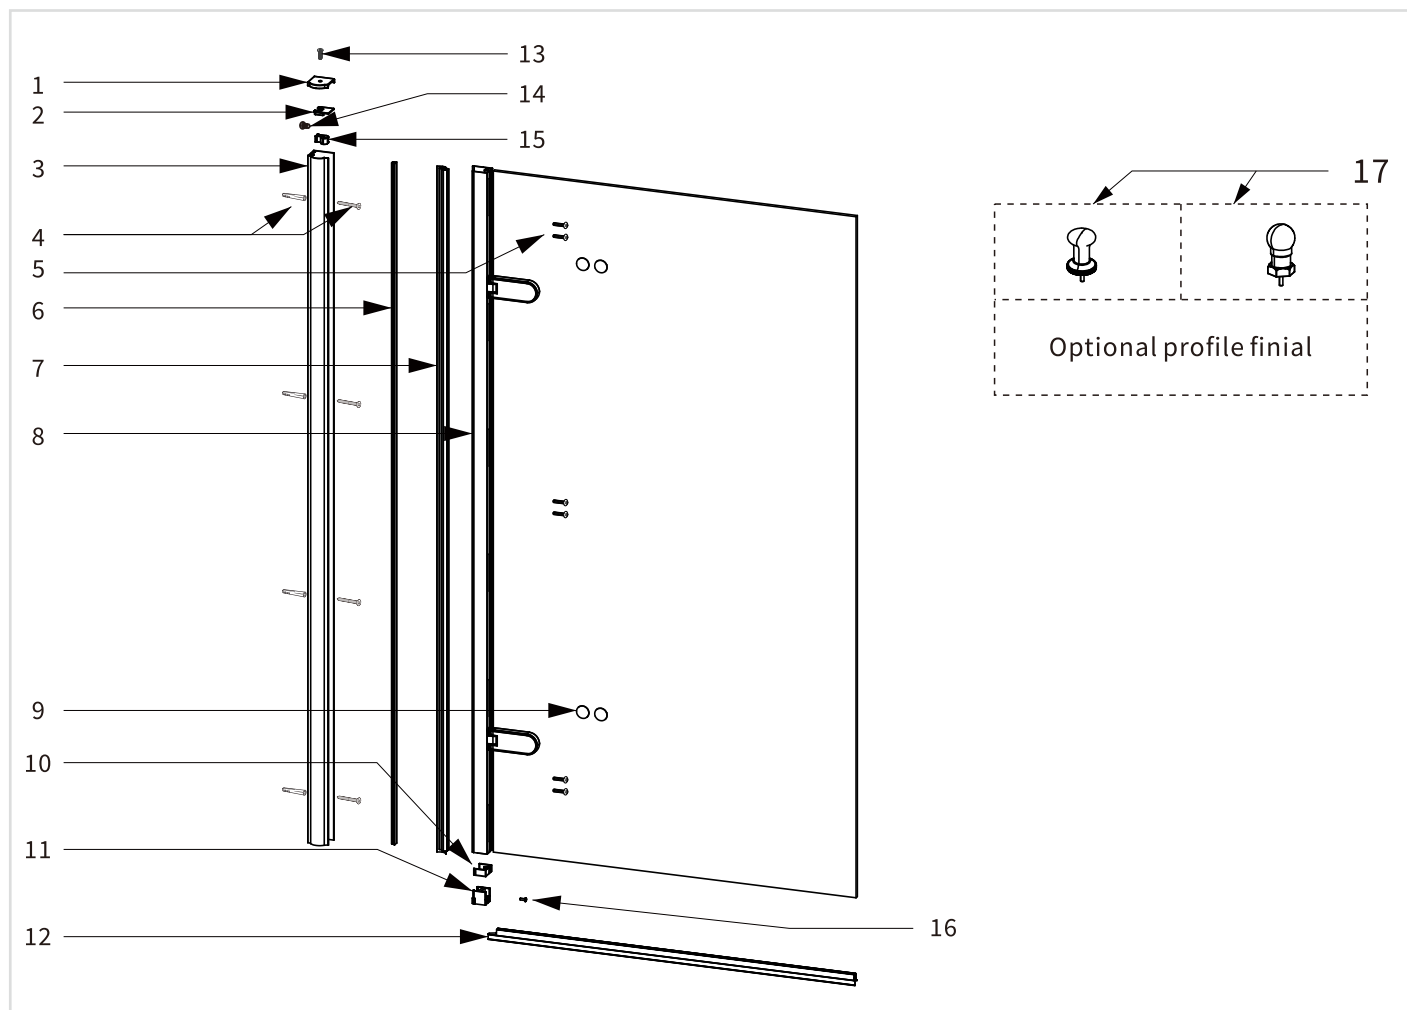



1	 Wall profile cap L x1 R x1	2	 Adjustment profile cap x1	3	 Wall profile x1	4	 Wall Plug and ST4x50mm Screw x4
5	 M5*30 Screw x6	6	 Profile Cover x1	7	 Vertical Door Seal x1	8	 Door x1
9	 Hinge cap x4	10	 Cover cap x1	11	 Gasket x1	12	 Bottom Seal x1
13	 M5*14 Screw x1	14	 M4*12mm Screw x1	15	 Fixing part of profile cap x1	16	 M4*10mm Screw x1
17	 Optional profile finial x1	18	 4mm 3mm 2.5mm Allen Key				

INSTALLATION





1

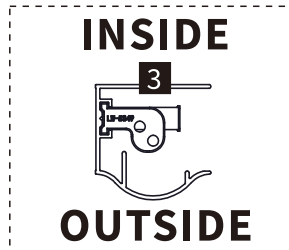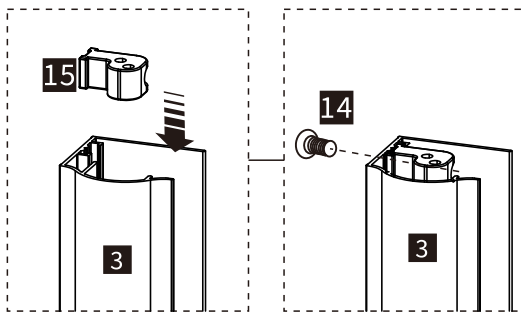

Product	X(mm)
850mm Bath Screen	850-870

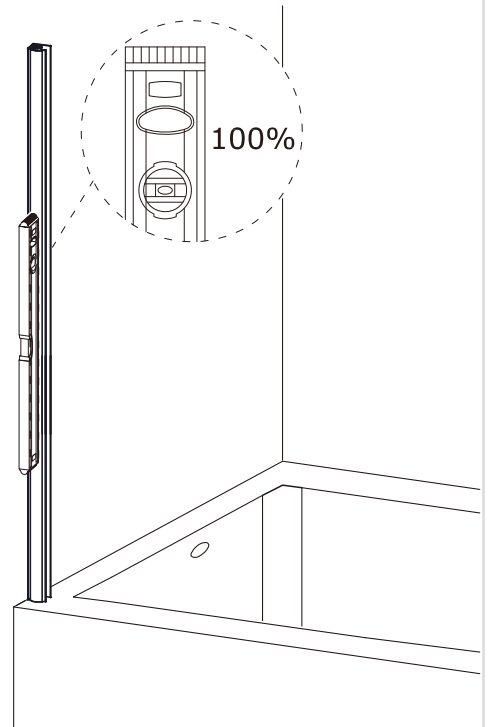
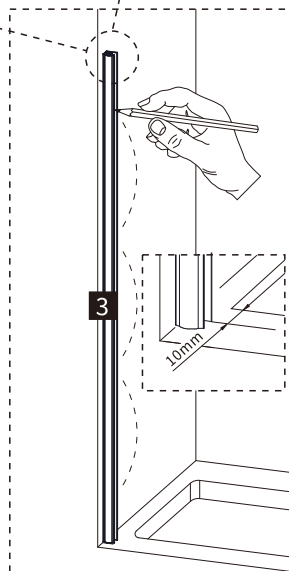


2

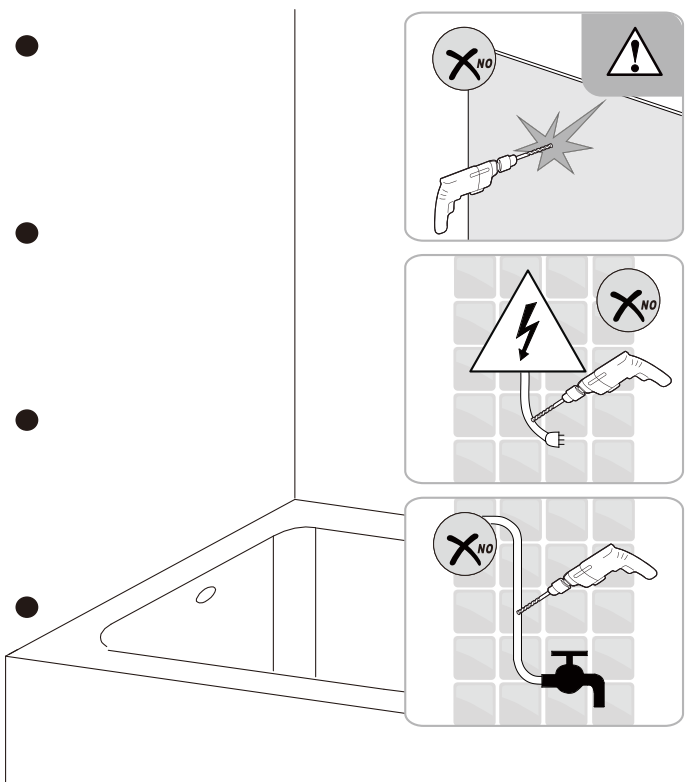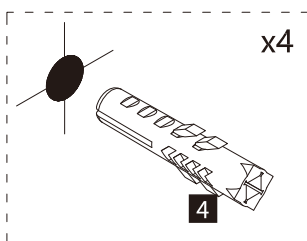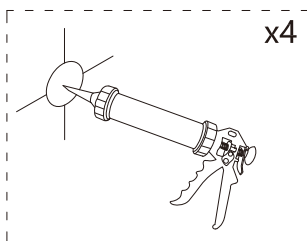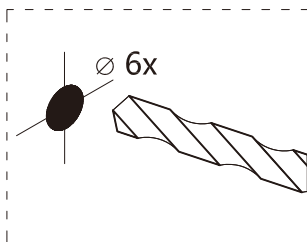



INSTALLATION

Burlington®

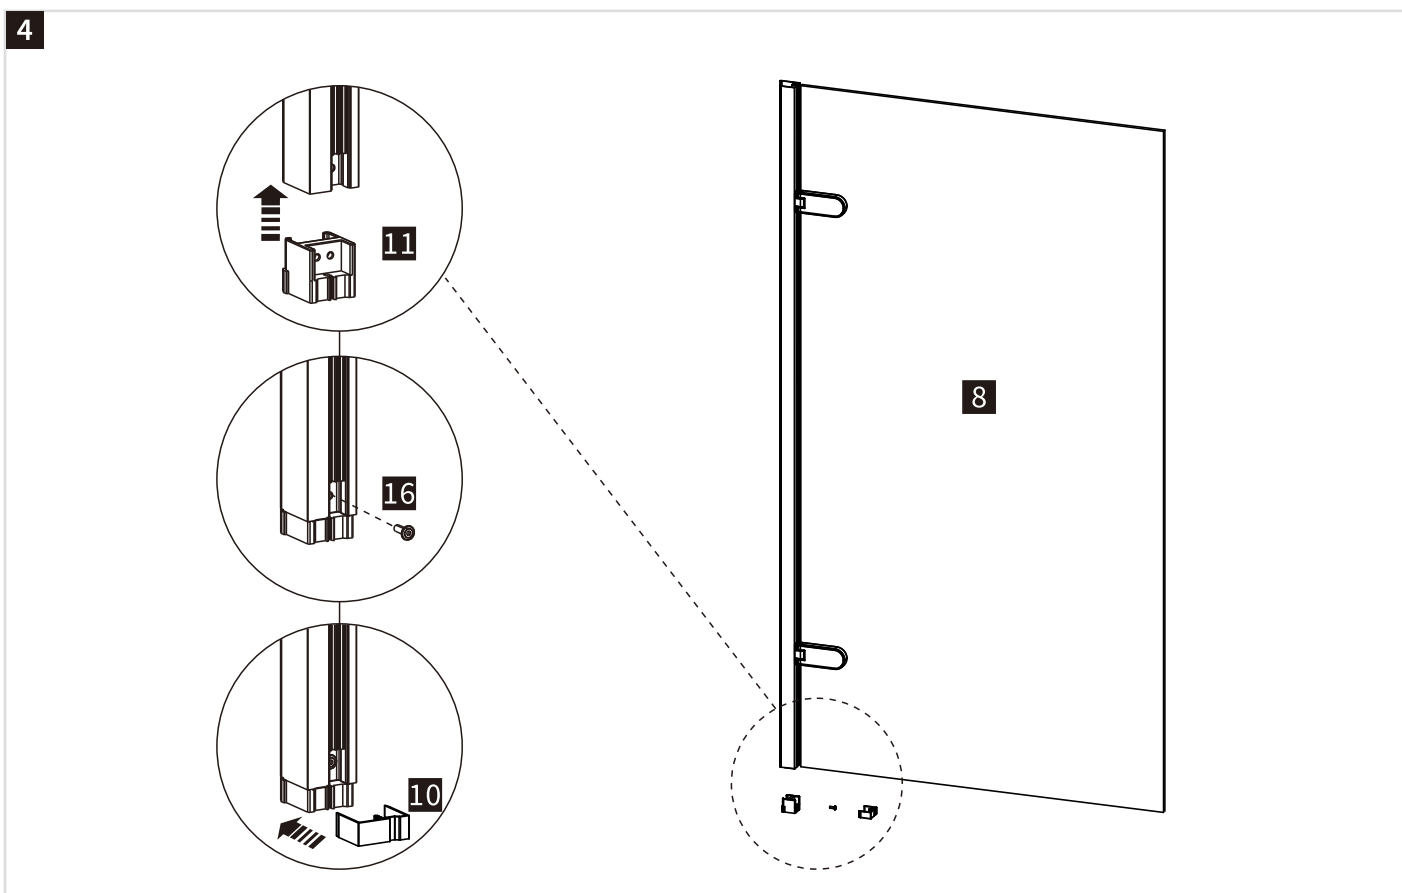
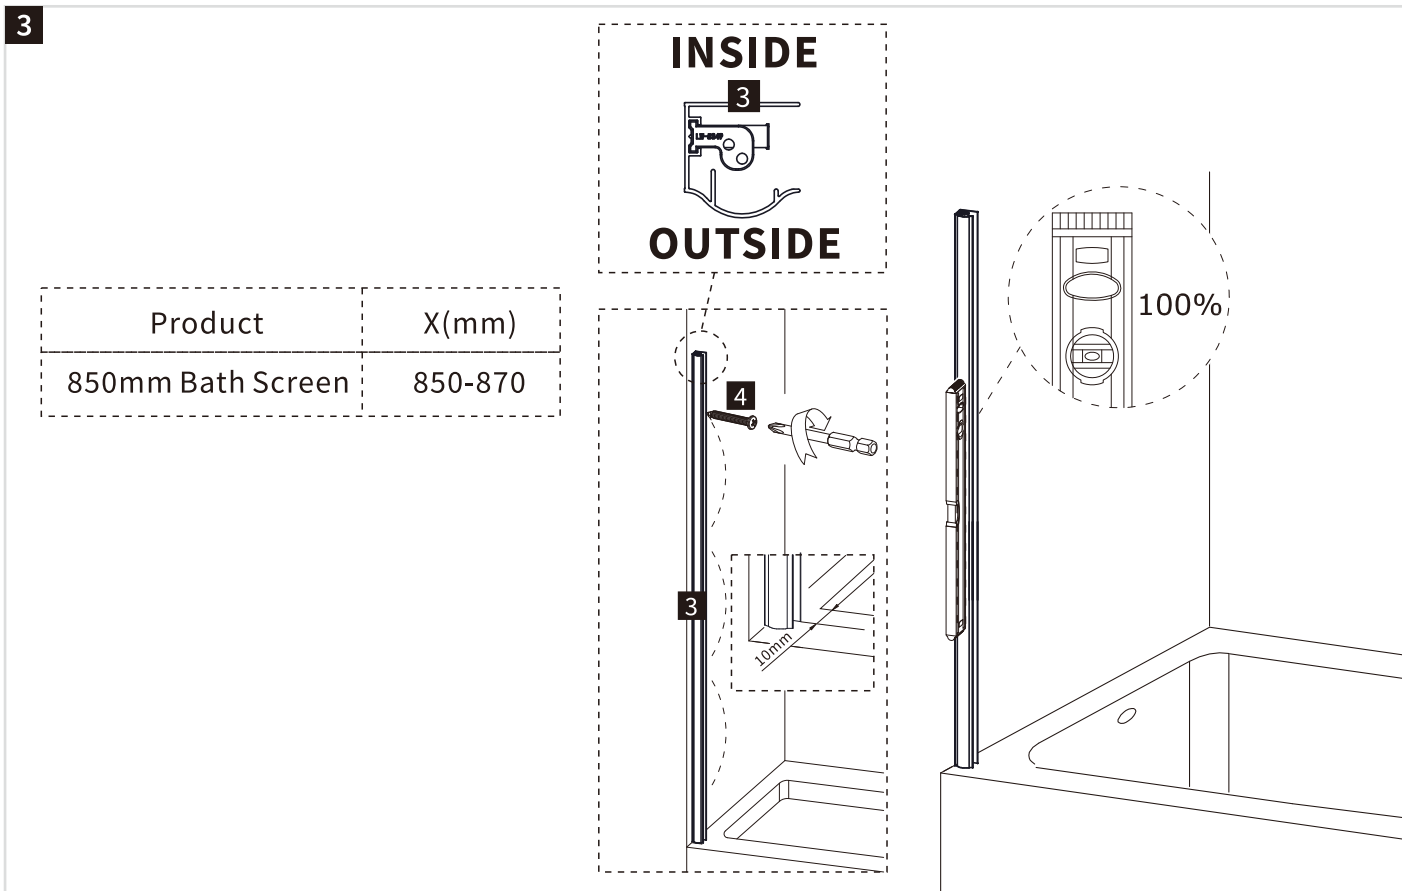



INSTALLATION

Burlington®

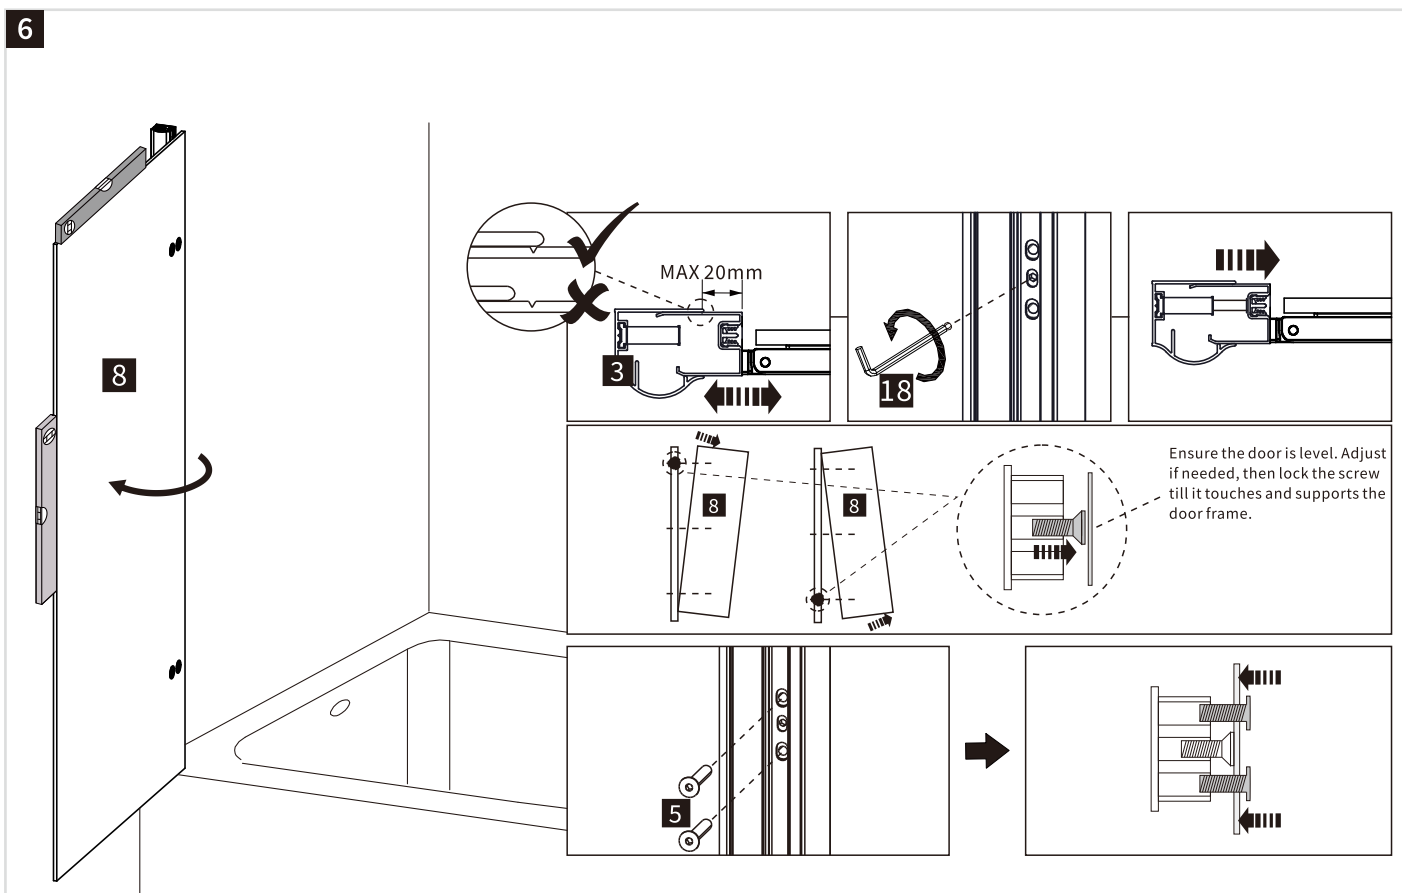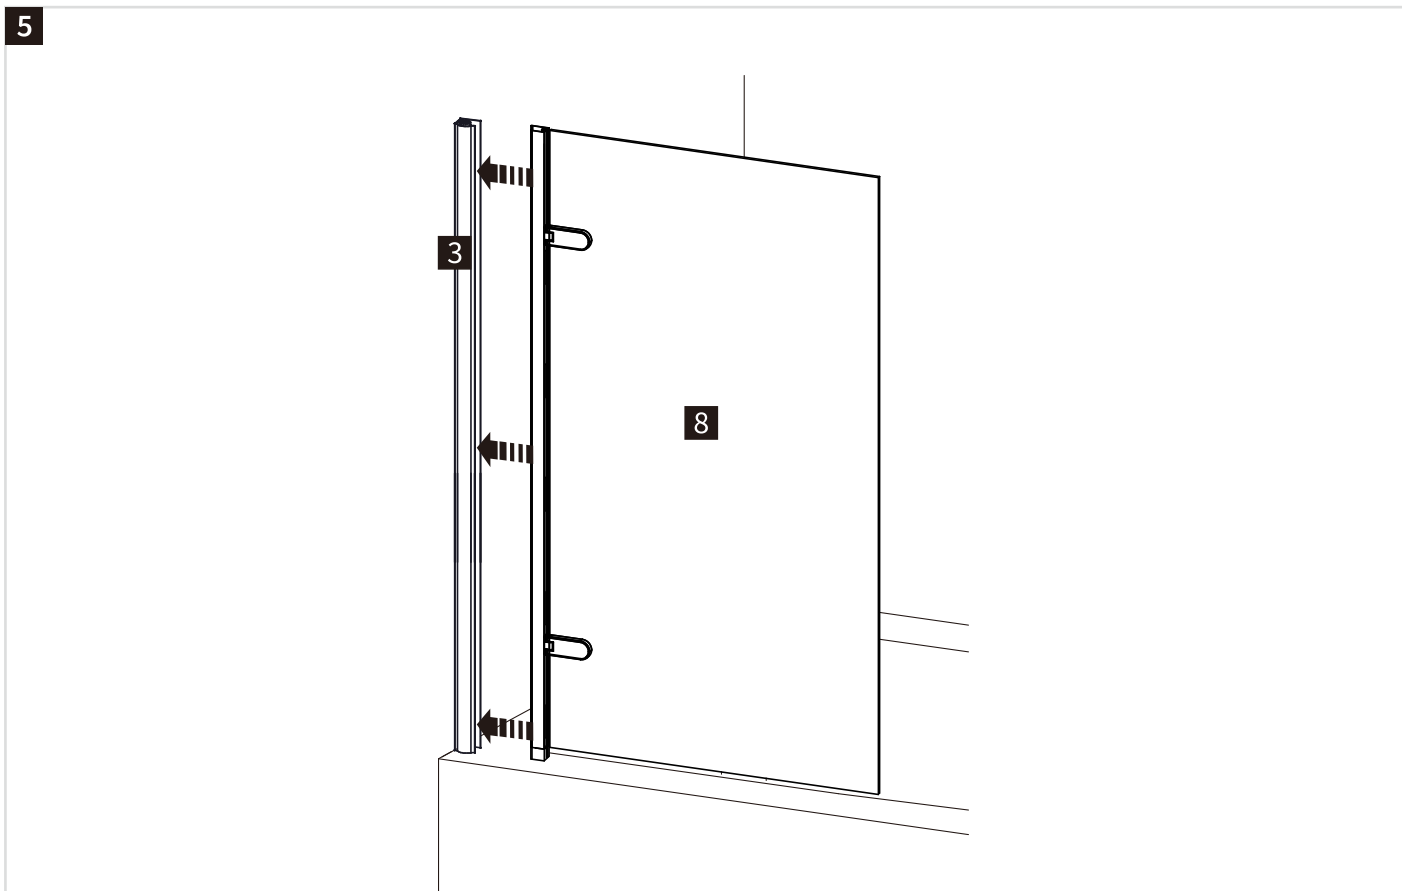

INSTALLATION

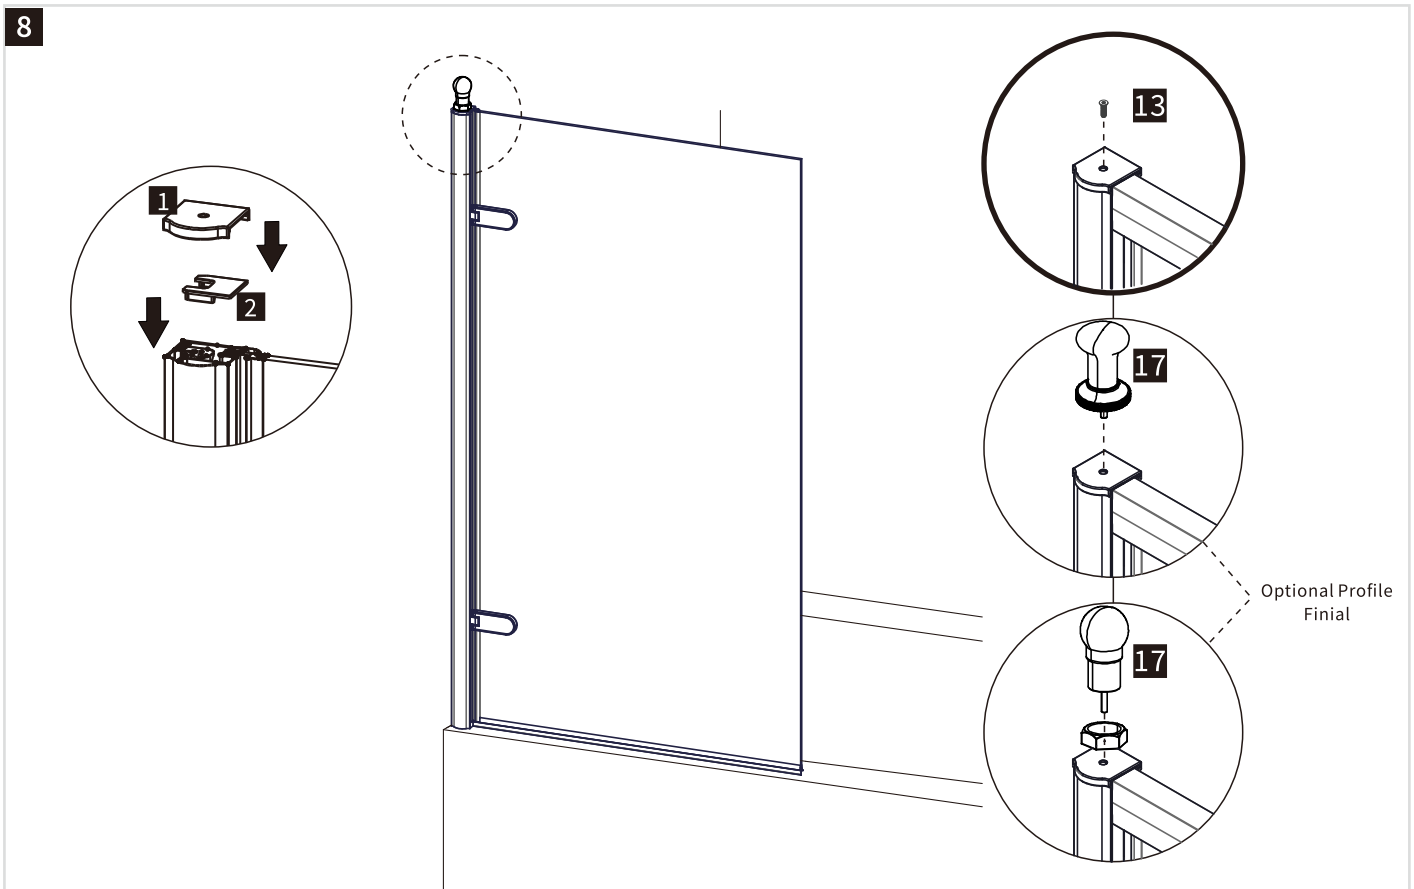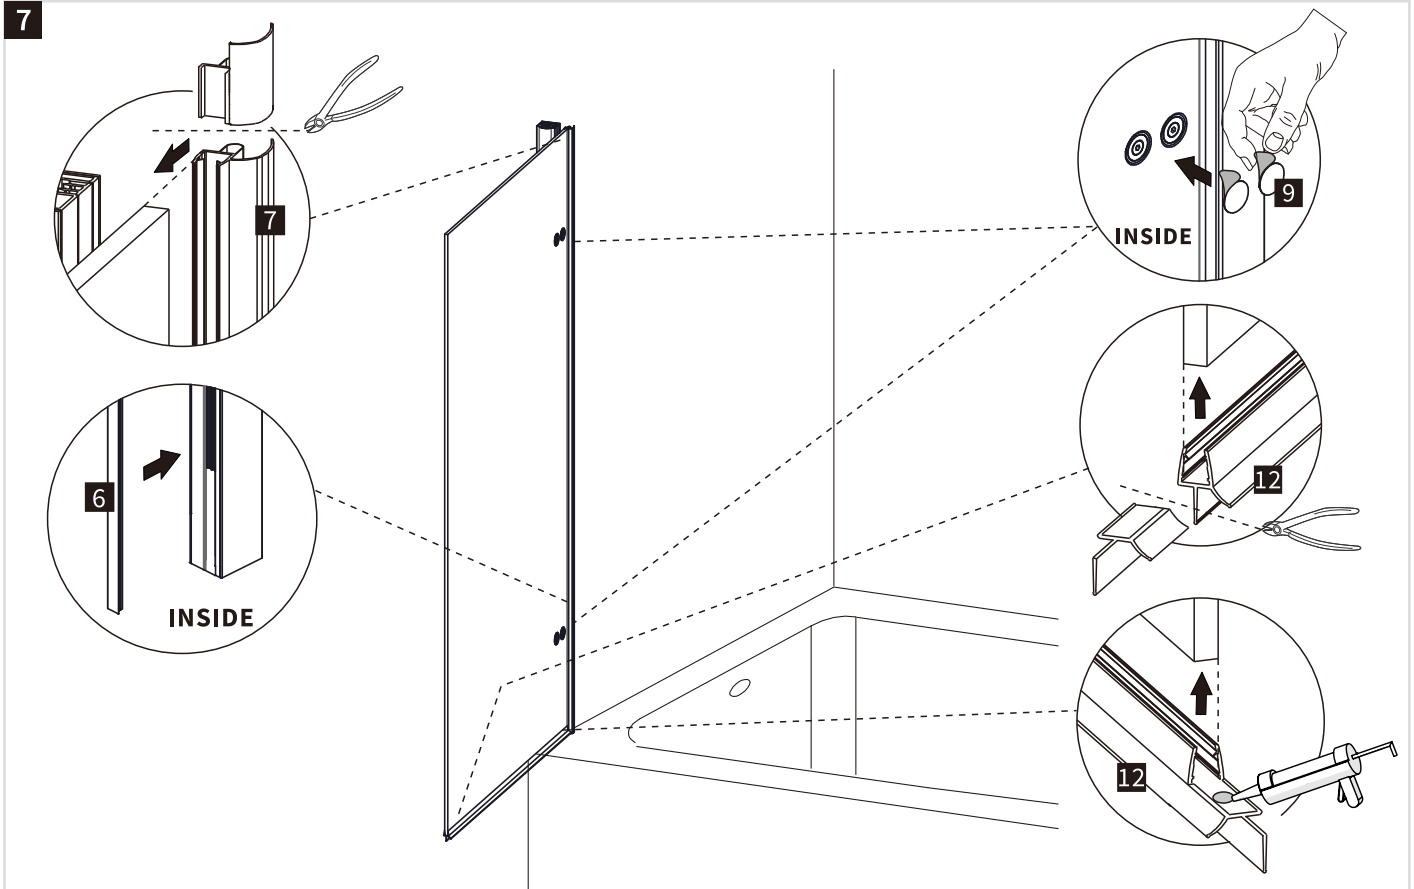

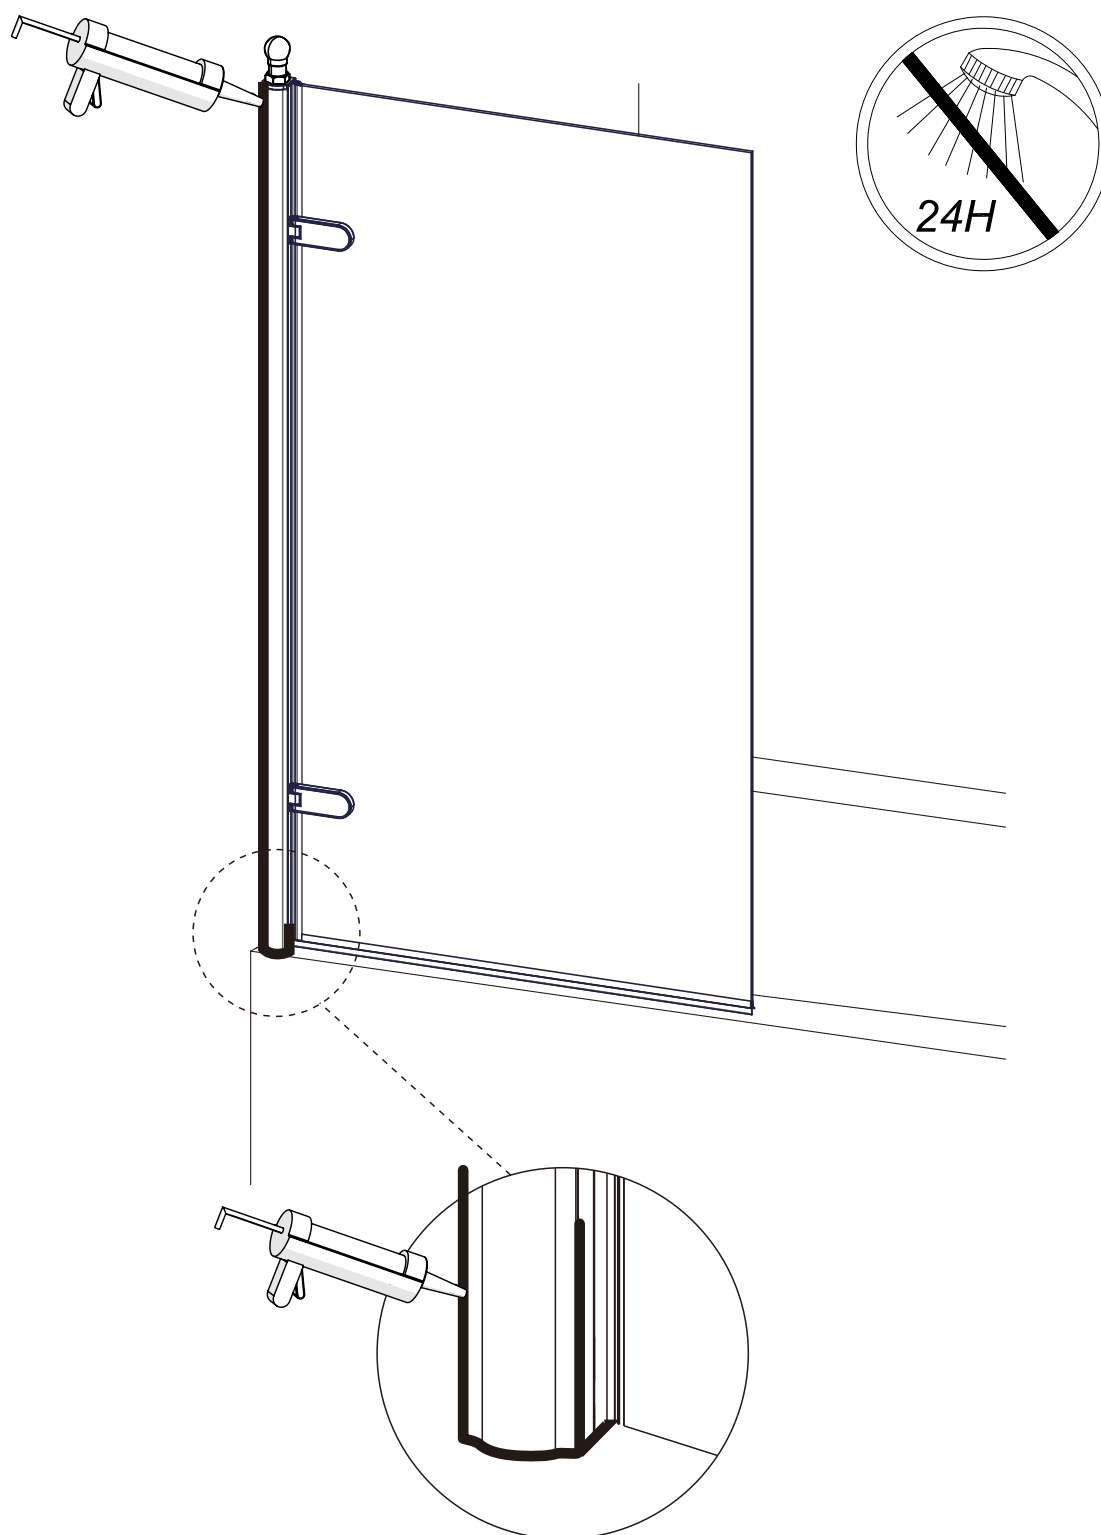

Burlington[®]

Burlington[®]

Part of the
Bathroom Brands Group

We reserve the right to make technical modifications without prior notice.

Burlington[®]

Lake View House
Rennie Drive, Dartford
Kent DA1 5FU
United Kingdom
0345 873 8840
www.crosswater.co.uk