

CLASSIQUE

Sliding Door & Side Panel





Burlington®

PRODUCT CODES:

CQSLSC1200
CQSLSC1400
CQSLSC1700
CQSLGC1200
CQSLGC1400
CQSLGC1700
CQSLLC1200
CQSLLC1400
CQSLLC1700

CQSPSC0800
CQSPSC0900
CQSPGC0800
CQSPGC0900
CQSPLC0800
CQSPLC0900

CQ1909HDFNC	CQ1850HDFNC
CQ1909HDFNG	CQ1850HDFNG
CQ1909HDFNL	CQ1850HDFNL
CQ1909PRFNC	CQ1850PRFNC
CQ1909PRFNG	CQ1850PRFNG
CQ1909PRFNL	CQ1850PRFNL
CQ1909HDFNBPC	CQ1850HDFNBPC
CQ1909HDFNBPG	CQ1850HDFNBPG
CQ1909HDFNBPL	CQ1850HDFNBPL

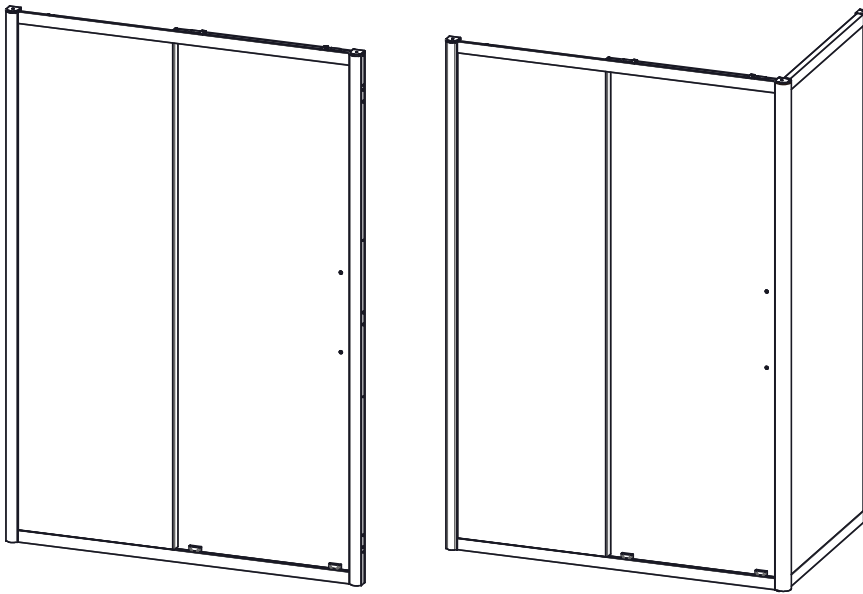

Optional handle & profile finial (not supplied with shower doors)

1. Pre-Installation Checklist

✓ Before You Begin:

- Ensure all tiling/grouting is complete.
- Shower tray **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

⚠ Safety Notes:

- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

2. Unpacking & Components

Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

Missing/Damaged Parts?

Contact Bathroom Brands immediately: ☎0345 873 8840.

3. Step-by-Step Installation

A. Frame Assembly

1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×8 total).
- Cover ends with profile caps if any.

B. Door Installation

3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

C. Final Checks

5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

4. Care & Maintenance


- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.

Ensure seals are flush to prevent leaks.

ORIENTATION

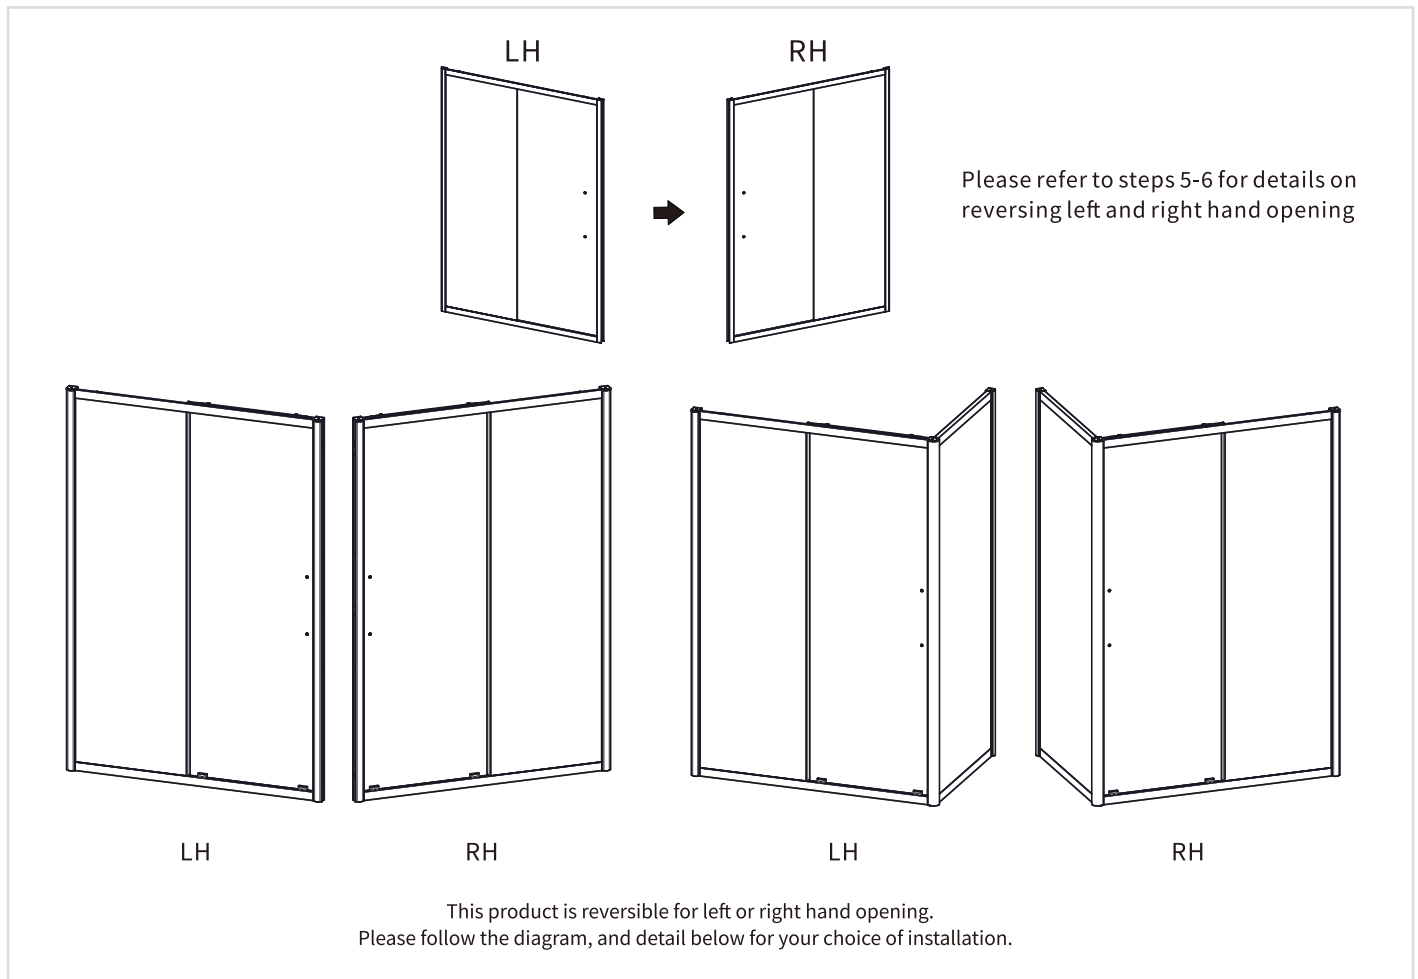


Tools Required (not supplied):

Spirit Level		Torque Screw Driver	
Pencil		Snips	
Drill		6mm Drill Bit	
Silicone		Measuring Tape	
Knife			

COMPONENTS



Burlington®

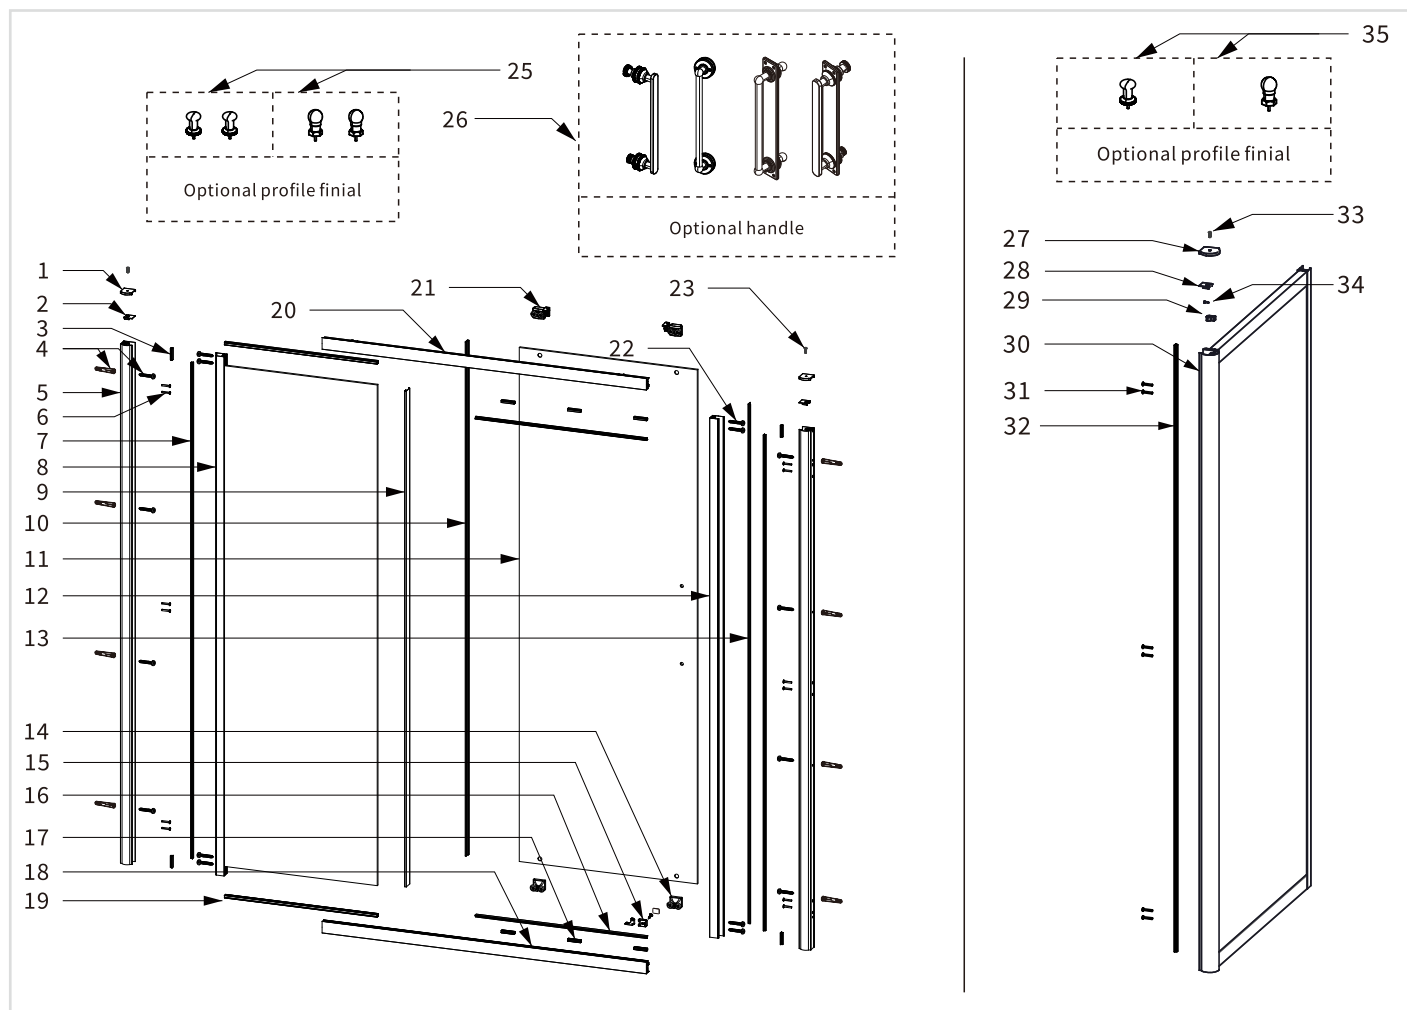

1		Wall profile cap L x1 R x1	2		Adjustment profile cap x2	3		45mm Profile Cover x4	27		Wall profile cap L x1 R x1
4		Wall Plug and ST4x50mm Screw x8	5		Wall profile L x1 R x1	6		M5*30 Screw x12	28		Adjustment profile cap x1
7		1910mm Profile Cover x2	8		Fixed Panel x1	9		Fixed Panel Seal x1	29		Fixing part of profile cap x1
10		Moving Panel Seal A x1	11		Moving Panel x1	12		Adjustment Profile x1	30		Side panel x1
13		Profile Seal x1	14		Bottom Roller x2	15		Buffer ST4x12mm Screw x1	31		M5*30 Screw x6
16		575-675mm Rail Cover x2	17		Fixing Gasket x6	18		Bottom Rail x1	32		1910mm Profile Cover x1
19		Fixed Panel bottom Seal x2	20		Top Rail x1	21		Top Roller L x1 R x1	33		M5*14 Screw x1
22		ST4*30 Screw x8	23		M5*14 Screw x2	24		4mm 3mm 2.5mm Allen Key	34		ST4*16 Screw x1
25		Optional profile finial x2	26		Optional handle x1				35		Optional profile finial x1


INSTALLATION

Burlington®

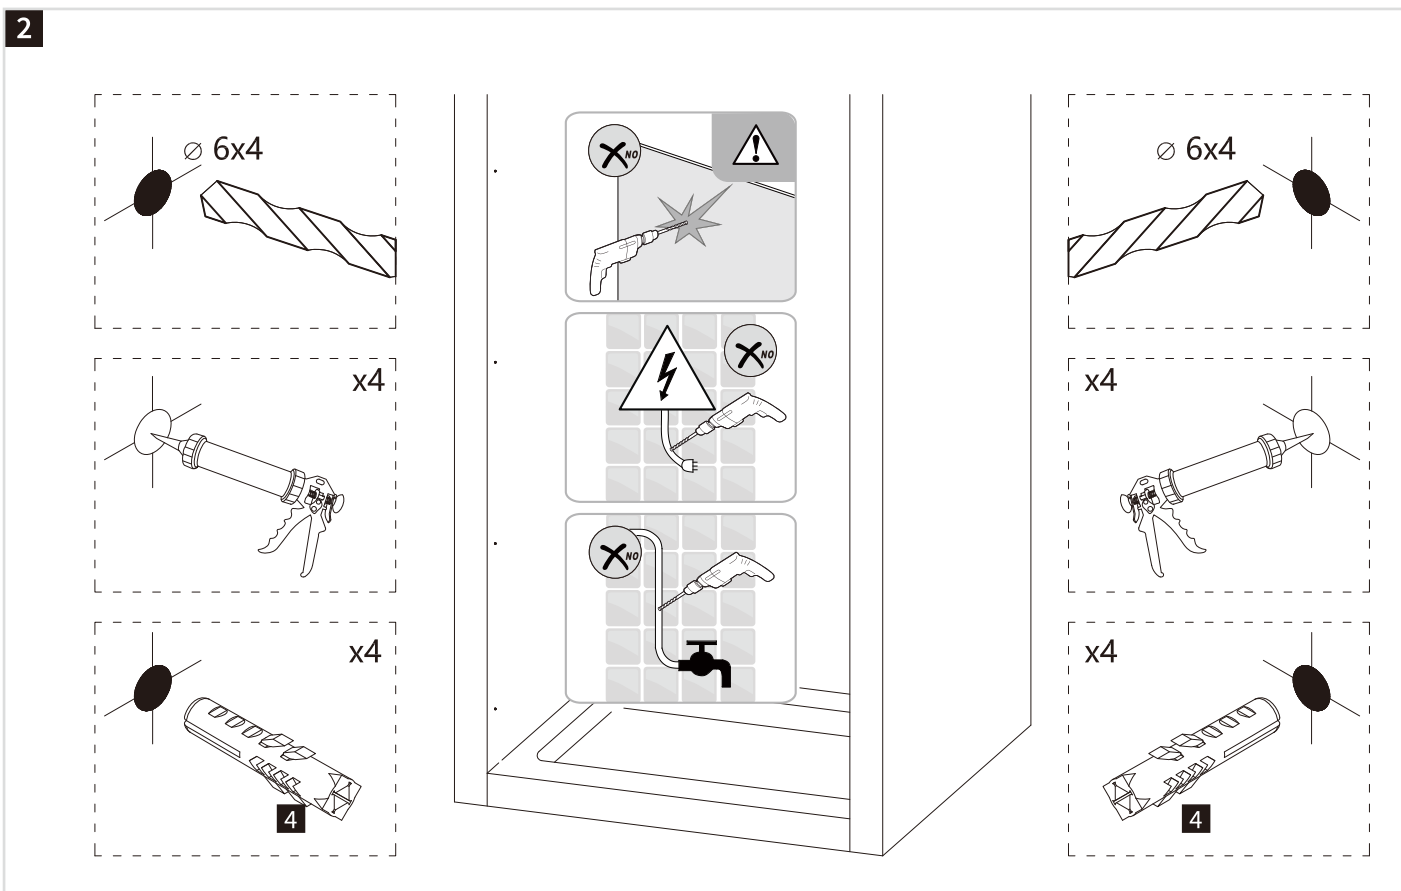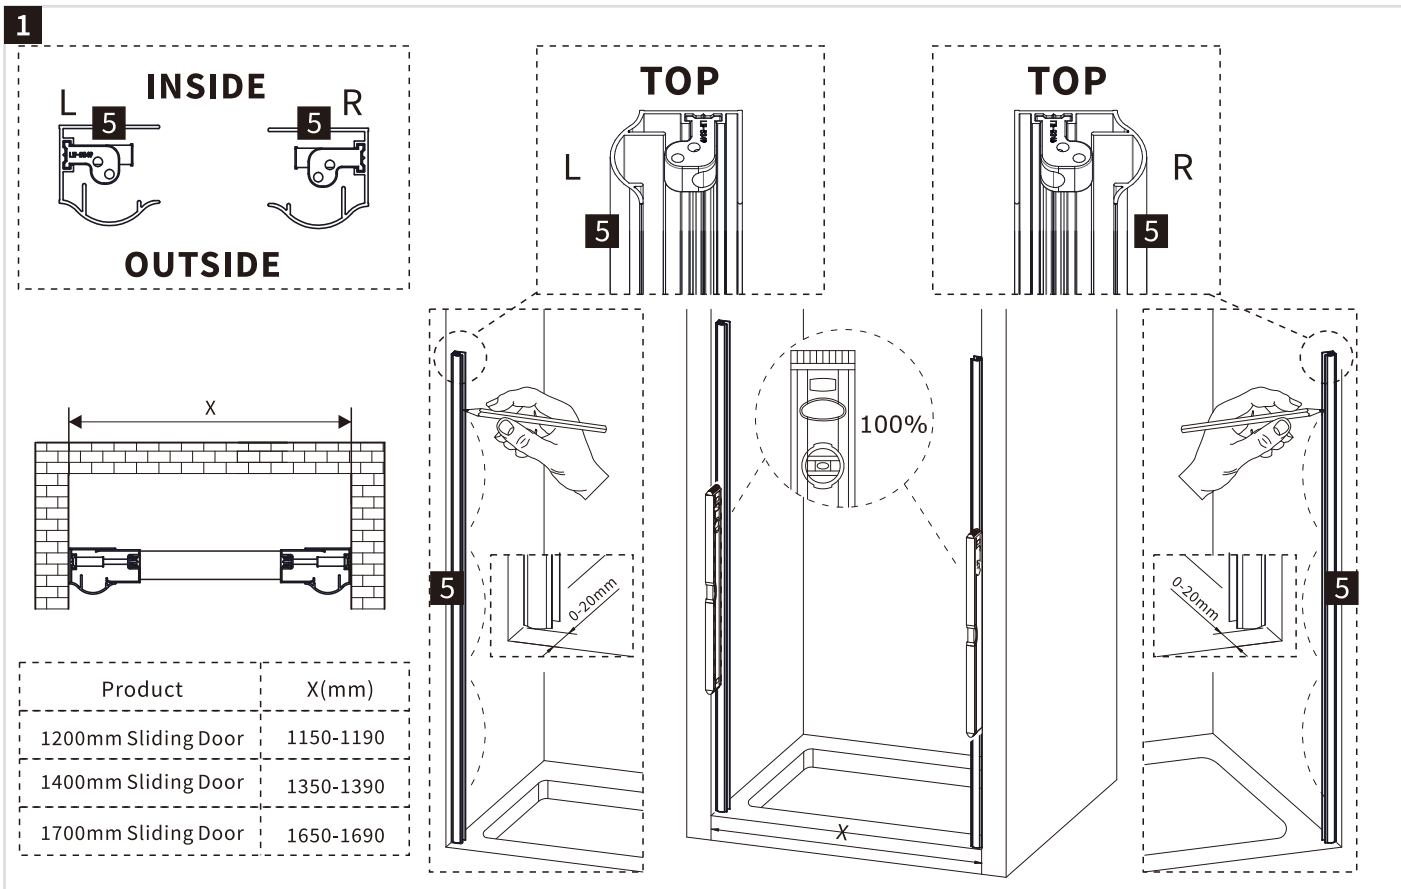


INSTALLATION

3

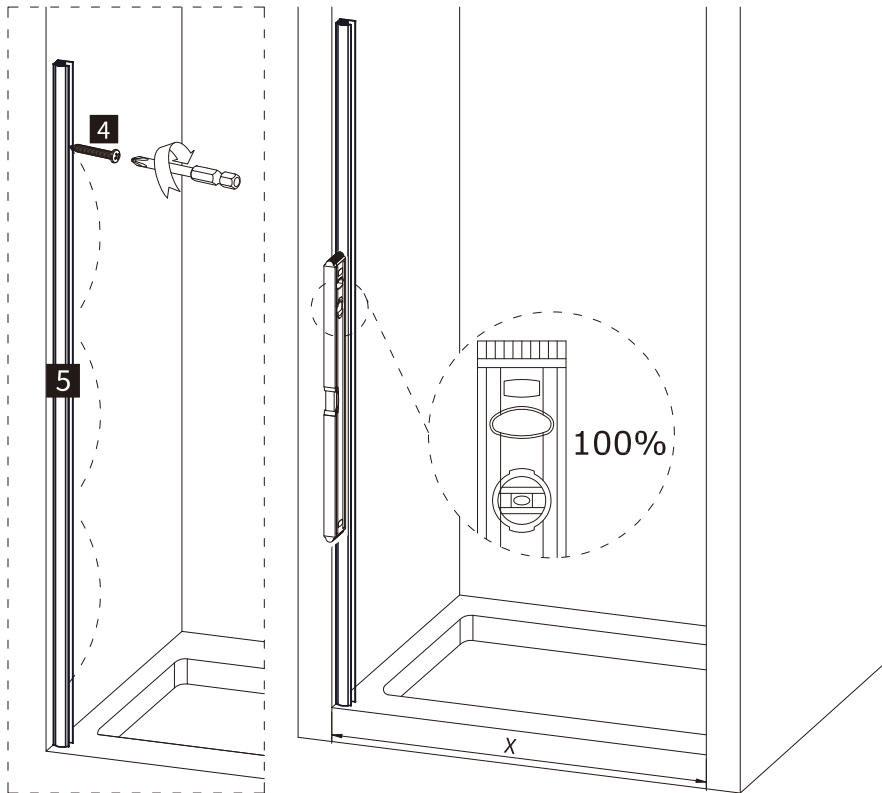


Product	X(mm)
1200mm Sliding Door	1150-1190
1400mm Sliding Door	1350-1390
1700mm Sliding Door	1650-1690

4

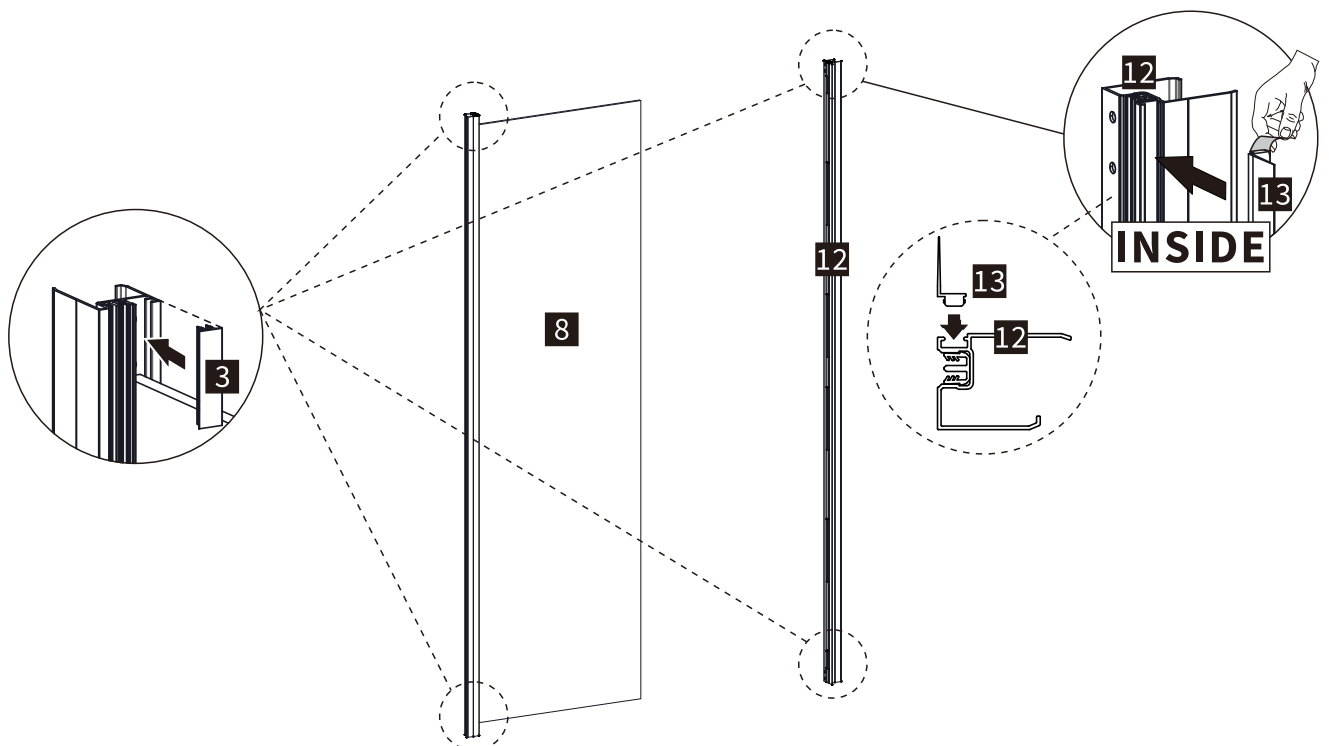


5

LH
INSIDE

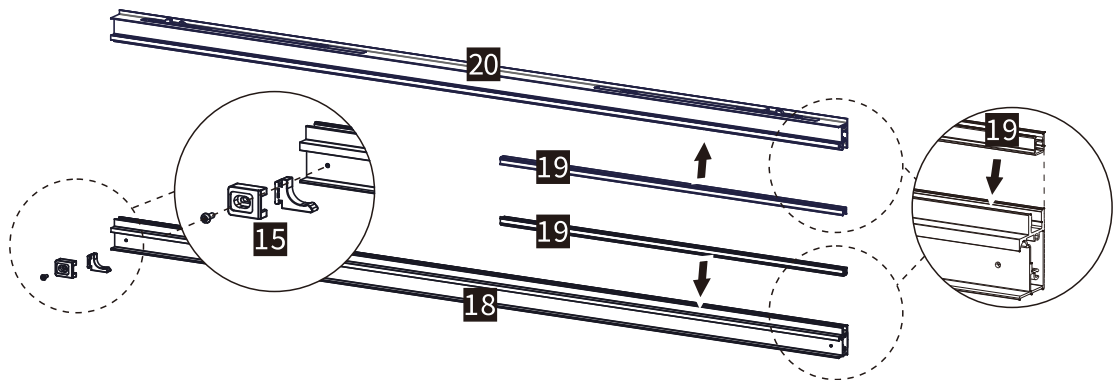


RH
INSIDE


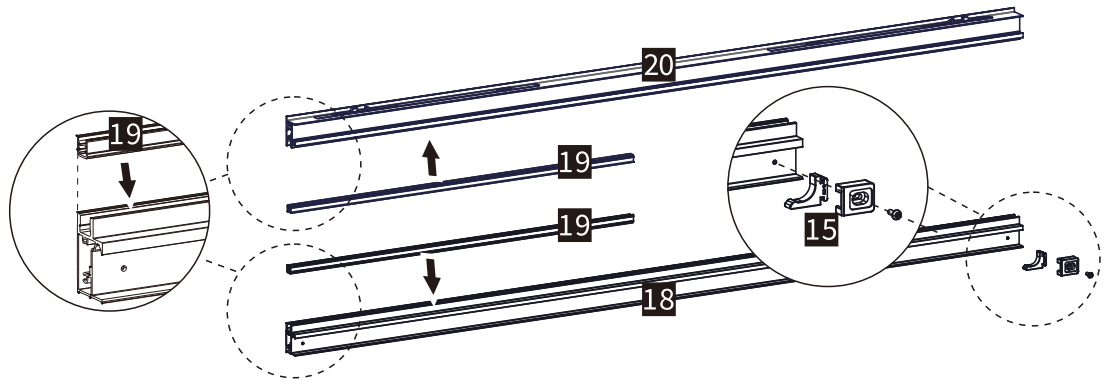


6

LH
INSIDE

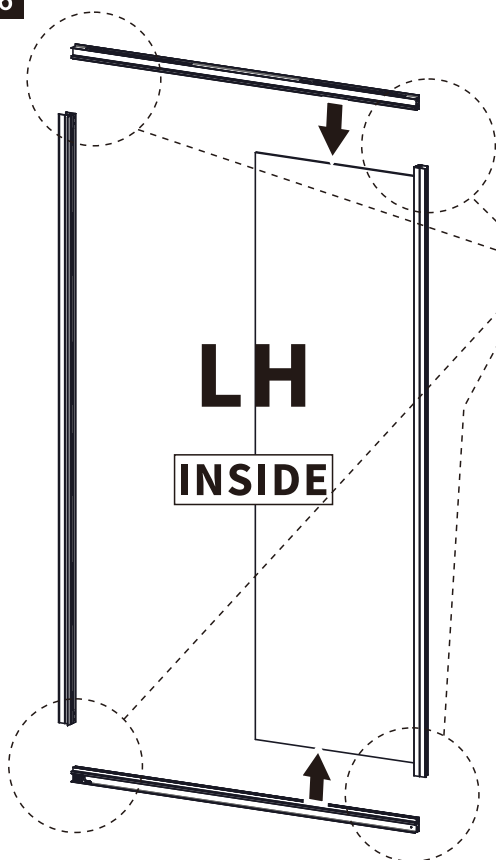


RH
INSIDE

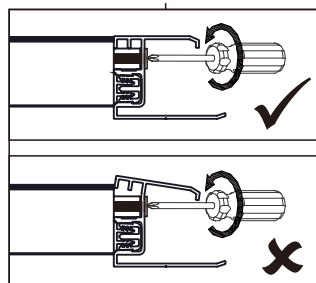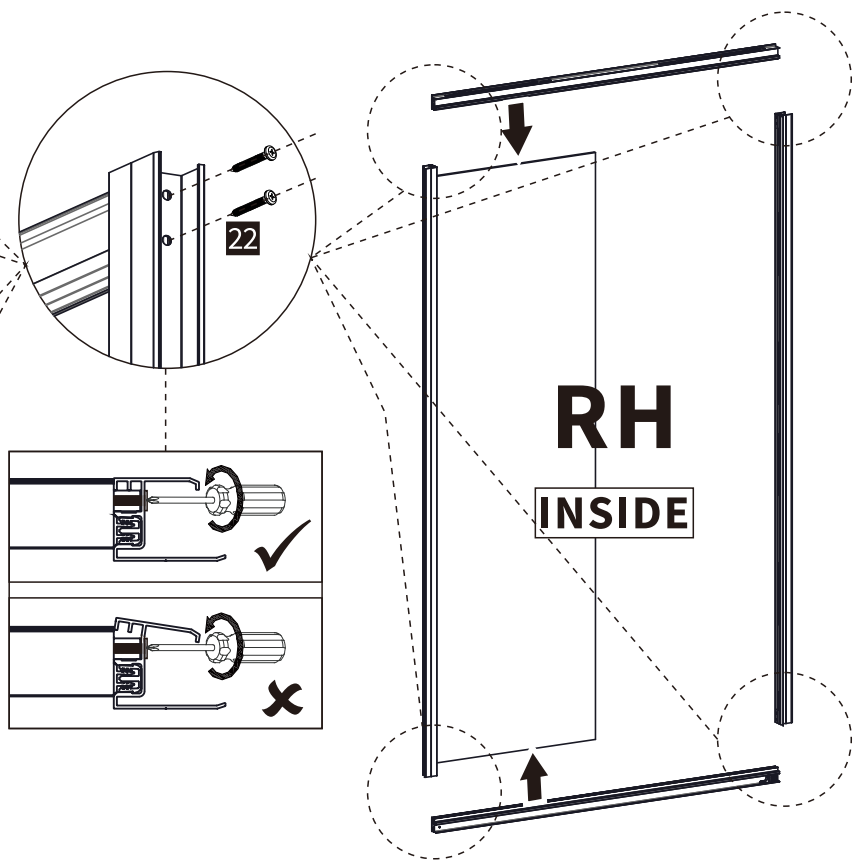


INSTALLATION

Burlington®



7

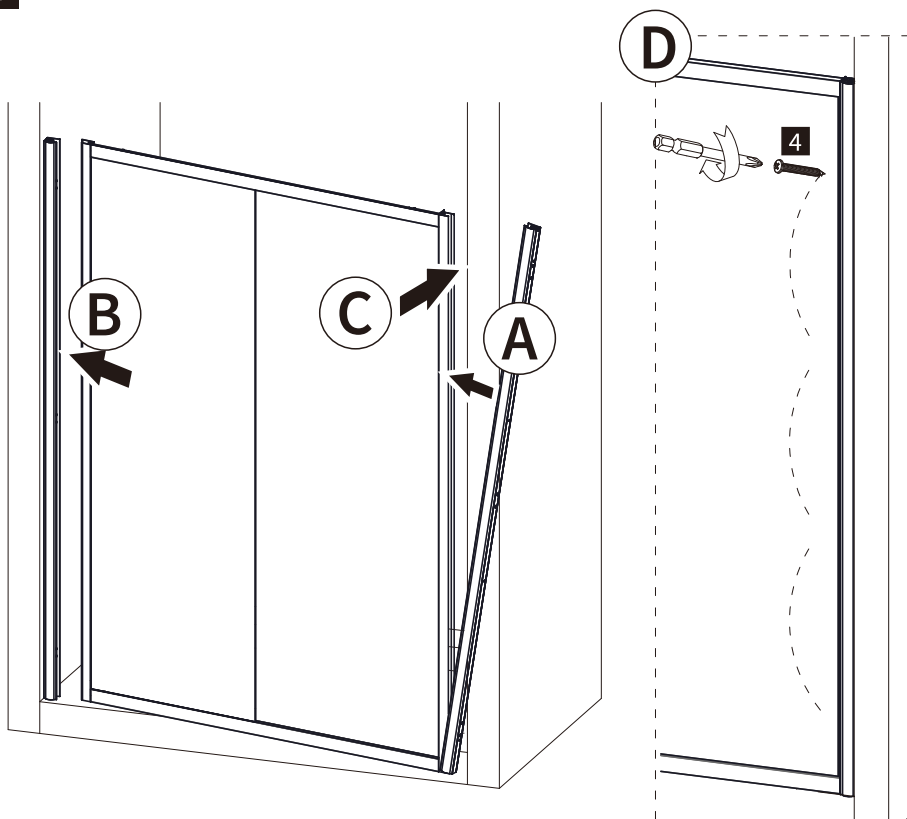

Product	X(mm)
1200mm Sliding Door	1150-1190
1400mm Sliding Door	1350-1390
1700mm Sliding Door	1650-1690


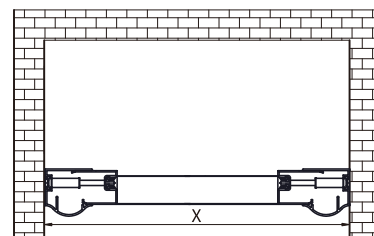


8

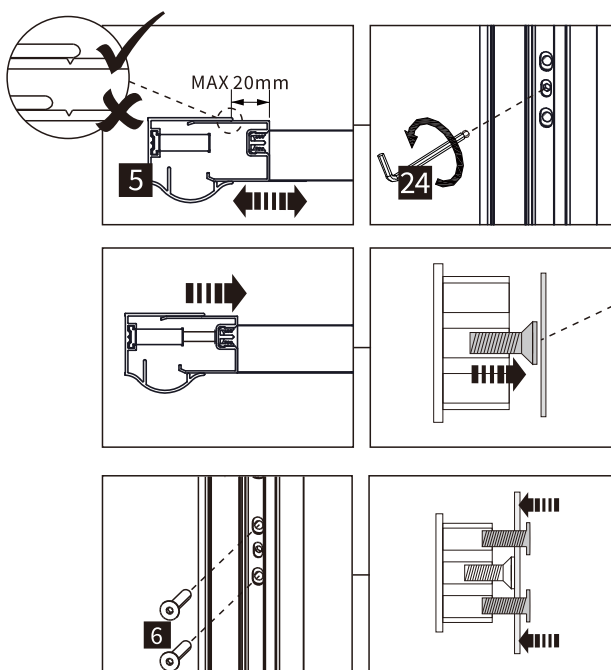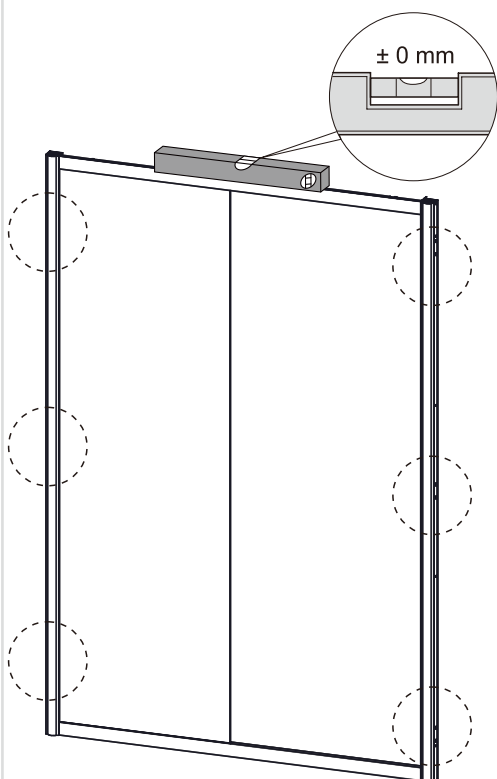

Ensure the door is level. Adjust if needed, then lock the screw till it touches and supports the door frame.


INSTALLATION

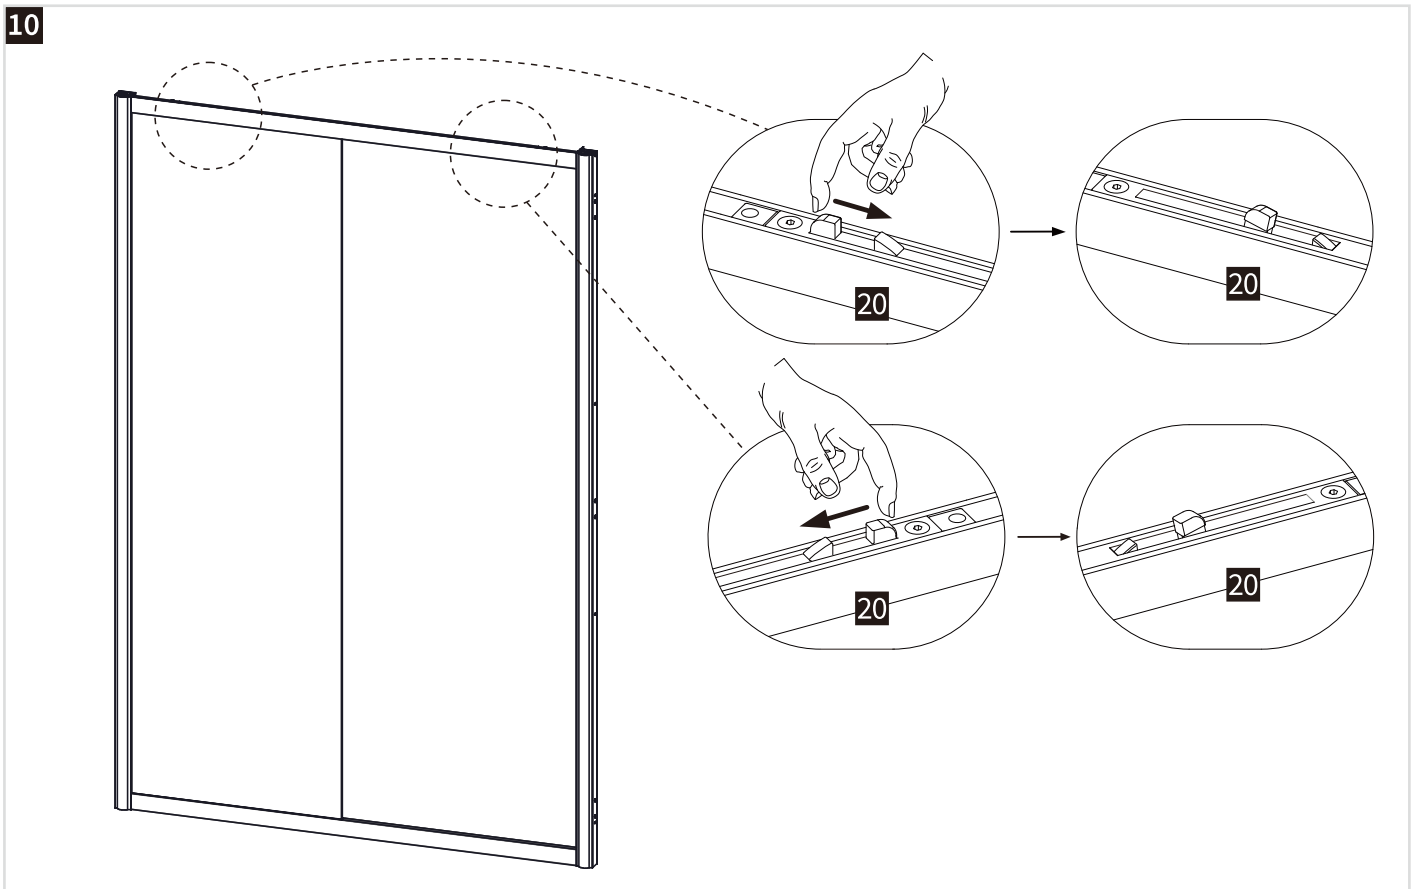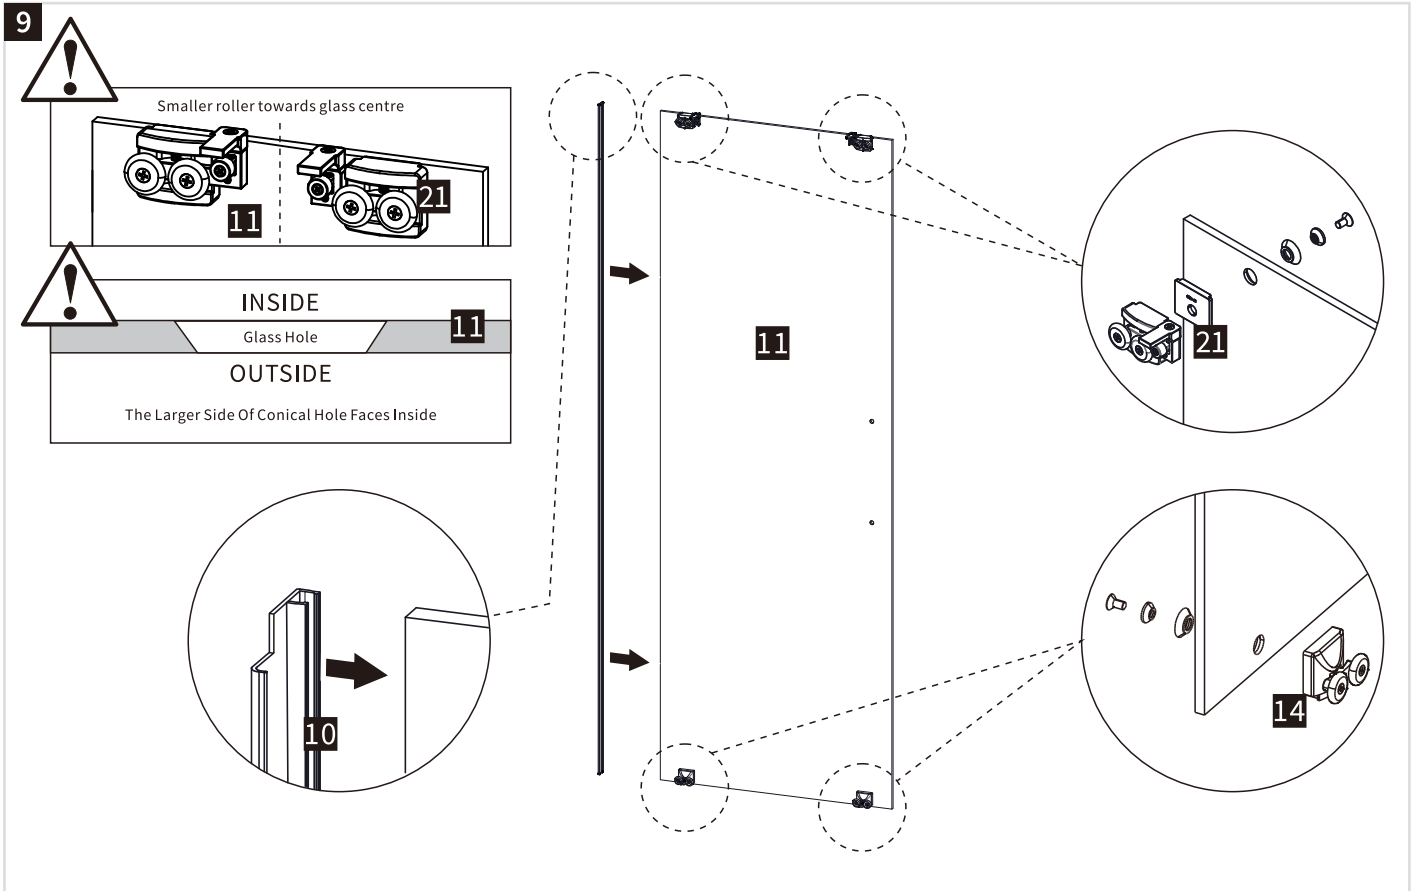


INSTALLATION

Burlington®

11

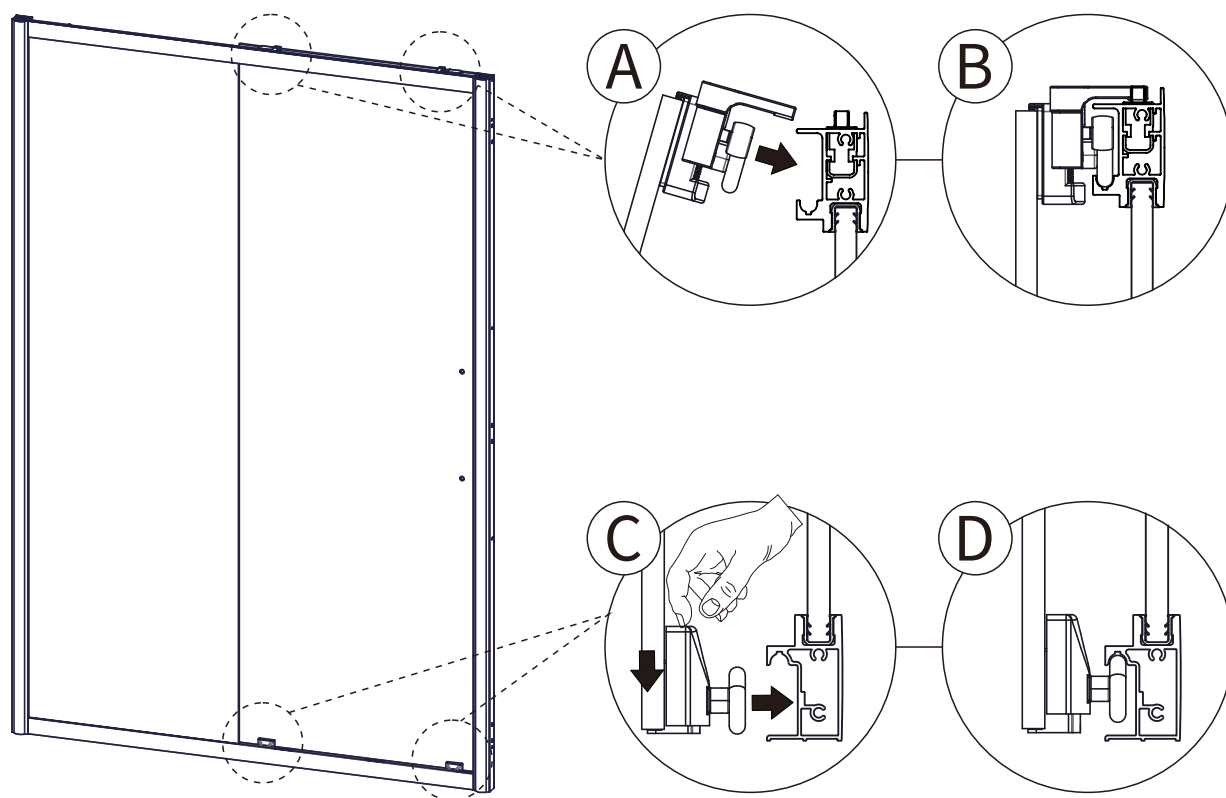


12

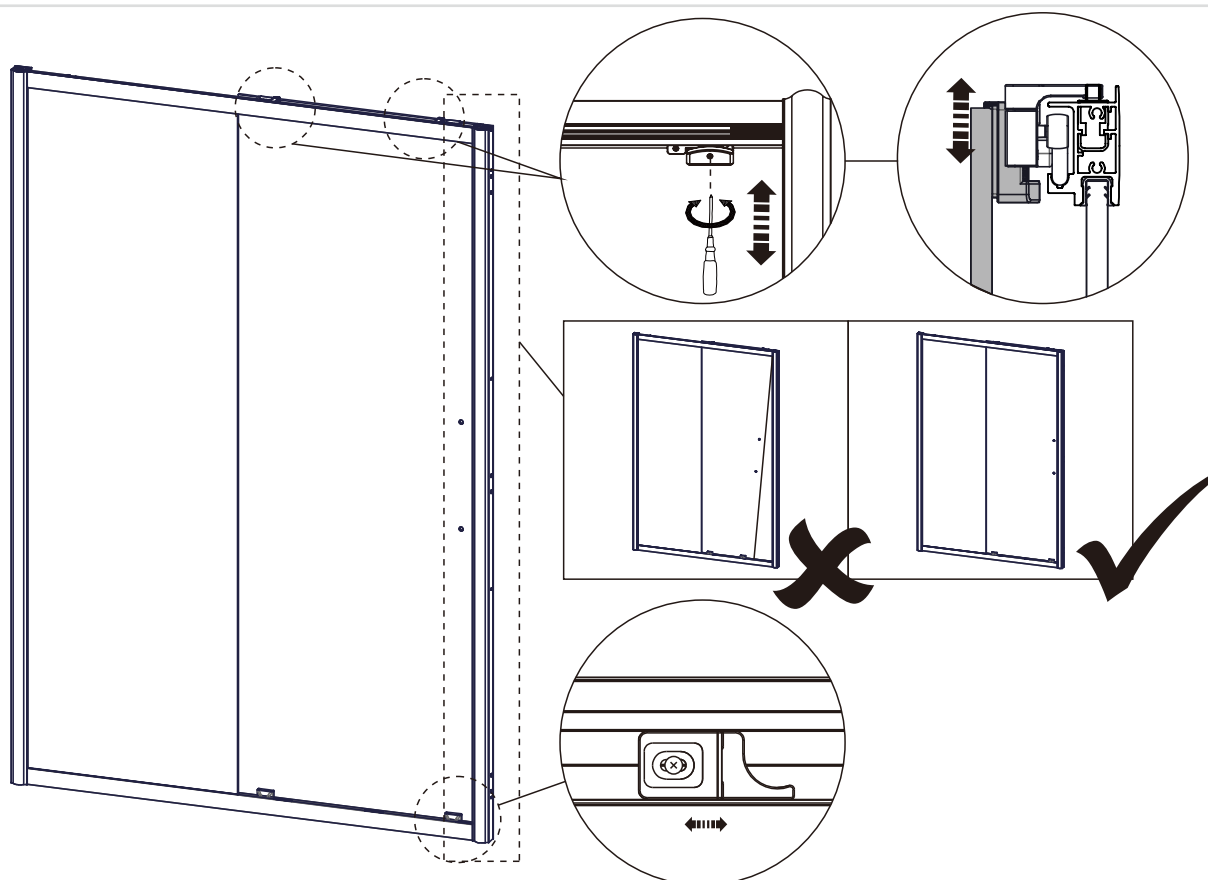


INSTALLATION

Burlington®

13

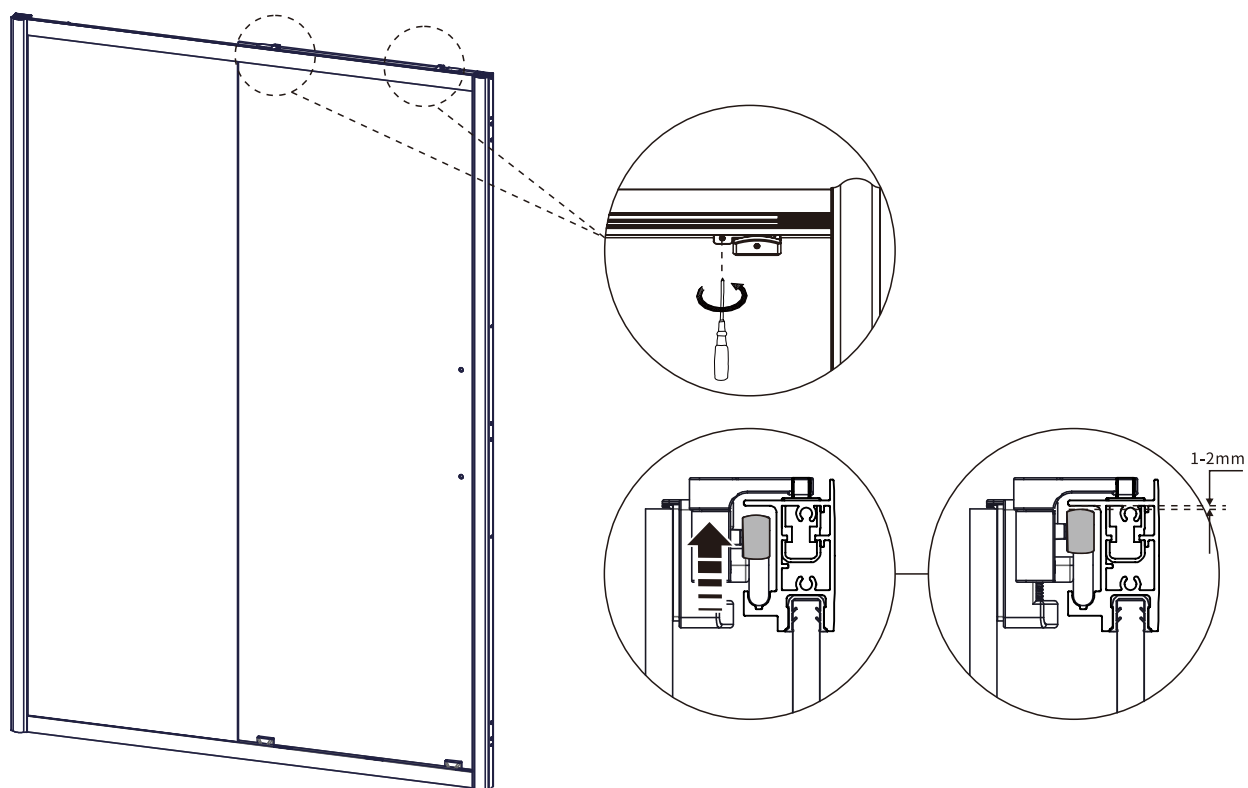


14

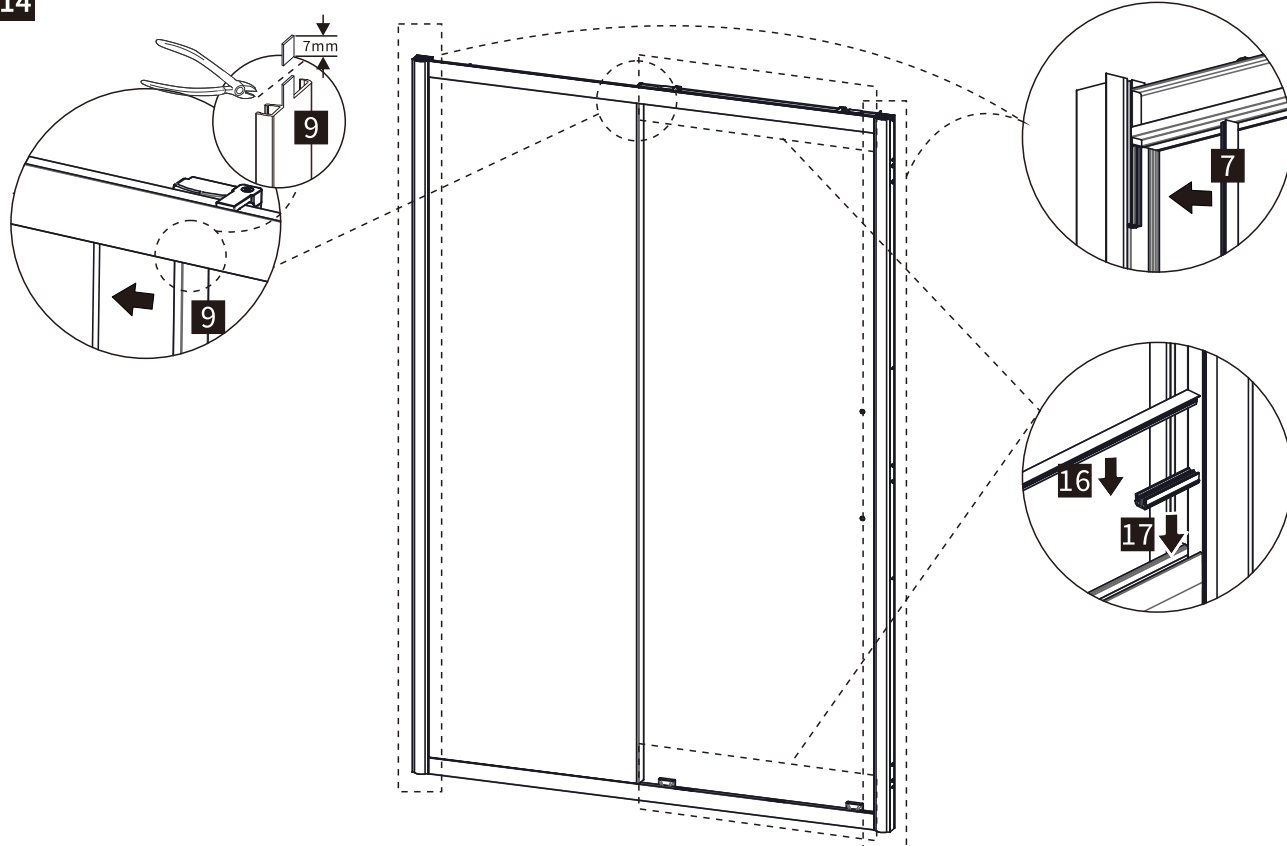


INSTALLATION

Burlington®

15

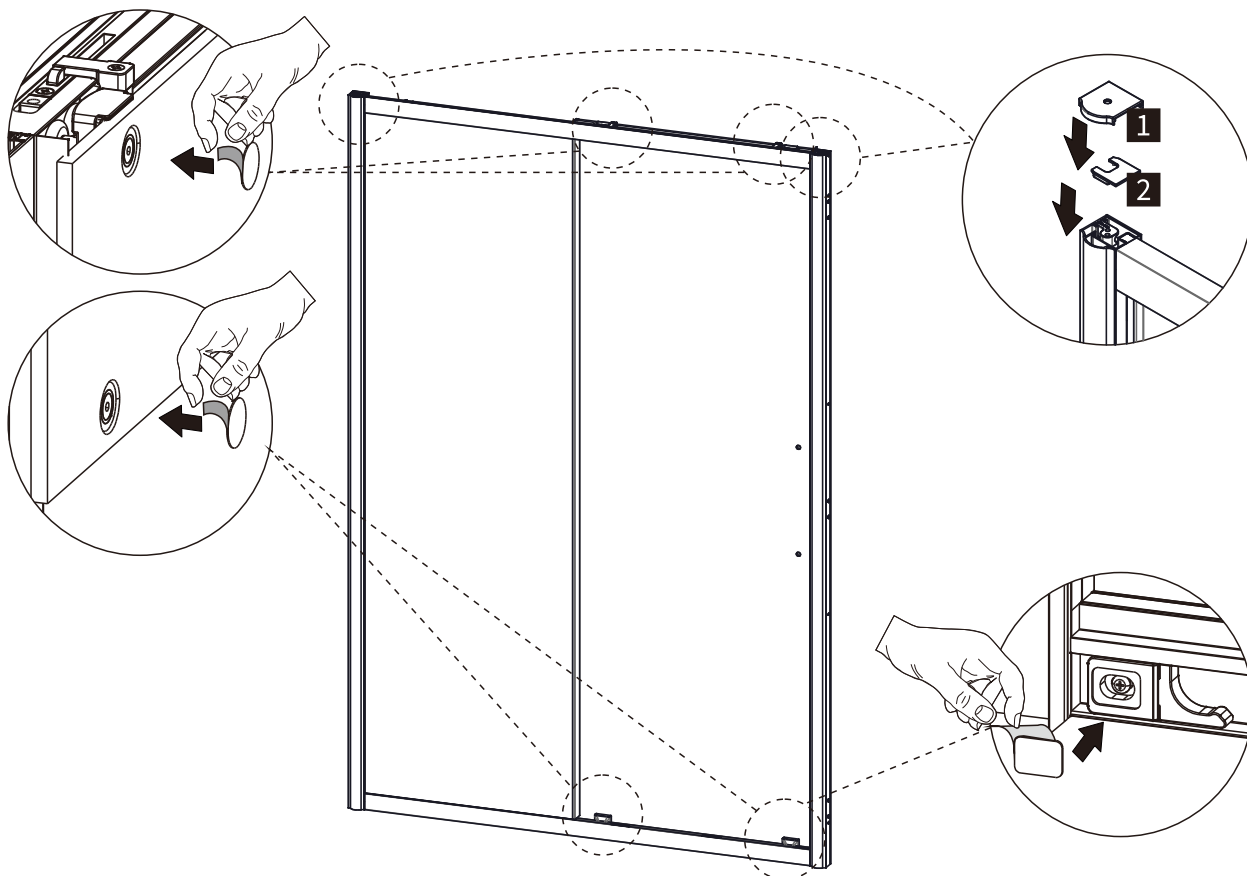


16

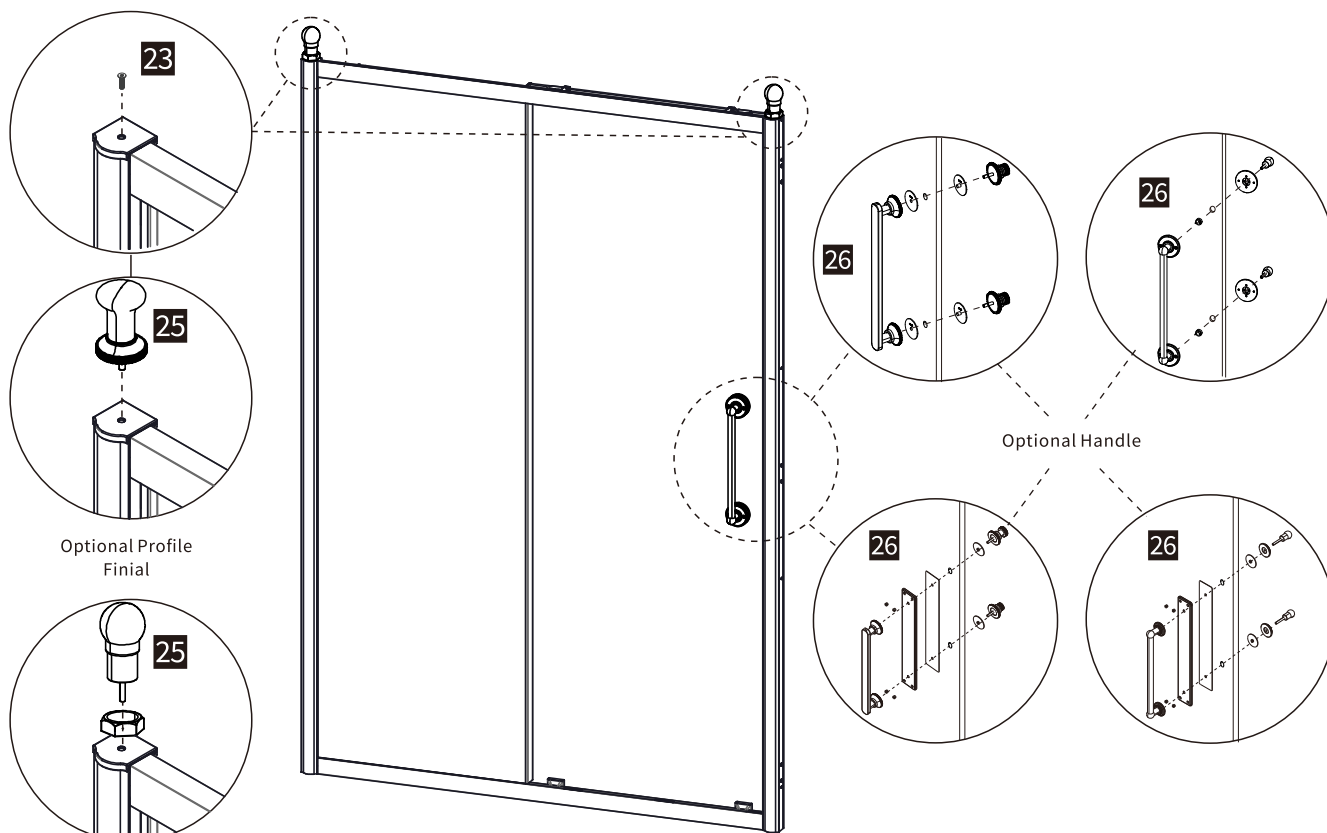


INSTALLATION

17



Loosen the screws of the soft close mechanism and adjust the door position as below diagram to make sure the door can open and close properly, then fix the screws again.

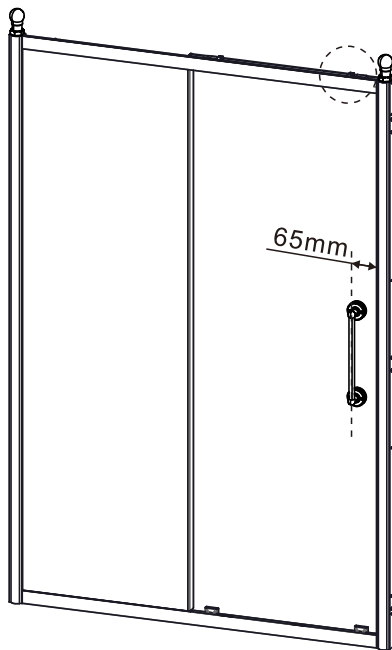


Measure distance between centre of handle mounting hole and profile edge is 65mm

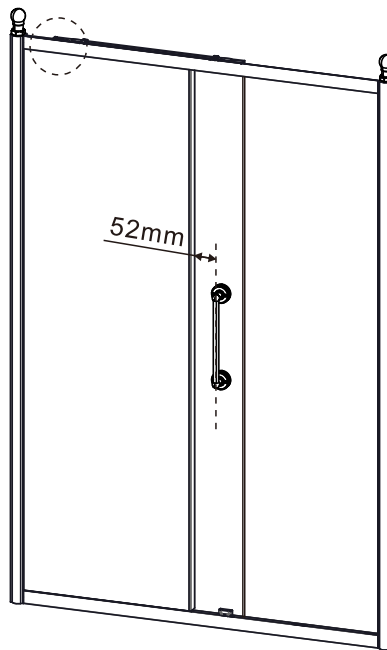

Measure distance between centre of handle mounting hole and fixed panel edge is 52mm

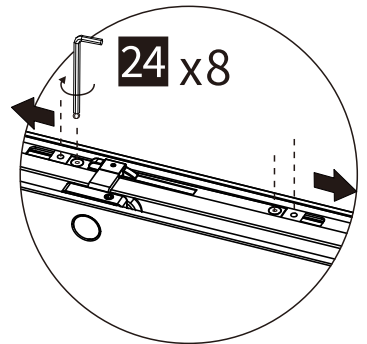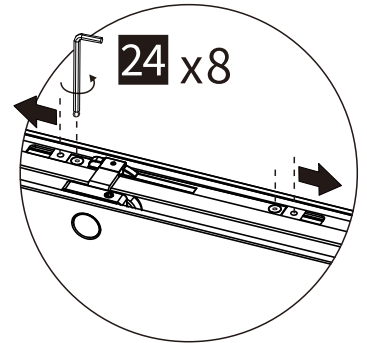



18

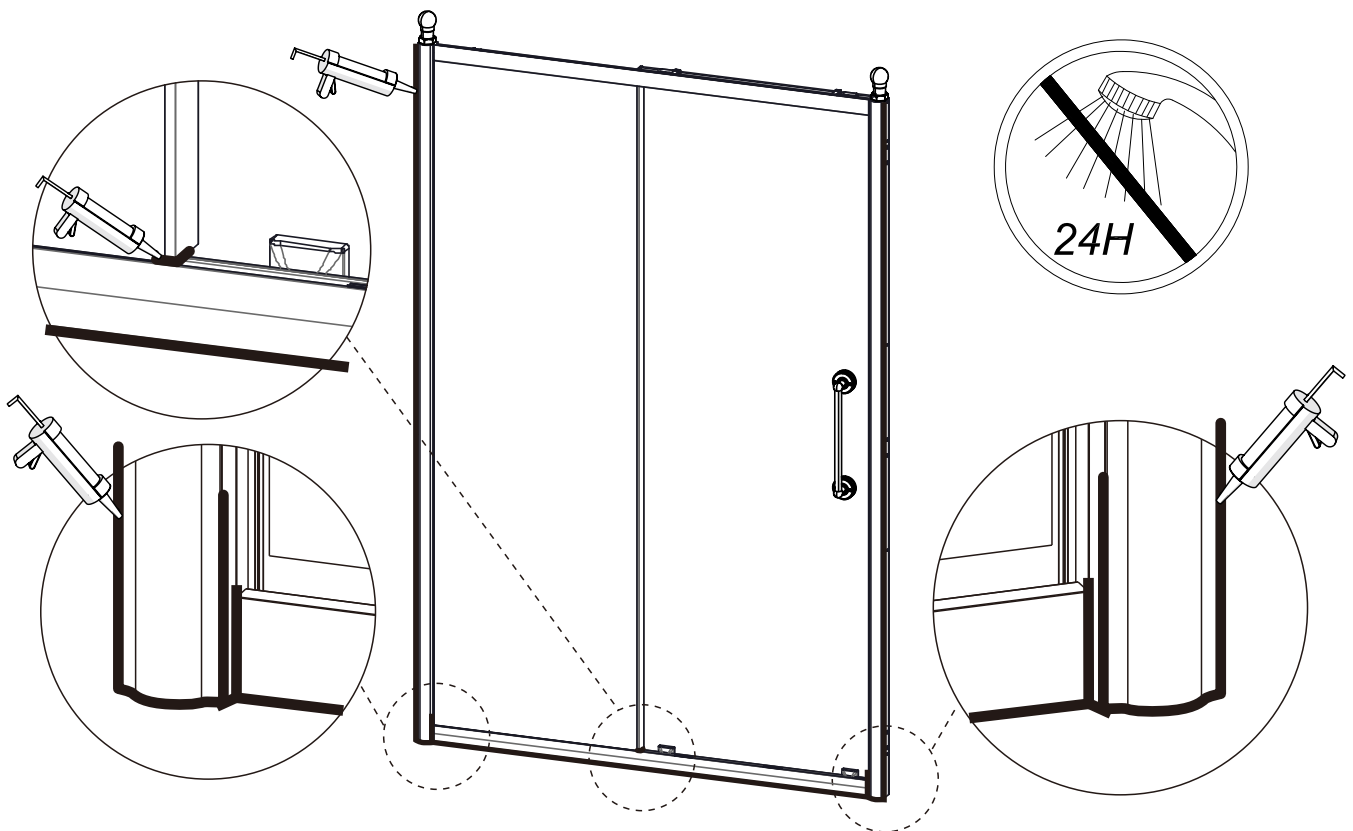

INSTALLATION



Burlington®

18




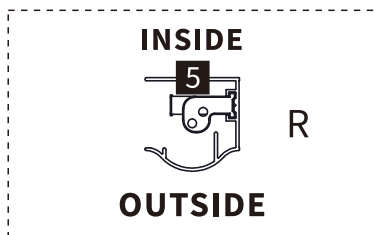
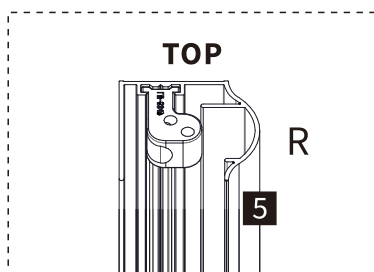


Product	X(mm)
1200mm Sliding Door	1160-1180
1400mm Sliding Door	1360-1380
1700mm Sliding Door	1660-1680

Product	Y(mm)
800mm Side Panel	770-790
900mm Side Panel	870-890

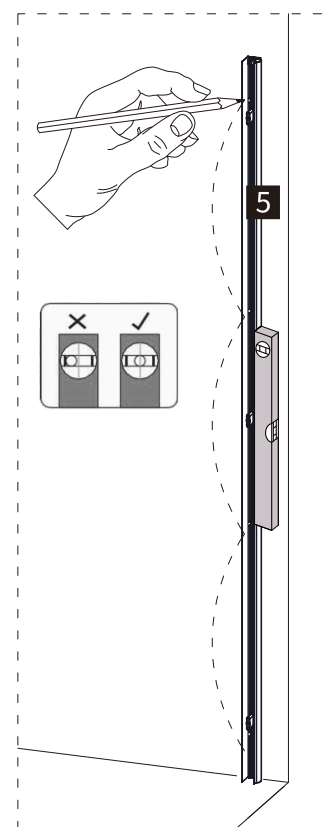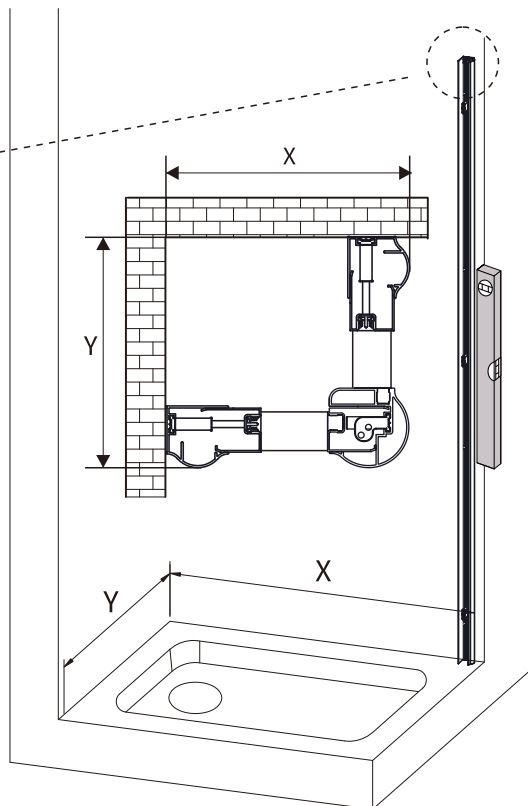


19

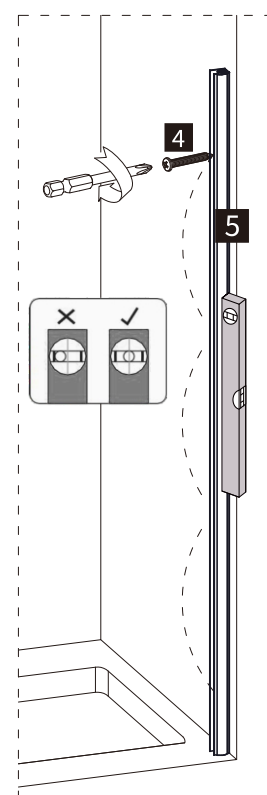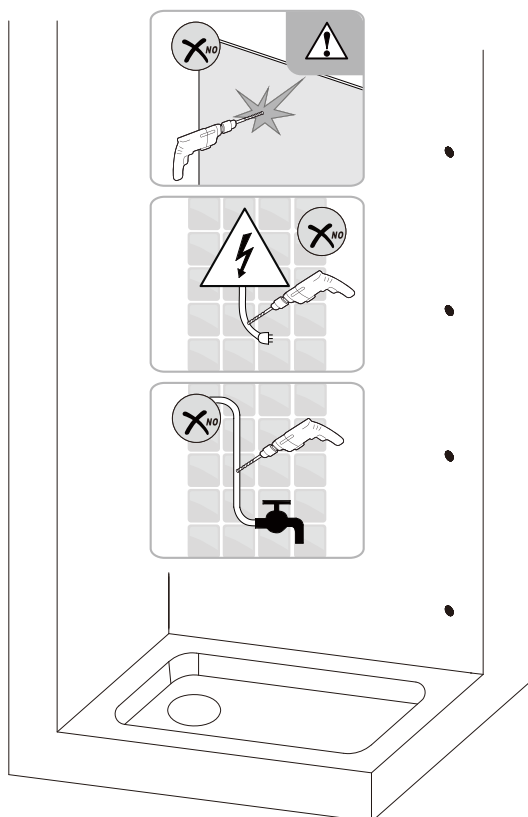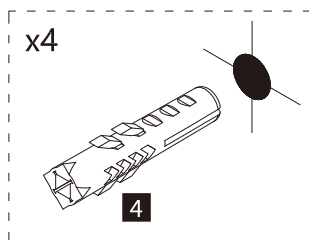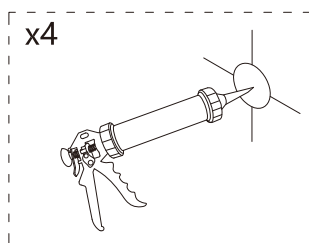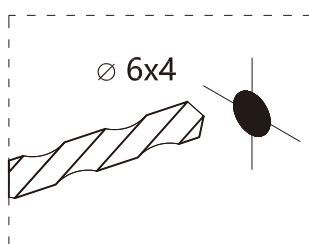


INSTALLATION

20

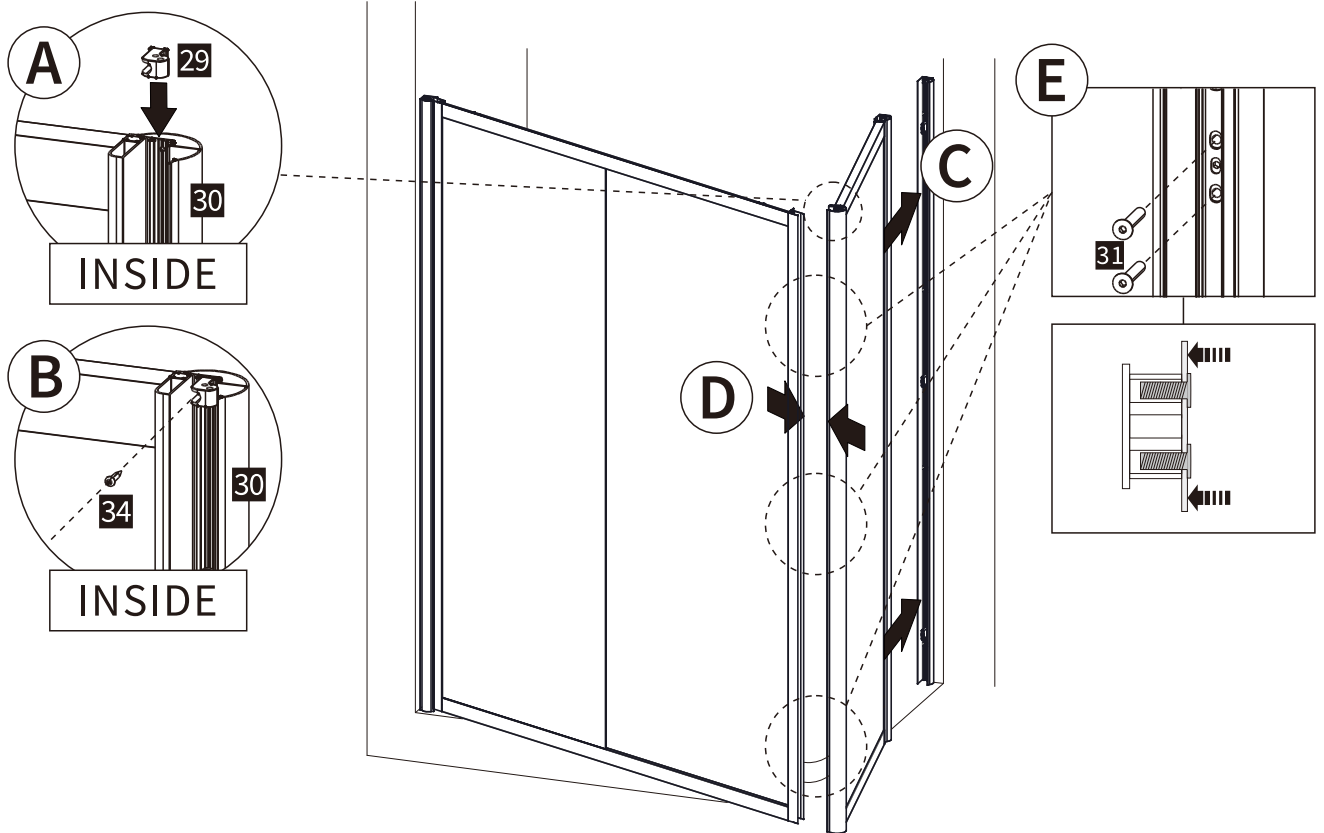


21

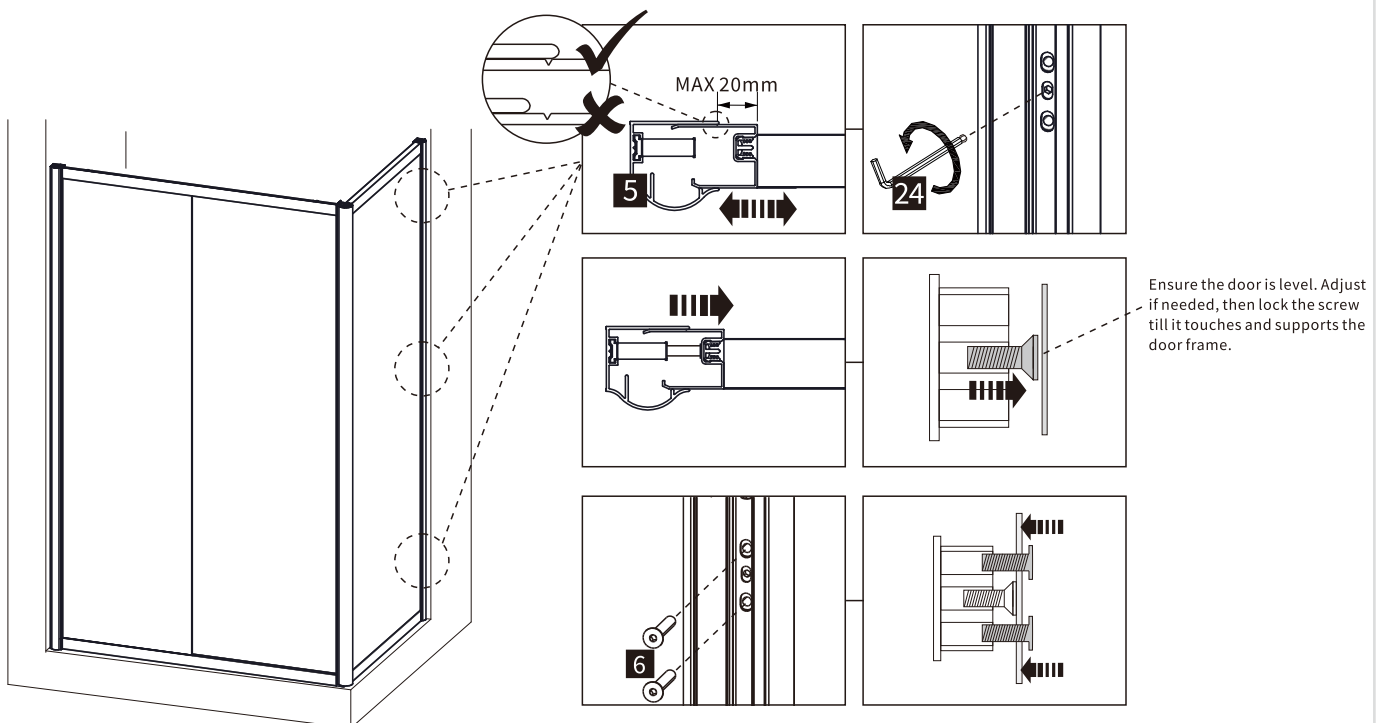


INSTALLATION

22

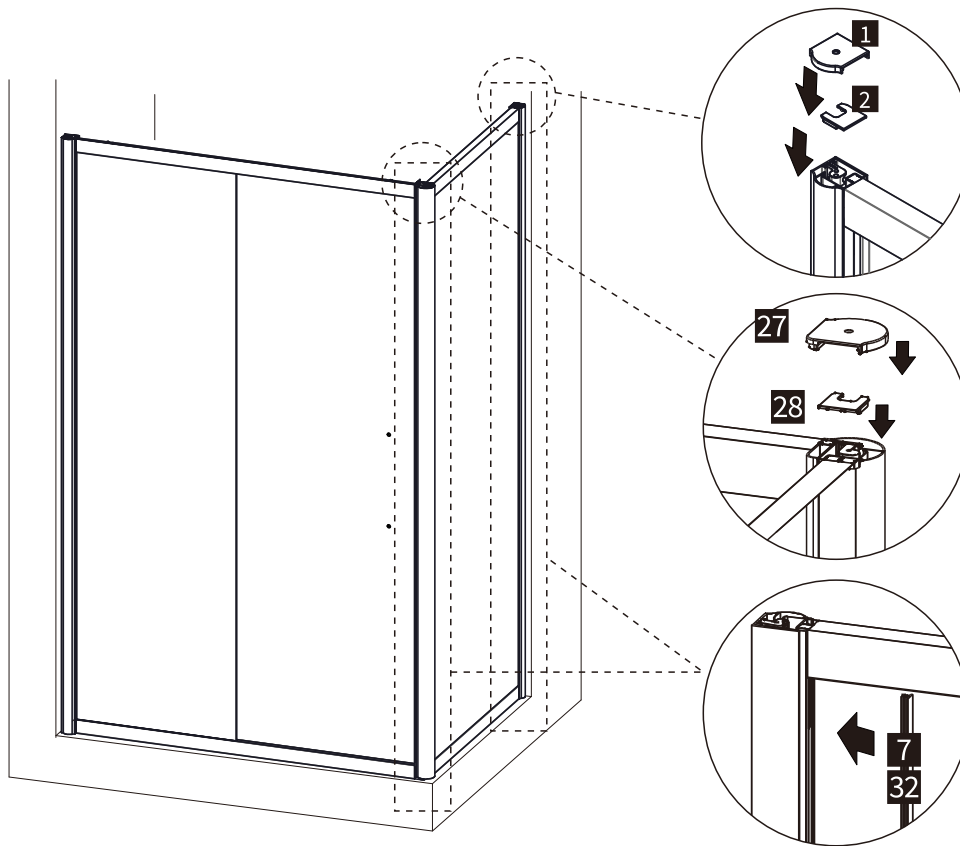


23

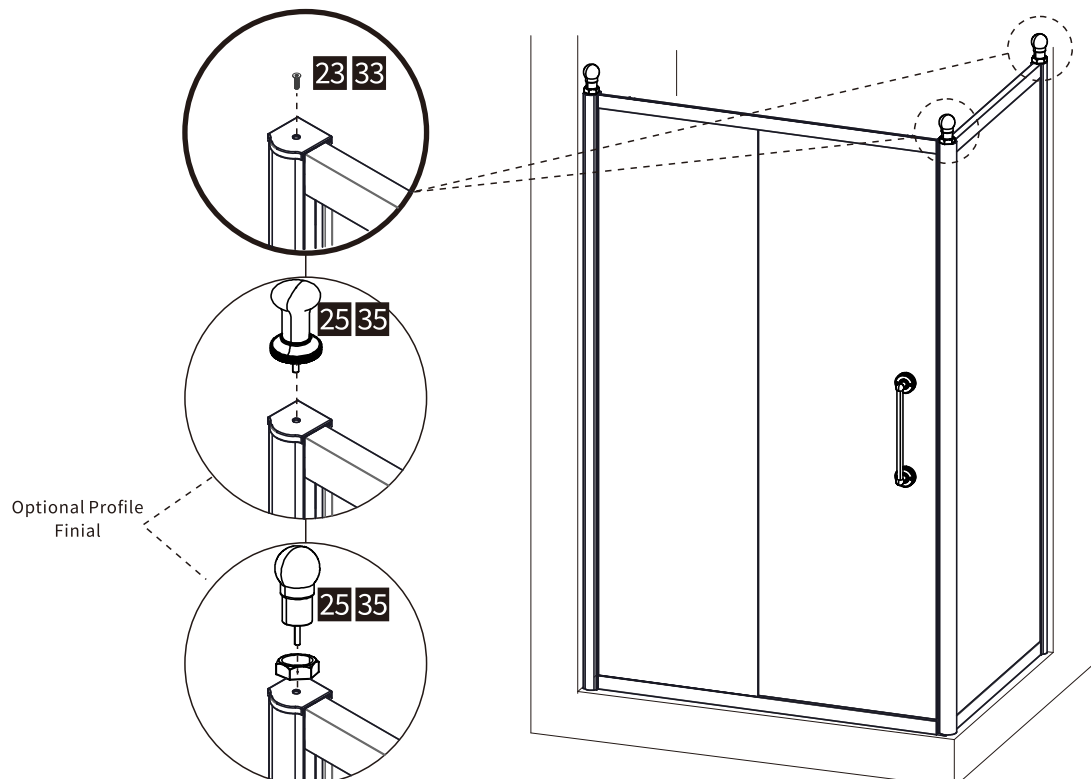

INSTALLATION

Burlington®

24

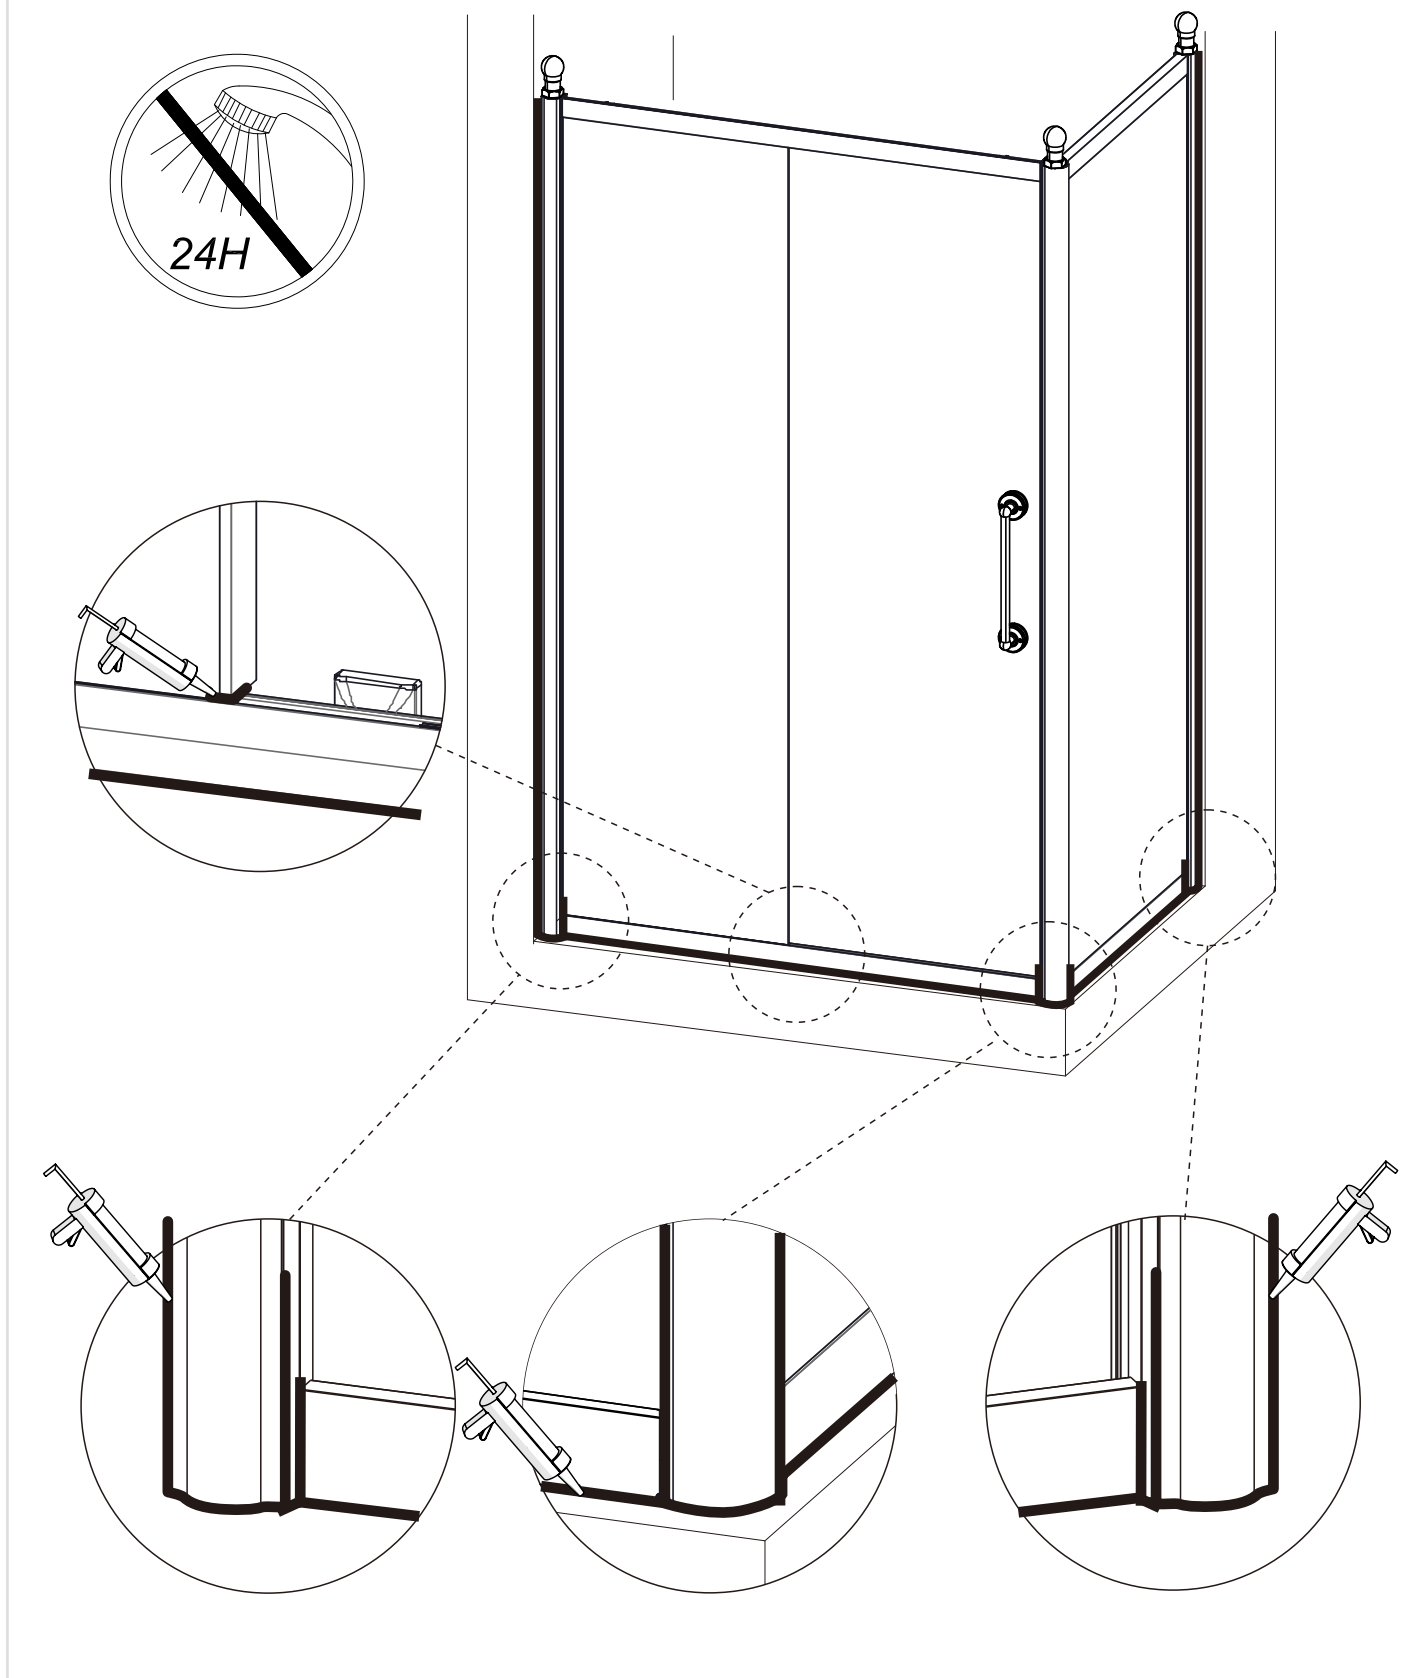

Burlington[®]

Burlington[®]

Part of the
Bathroom Brands Group

We reserve the right to make technical modifications without prior notice.

Burlington[®]

Lake View House
Rennie Drive, Dartford
Kent DA1 5FU
United Kingdom
0345 873 8840
www.crosswater.co.uk