

Hampton shower bath 170 LH E13
Hampton shower bath 150 LH E20

Hampton shower bath 170 RH E14
Hampton shower bath 150 RH E21

Notes for Tiling and Sealing


- Prior to installation check that all parts have been supplied.
- Assemble bath on a mat to protect against damage to bath surface.
- Bath diagram shown is for reference only and bath legs fit to all baths.
- This product requires a two person lift - use proper lifting techniques.
- This installation guide does not include details of waste connection; final decision about installation of waste connection should be taken by a suitably qualified person.
- All tiling, grouting and sealing must be completed before the bath screen is fitted to the wall.

Tip -To produce a clean perfect silicone sealant line


The area must be dust free and cleaned with a degreaser such as methylated spirits to ensure good adhesion of the silicone. Use waterproof mould resistant bathroom silicone sealant (not acrylic it does not adhere as well)

Mask with making tape both sides of the joint leaving a reasonable space for the silicone to fill. Apply the silicone sealant, then you can wipe the silicone back and forth with your finger, forcing the sealant into the small gaps and crevices as you go. Ensure the silicone is thin where it meets the masking tape.



Then remove the making tape to reveal a perfect line that provides a perfect seal.
(It works every time!)

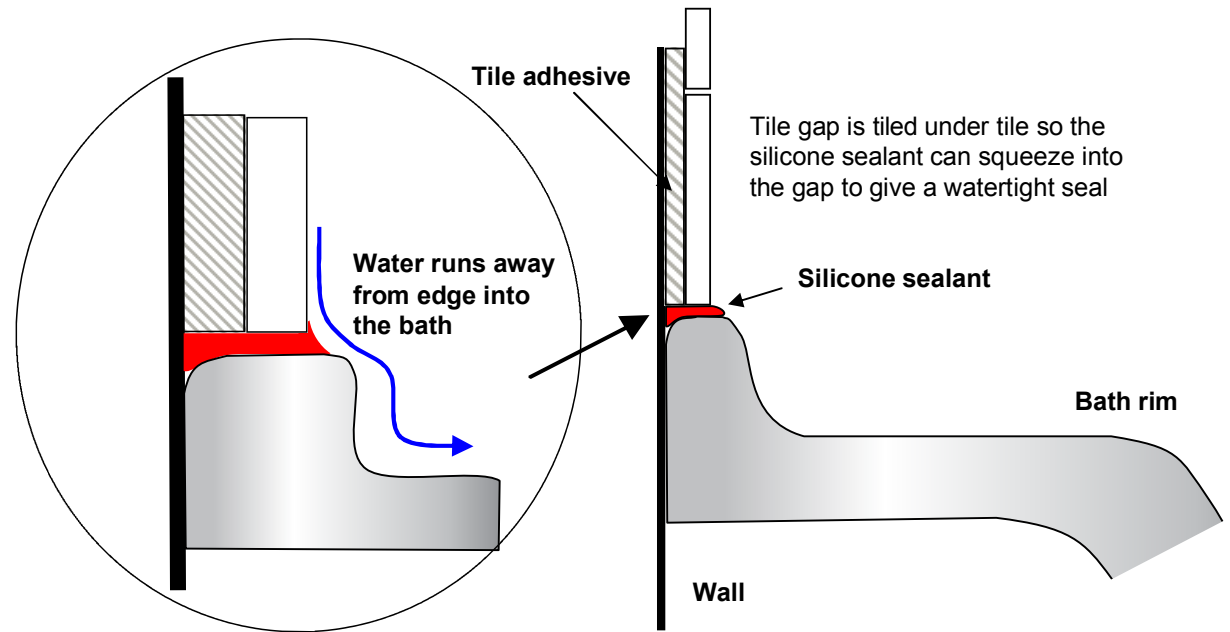

Tiling the wall above the bath Plan the tiling to end neatly on top of the upstand

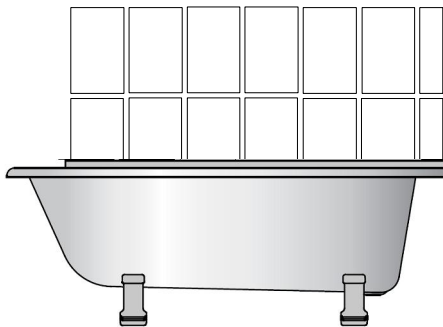


Tiling the whole wall The bath should be placed in a position and the wall marked up with the bath rim position. Remove the bath and tile the under bath area. Complete the rest of the tiling except for the first row of tiles above the bath. Fit the bath and then complete the tiling.

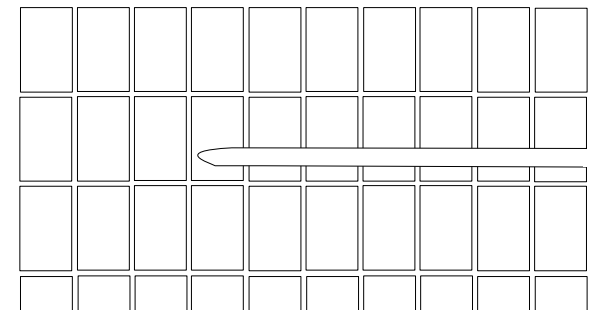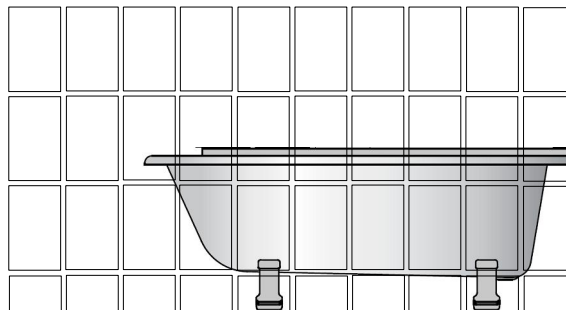

• THIS IS A SUGGESTED TAP HOLE DRILLING GUIDE ONLY. THE DECK MOUNTING UNIONS ENABLE THE TAP CENTRES TO BE DRILLED BETWEEN 60MM AND 300MM. THE FINAL DECISION MUST BE MADE ONSITE DEPENDING ON THE DESIRED LOCATION OF THE PRODUCT.

• IN THE EVENT THAT YOU ARE USING DECK MOUNTED TAPS THEN YOU SHOULD DRILL THE TAP HOLES IN THE POSITION MARKED ABOVE.

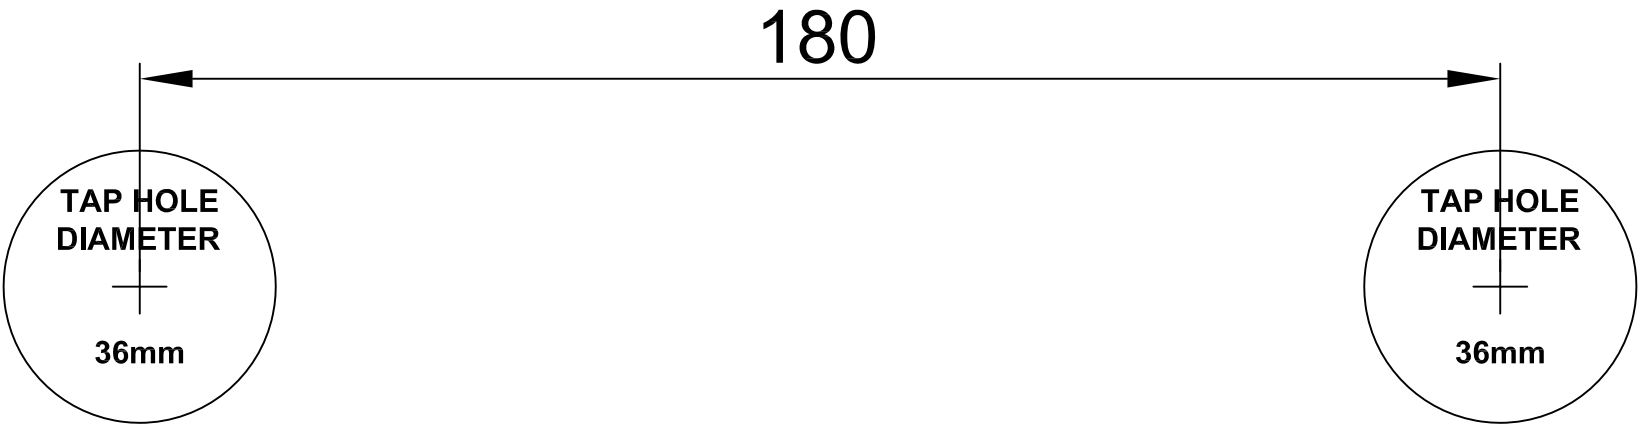


• **EVERY BATH REQUIRES AN OVERFLOW.**

IN THE EVENT THAT YOU ARE NOT USING THE INVISIBLE OVERFLOW OR EXTERNAL OVERFLOW THEN YOU SHOULD DRILL IN THE POSITION MARKED BELOW.

NOTE: BEFORE DRILLING
ENSURE HOLE IS CENTRED TO WASTE HOLE
AFTER DRILLING
APPLY 100% SILICON SEALANT AT THE CUTTING EDGE OF THE OVERFLOW HOLE.

FIT TO MATCH TOP EDGE OF TUB

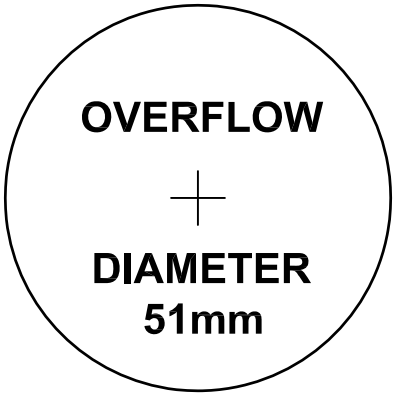

Buckingham Slipper – E6
Hampton shower bath 170 – E13 E14
Hampton shower bath 150 – E20 E21

Important: The product should only be installed by a suitably qualified plumber/installer.

Cosmetic repairs to your bath

Should you be unfortunate enough to suffer cosmetic damage to your bath during installation or accidentally at any time, these can usually be rectified quite easily by using a fine grade abrasive waterproof paper. Lightly rub the affected area by keeping the area treated to a minimum until the mark is removed, then polish a neutral car colour restorer or a household metal polish to restore the luster.

Other marks on your bath both internally or externally can generally be removed with a non abrasive bathroom cleaner or mild detergent. Should this not be the case then please revert to colour restorer or household metal polish.

Ongoing care of your bath

Use only non abrasive cleaners as abrasives over a period of time will remove the luster from your bath.

Warning

Never use cleaners / bleach products specifically manufactured for WC bowl cleaning as they may damage your bath. Bath mat or suction pad might cause damage to the surface over time and must be avoided.