



CLASSIQUE

Burlington®

Hinged Bath Screen with Access Door

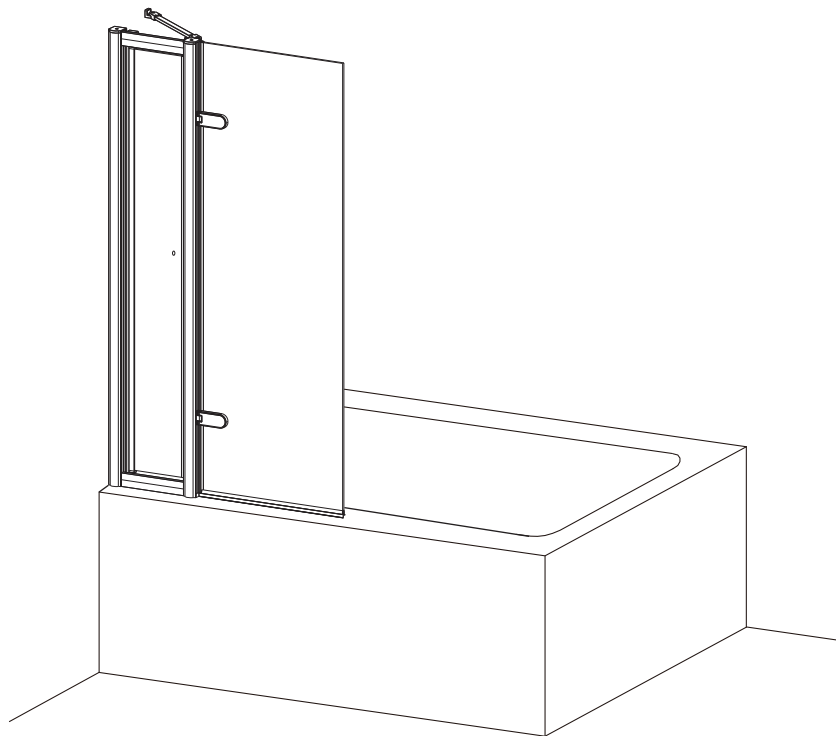

CQ1909PRFNx CQ1850PRFNx

Optional profile finial
(not supplied with bath screen)



CQ1909BSHDBPx CQ1850BSHDBPx

Optional handle
(not supplied with bath screen)

PRODUCT CODES:

CQBSILADC0850

CQBSILADGC0850

CQBSILADL0850

1. Pre-Installation Checklist

☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Bathtub **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

⚠ Safety Notes:

- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

2. Unpacking & Components

Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

Missing/Damaged Parts?

Contact Bathroom Brands immediately: ☎0345 873 8840.

3. Step-by-Step Installation

A. Frame Assembly

1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×4 total).
- Cover ends with profile caps if any.

B. Door Installation

3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

C. Final Checks

5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

4. Care & Maintenance







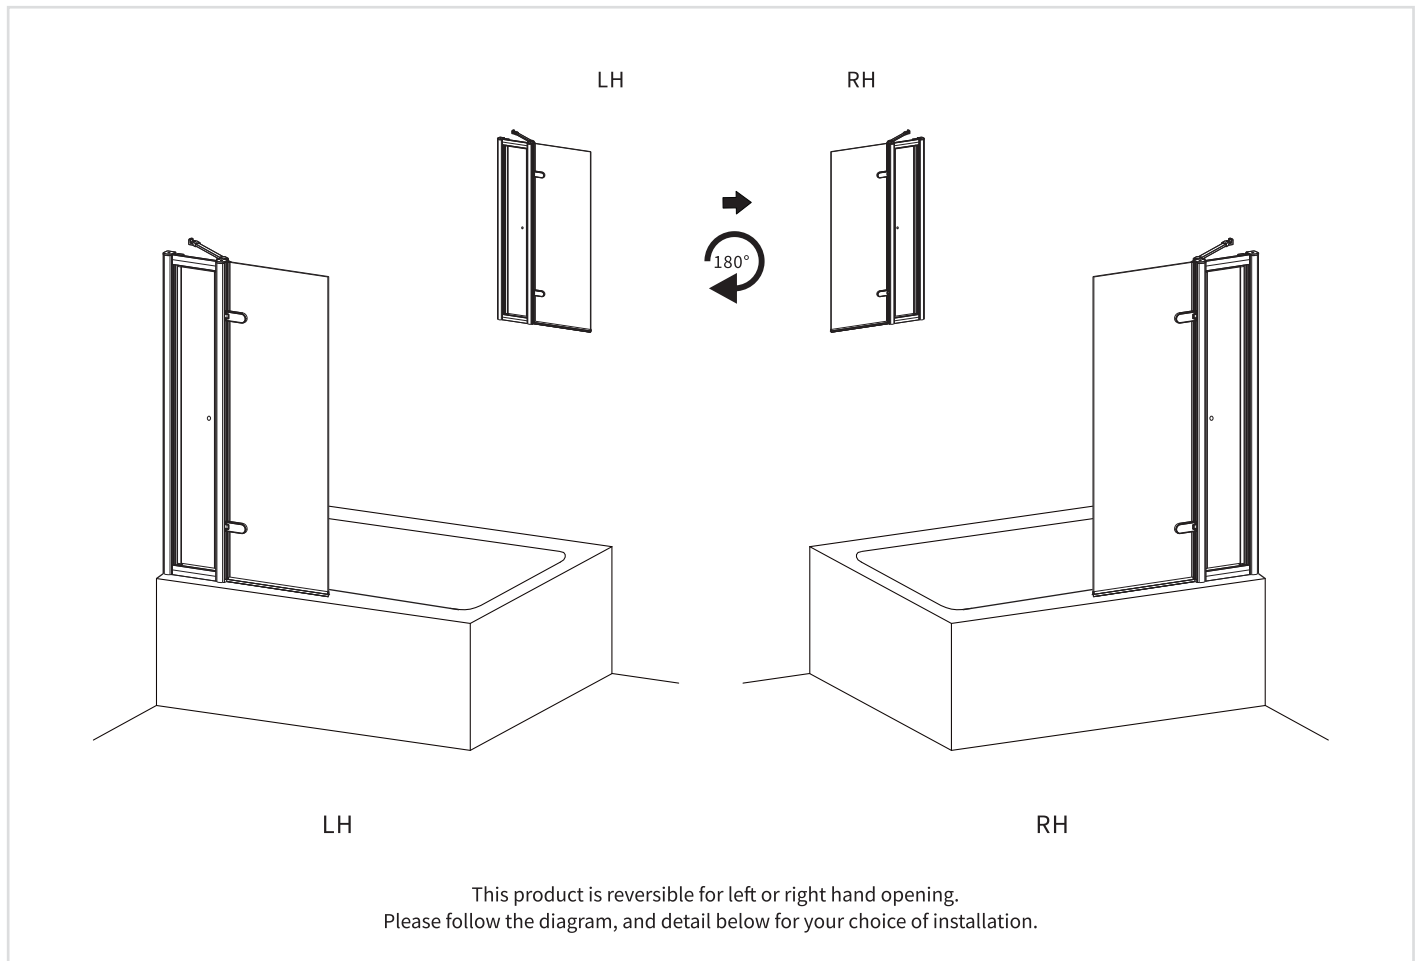


- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.

Ensure seals are flush to prevent leaks.


ORIENTATION



Tools Required (not supplied):

Spirit Level		Torque Screw Driver	
Pencil		Snips	
Drill		6mm Drill Bit	
Silicone		Measuring Tape	
Knife			


COMPONENTS

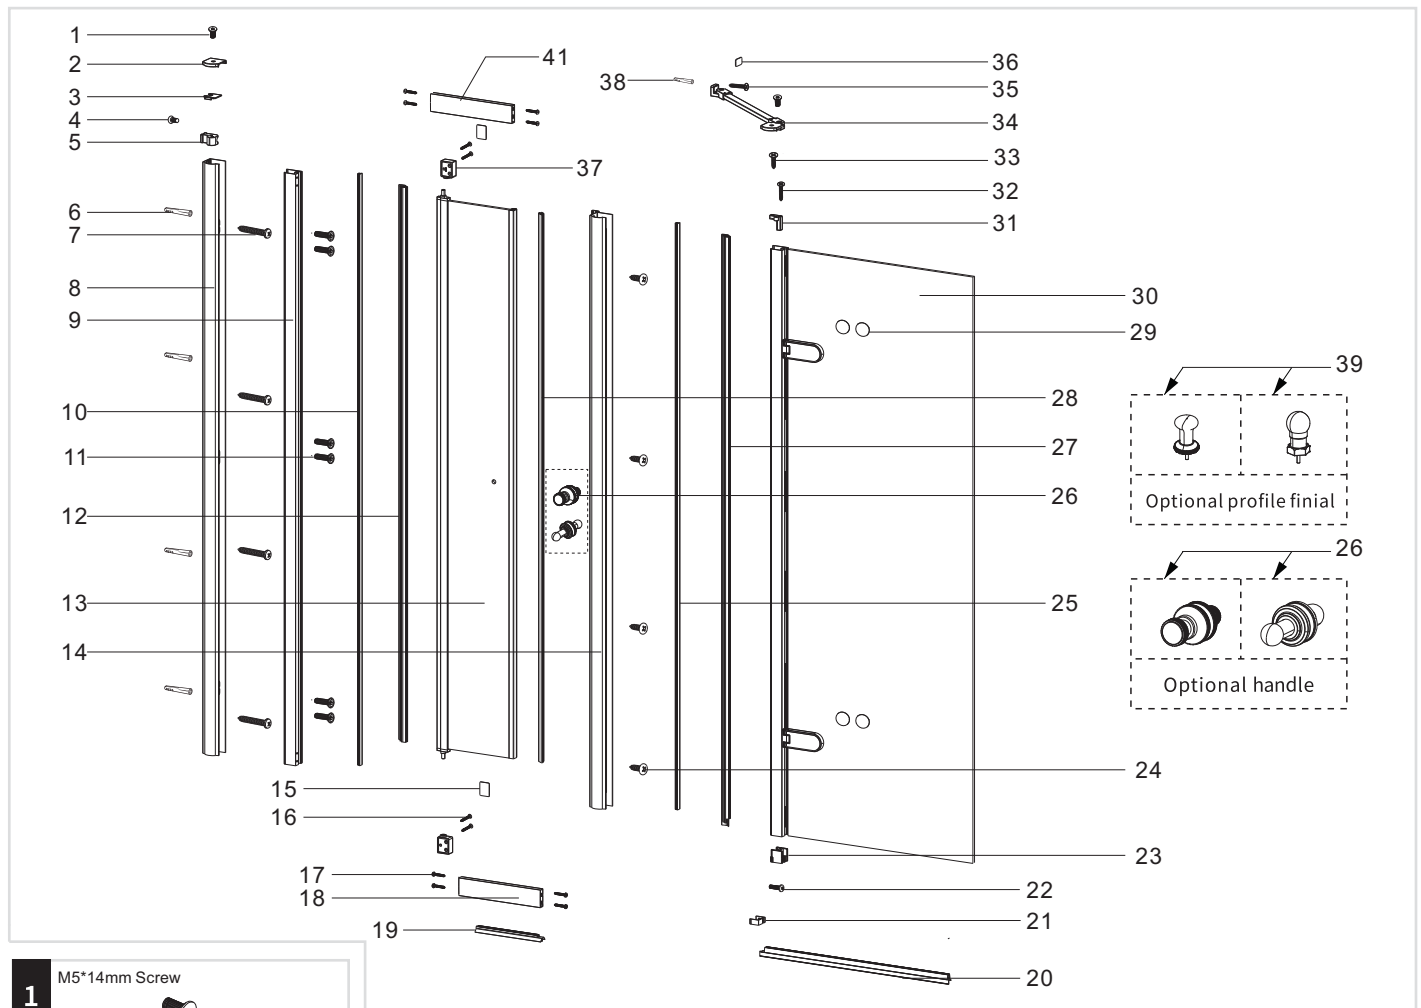

1	M5*14mm Screw	x2	3	Adjustment Profile Cap	x1	4	M4*12mm Screw	x1	5	Fixing Part Of Profile Cap	x1
2	Wall Profile Cap	L x1 R x1	7	ST4*50mm Screw	x4	8	Wall Profile	x1	9	Adjustment Profile	x1
6	Wall Plug	x4	11	M5*30mm Screw	x6	12	Vertical Door Seal	1405mm x1	13	Access Door	x1
10	Profile Cover	1500mm x1	15	Access Door Pivot Seat Cap	x2	16	ST4*25mm Screw	x4	17	ST4*30mm Screw	x8
14	Door Profile	x1	18	Rail A	x1	19	Bottom Seal	x1	21	Cover Cap	x1
22	M4*10mm Screw	x1	23	Gasket	x1	24	ST4*8mm Screw	x4	25	Profile Cover	1487mm x1
26	Optional Handle	x1	27	Vertical Door Seal	1520mm x1	28	Magnetic Seal	x1	29	Hinge Cap	x4
30	Moving Door	x1	31	Fixing Part Of Bracing Bar	Lx1 Rx1	32	ST4*50mm Screw	x1	33	ST4*30mm Screw	x1
34	Bracing Bar	x1	35	ST4*50mm Screw	x1	36	Screw Cap Of Bracing Bar	x1	37	Access Door Pivot seat	x2
38	Wall Plug	x1	39	Optional Profile Final	x2	40	Allen Key	4mm 3mm 2.5mm	41	Rail B	x1


1

TOP


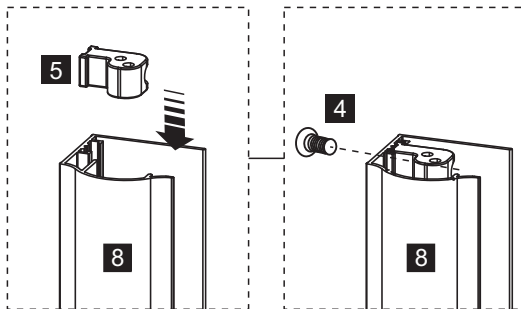


Product	X(mm)
Classique Hinged Bath Screen with Access Door 850	850-870





INSIDE

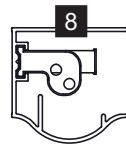

OUTSIDE

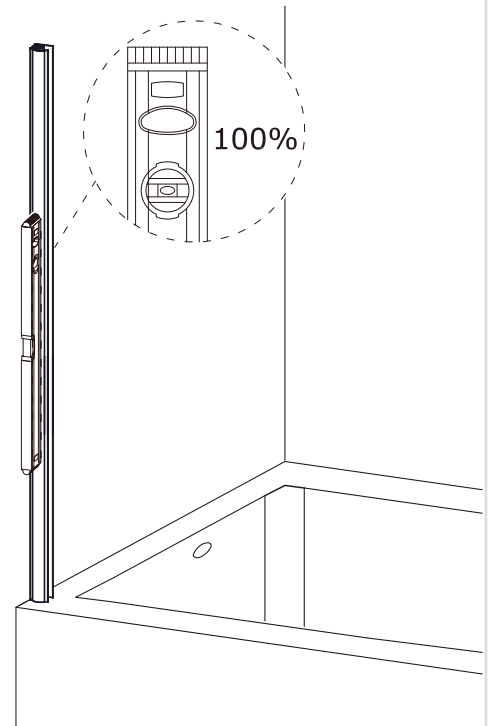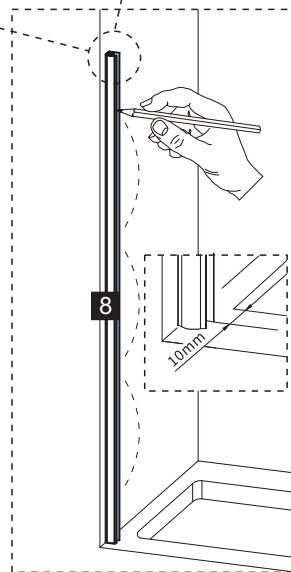



2

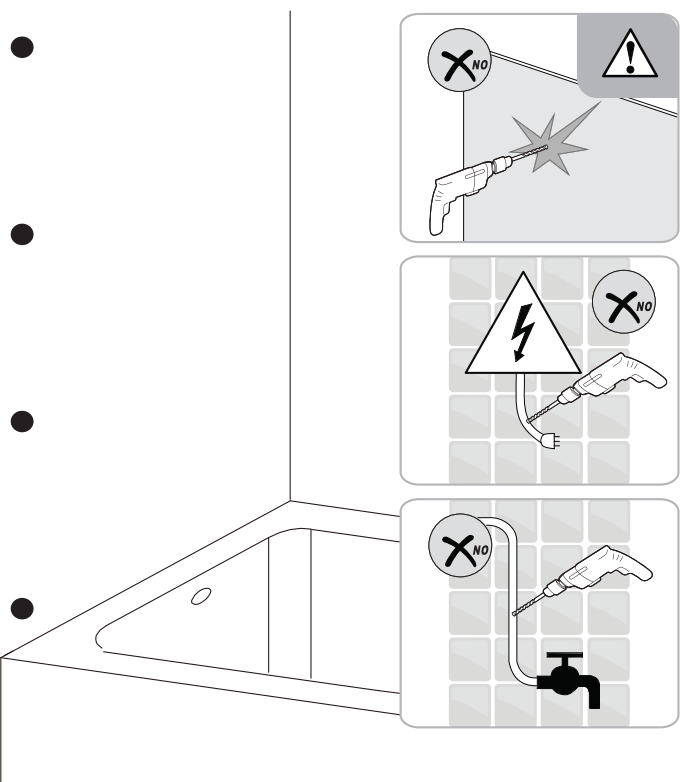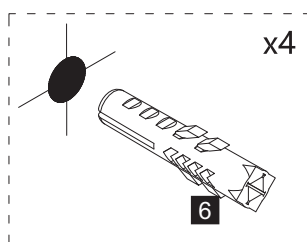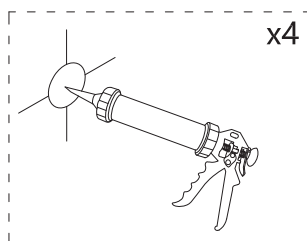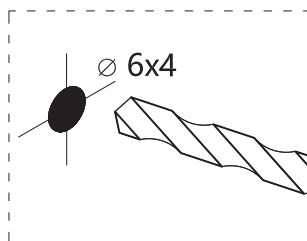

INSTALLATION

Burlington®


3

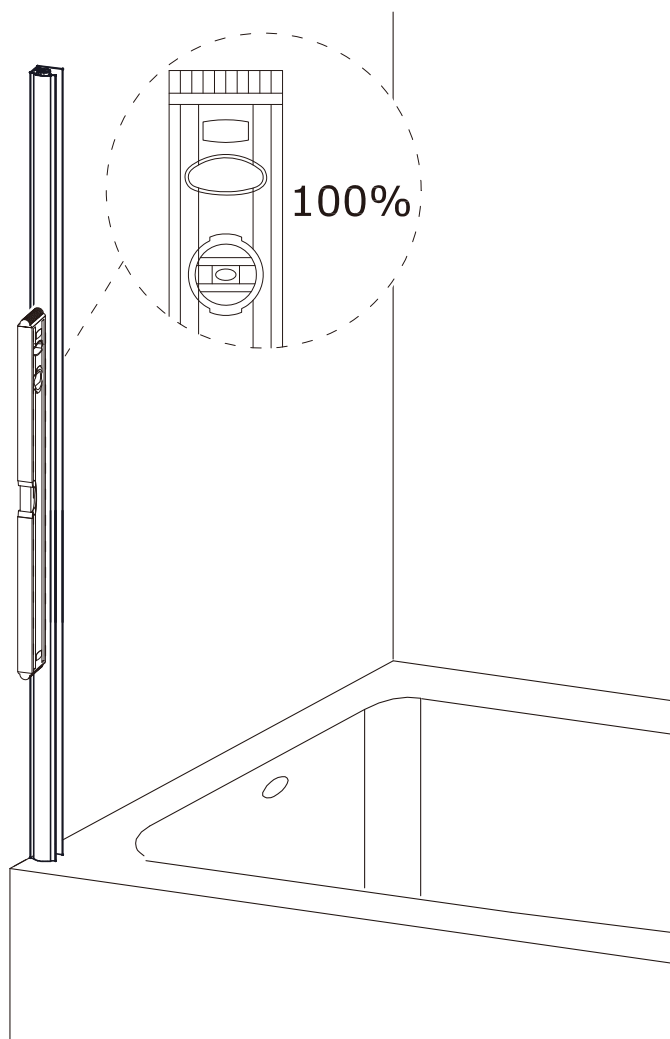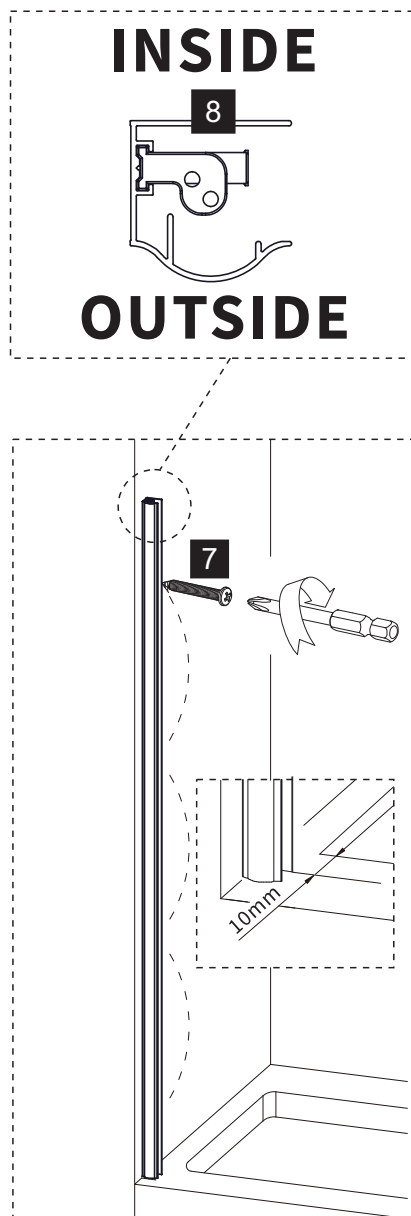

INSTALLATION

Burlington®



4

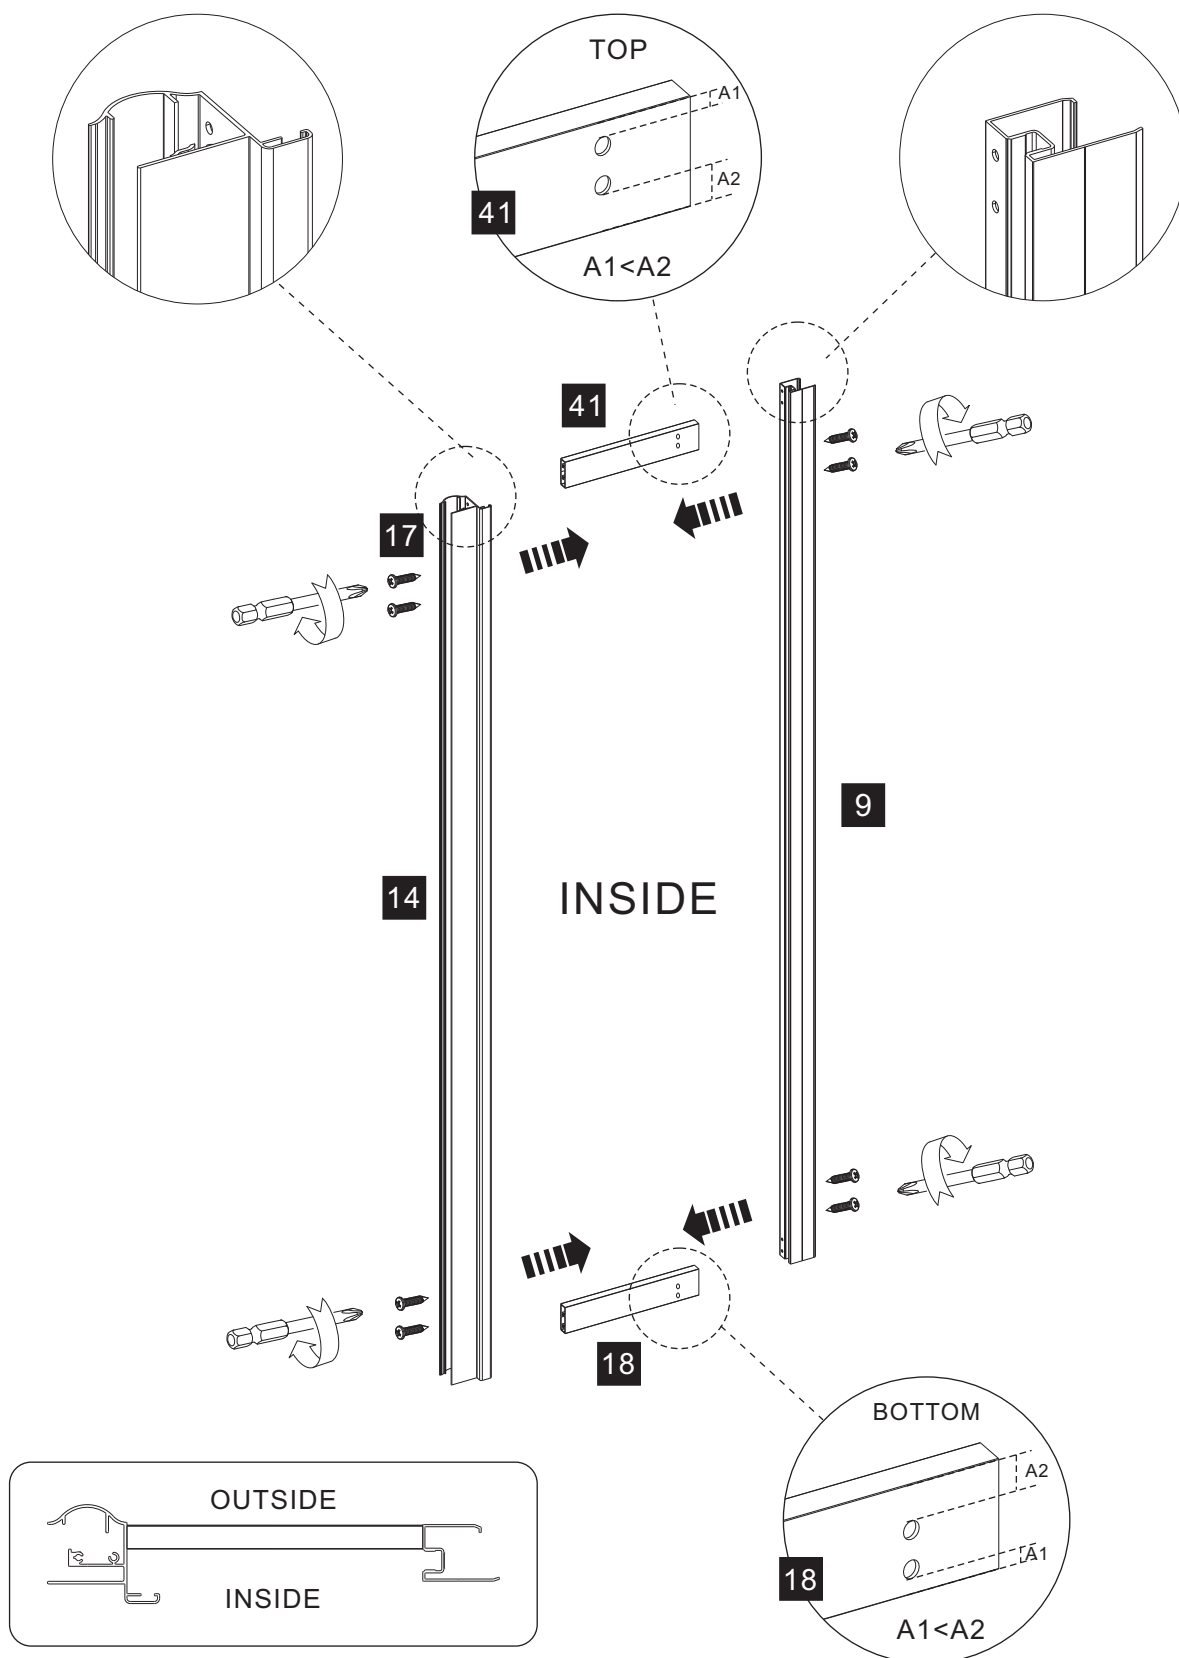







INSTALLATION

Burlington®

5

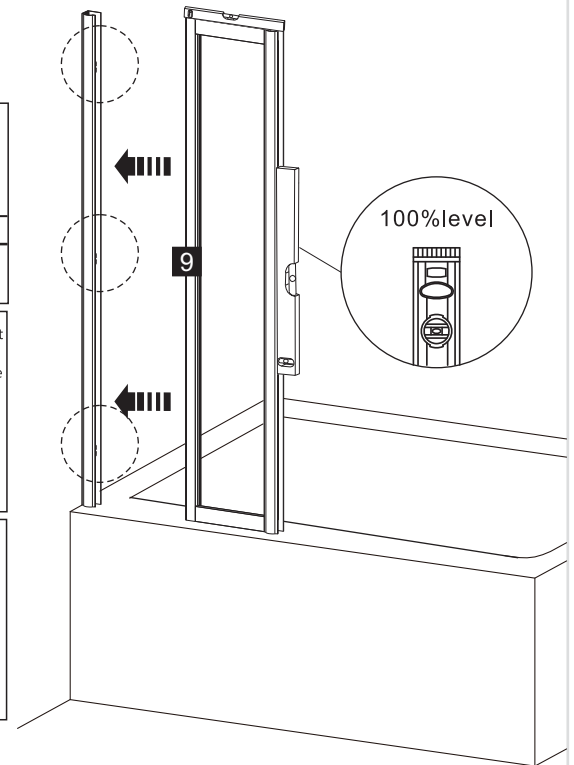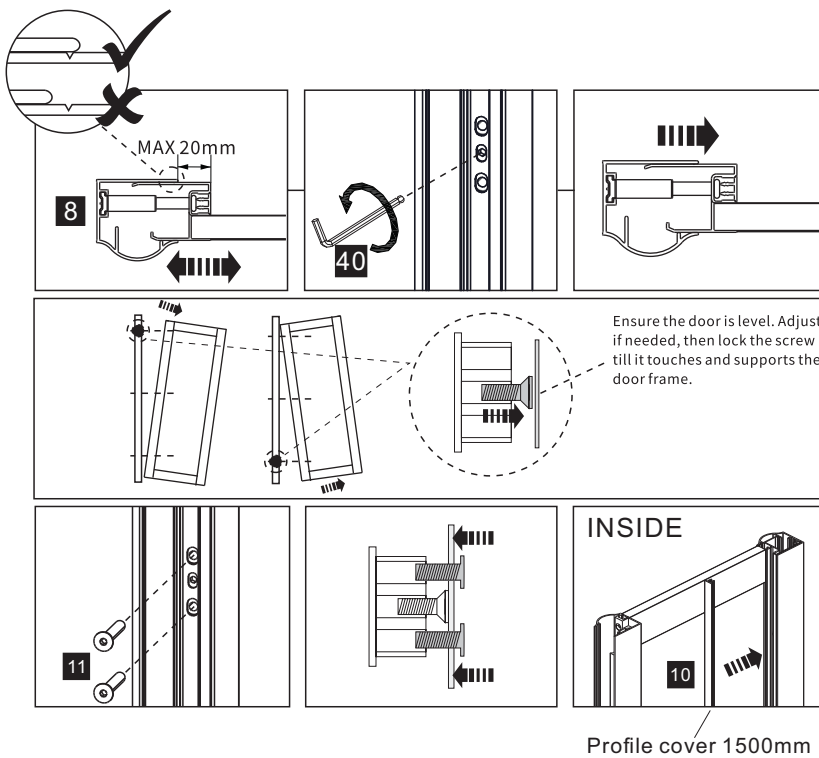


6

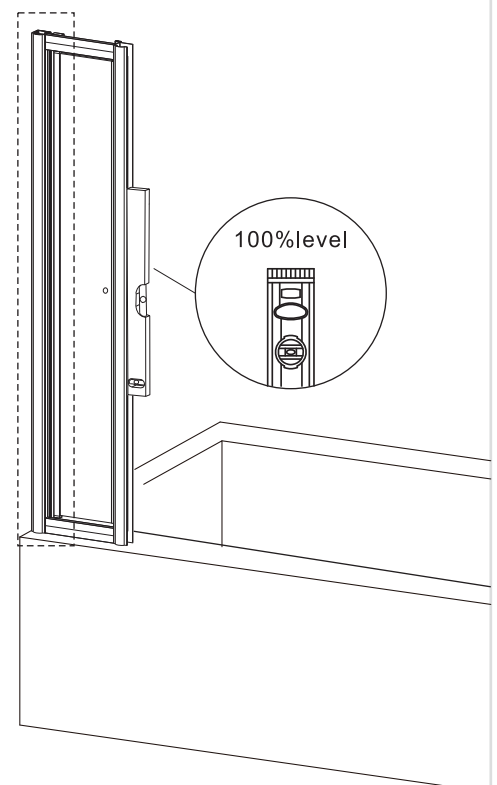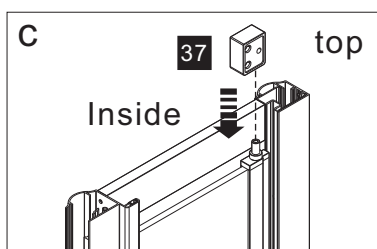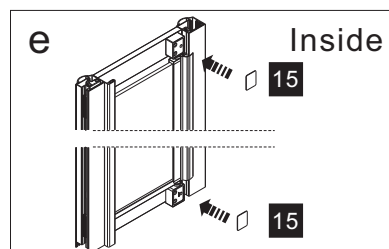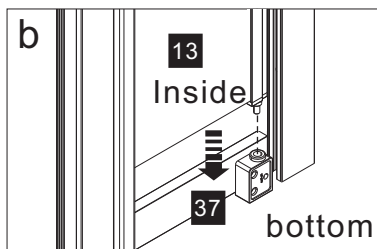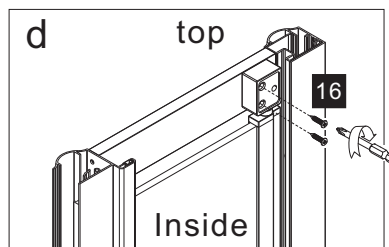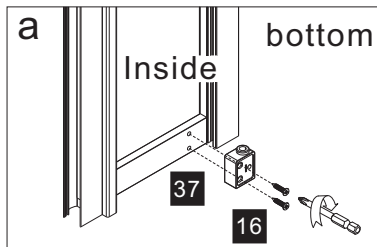


INSTALLATION

Burlington®

7

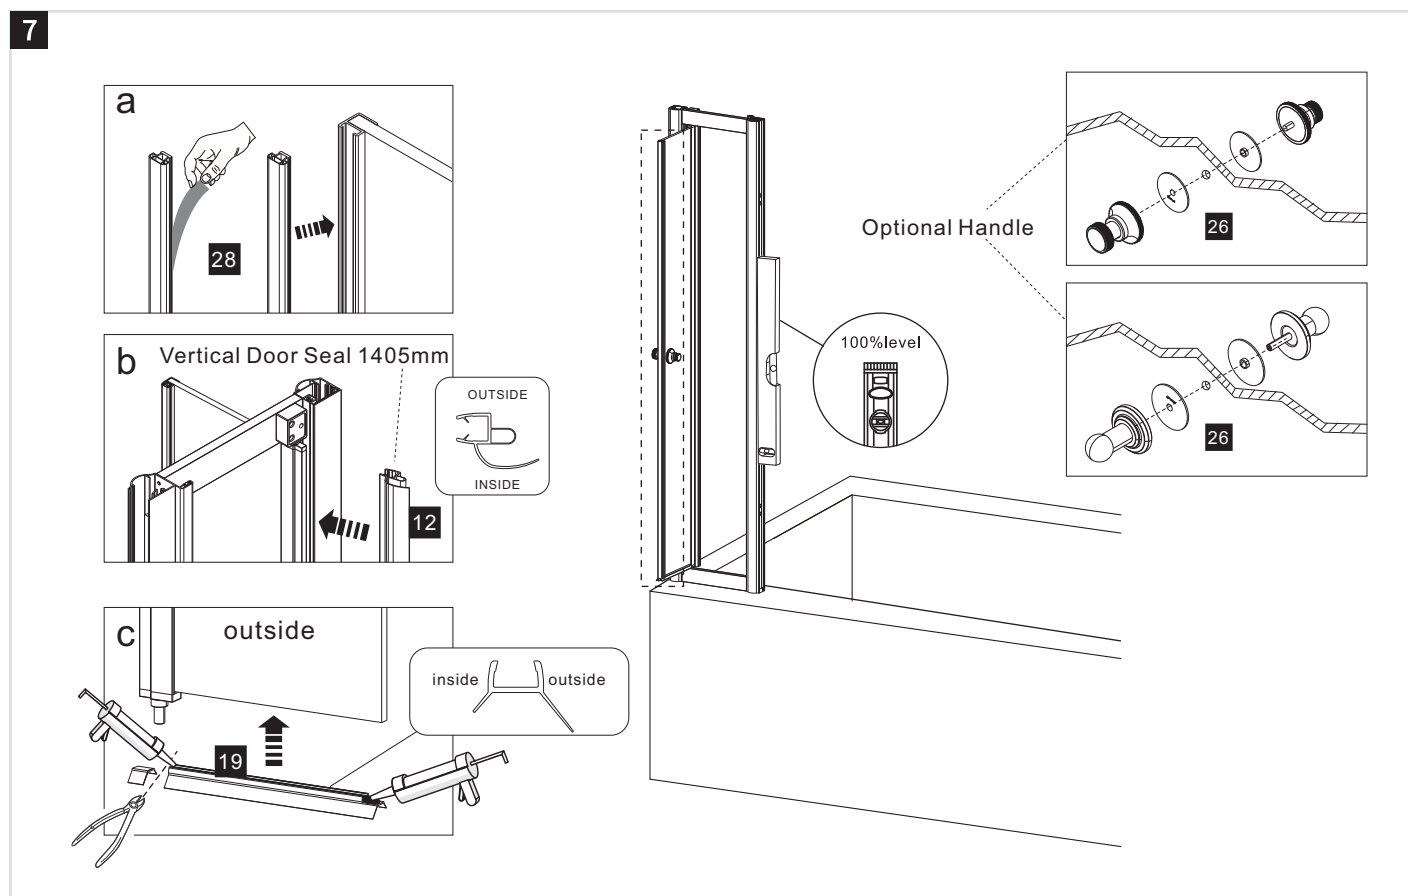




8

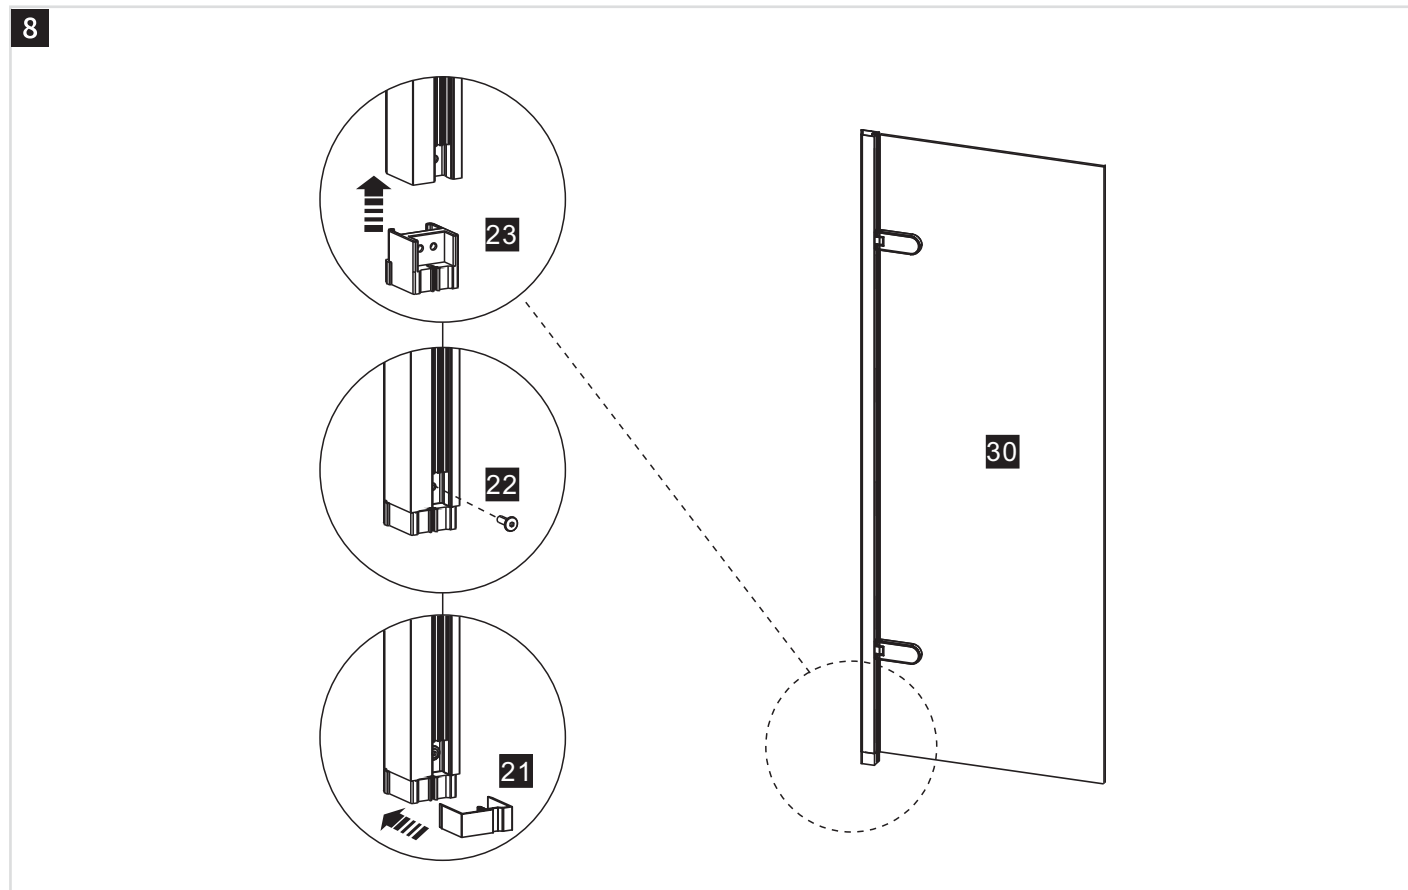


INSTALLATION

Burlington®




9

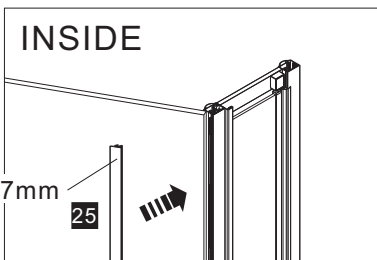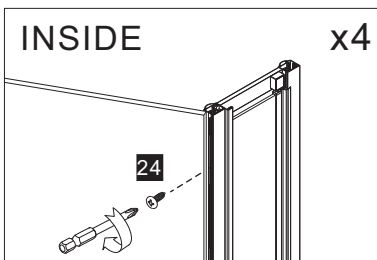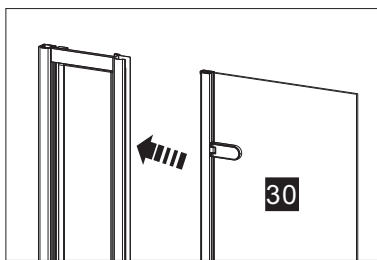

Profile cover 1487mm

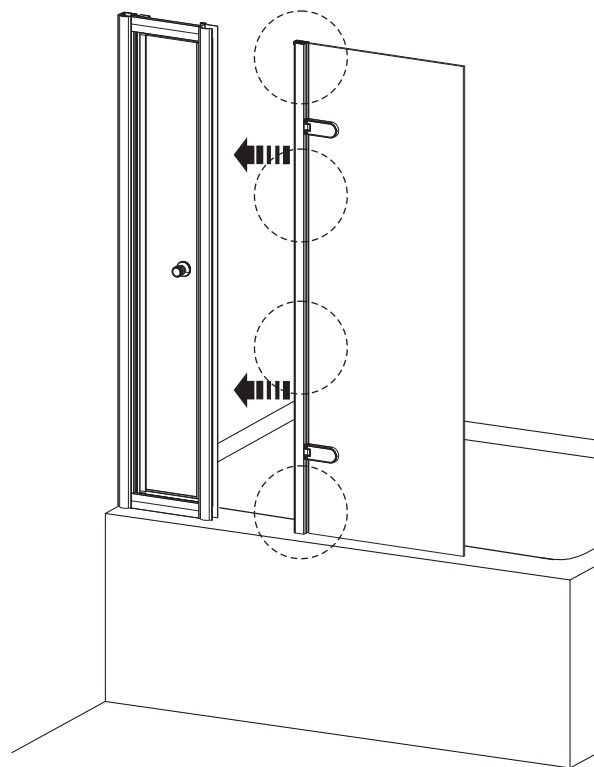


10

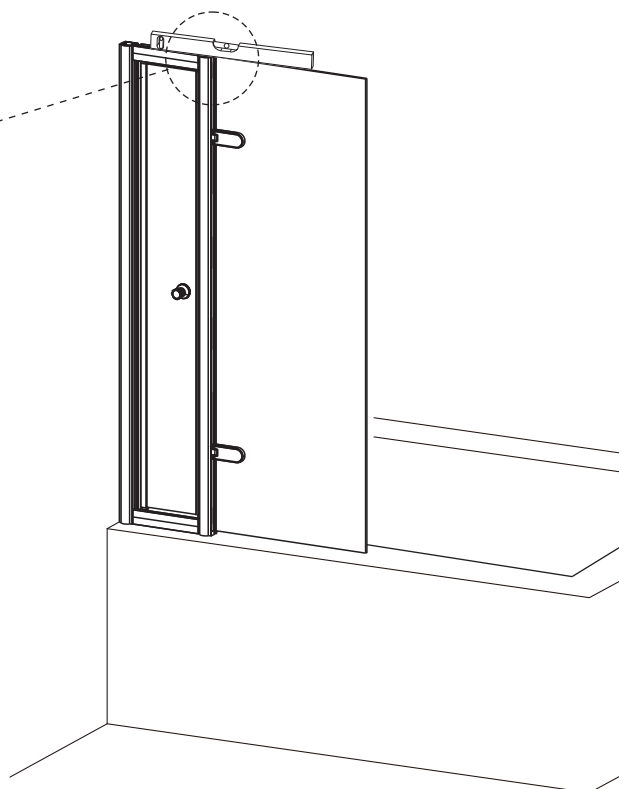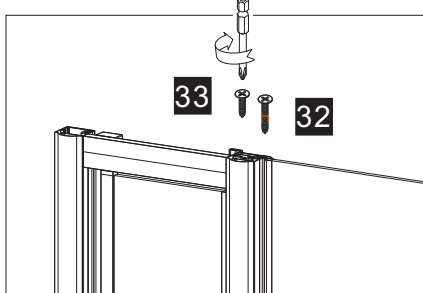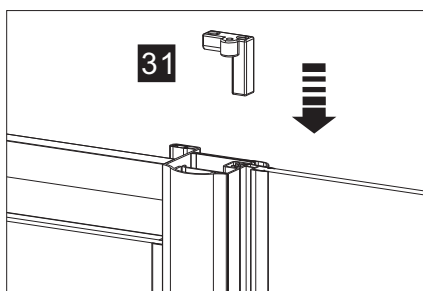


INSTALLATION

11

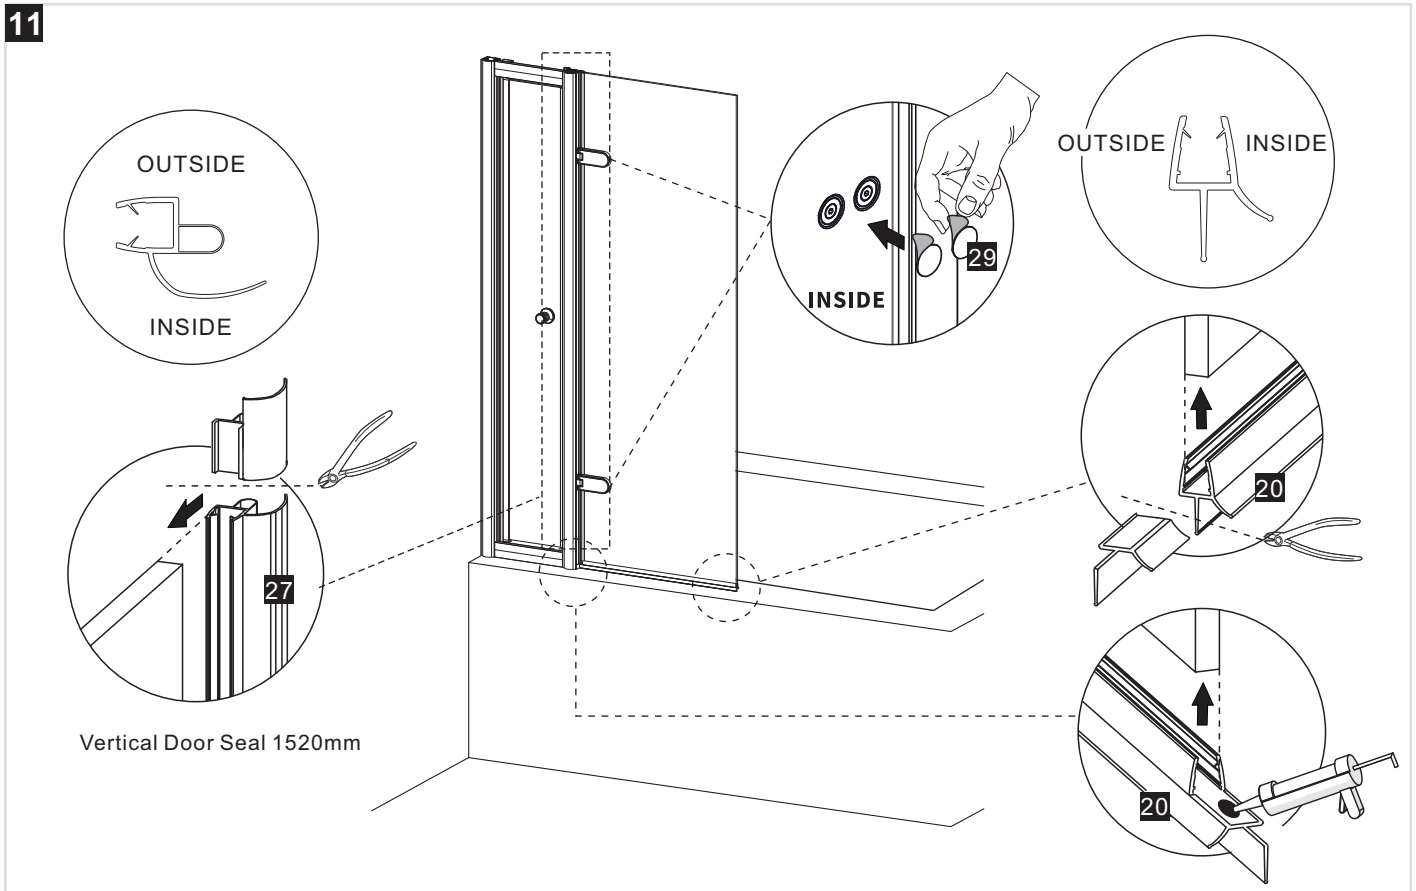








12

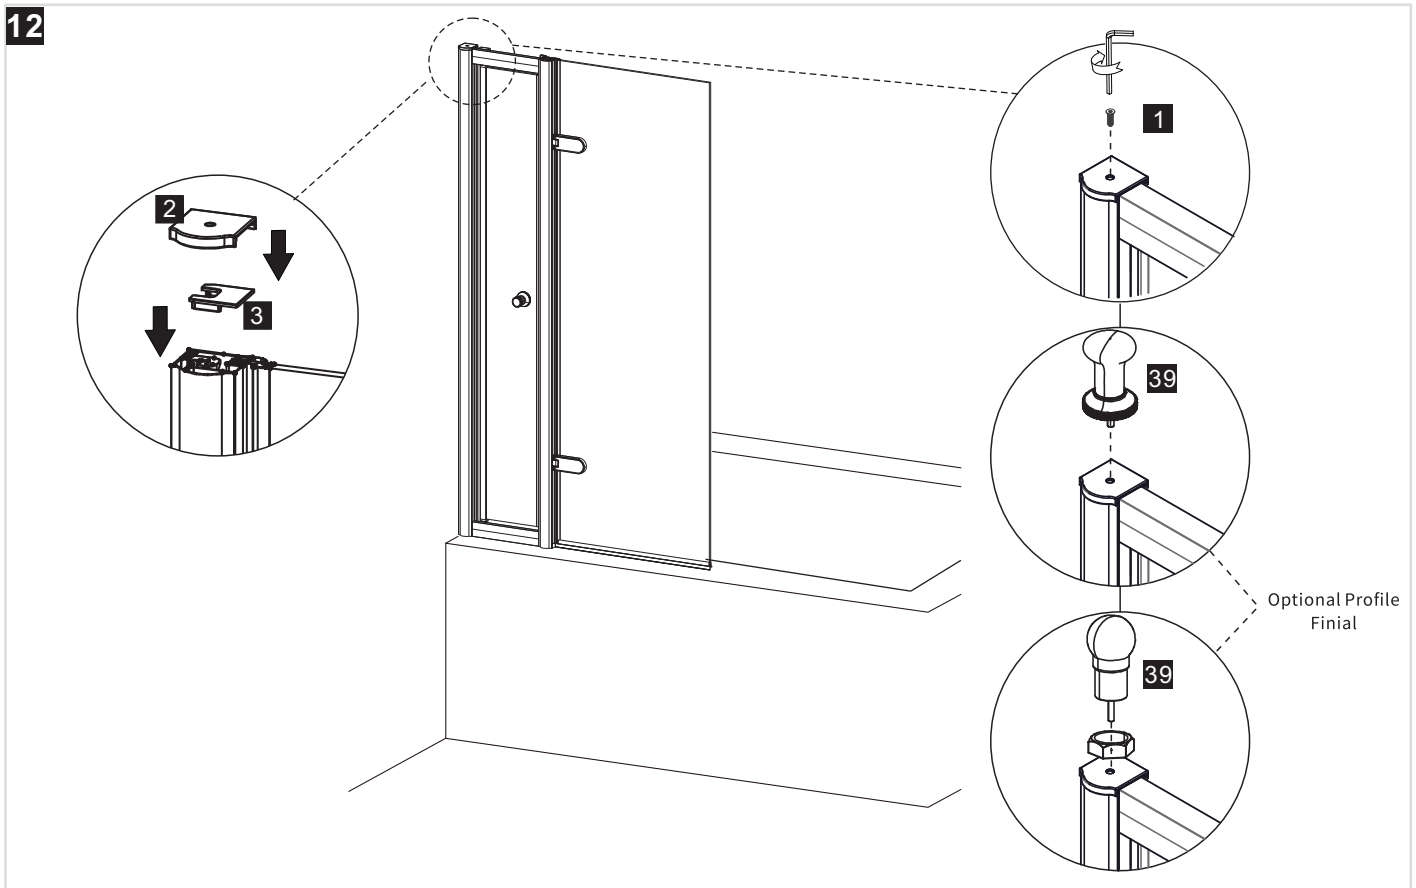


INSTALLATION

Burlington®


13

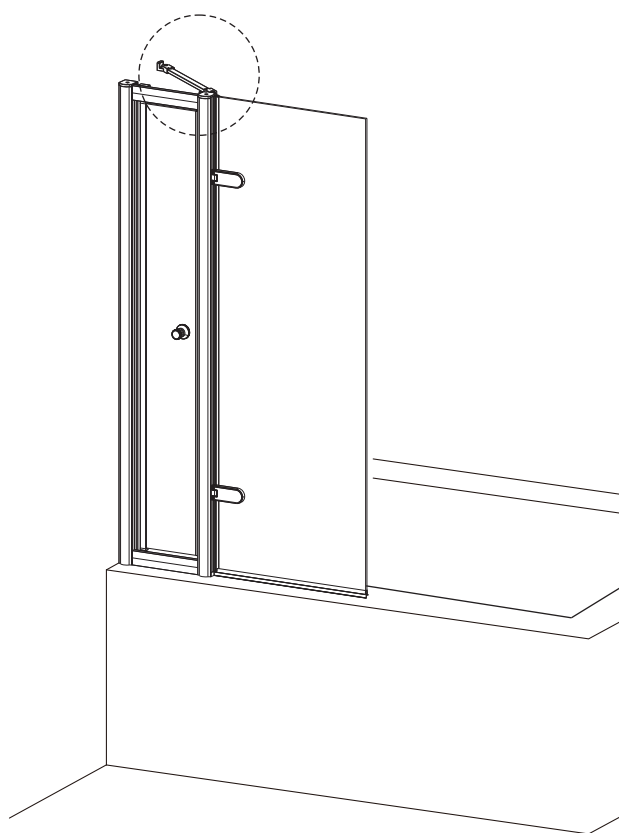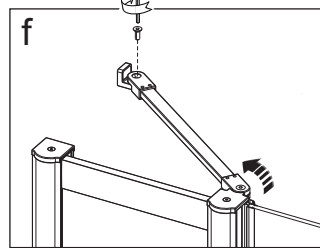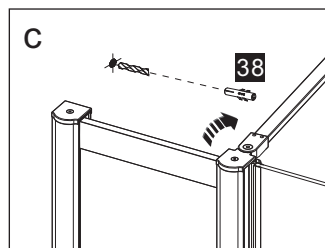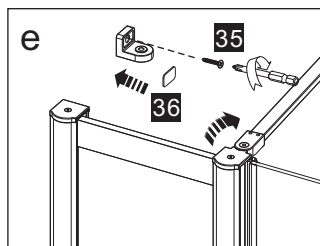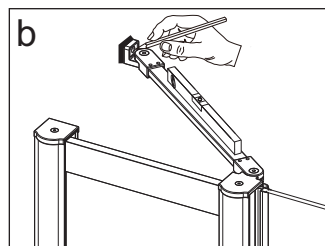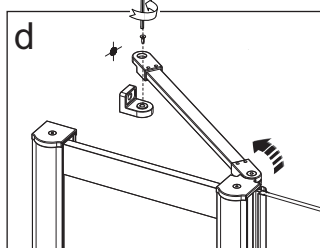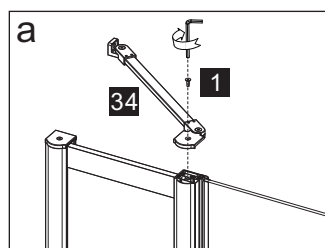

14

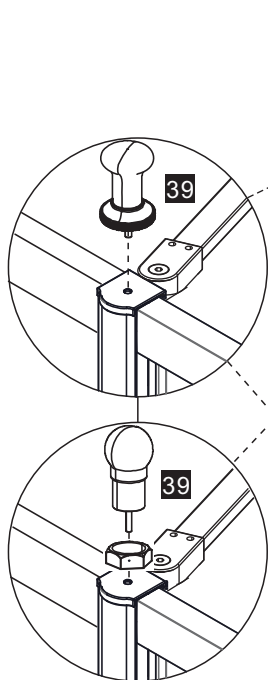


Optional Profile
Finial

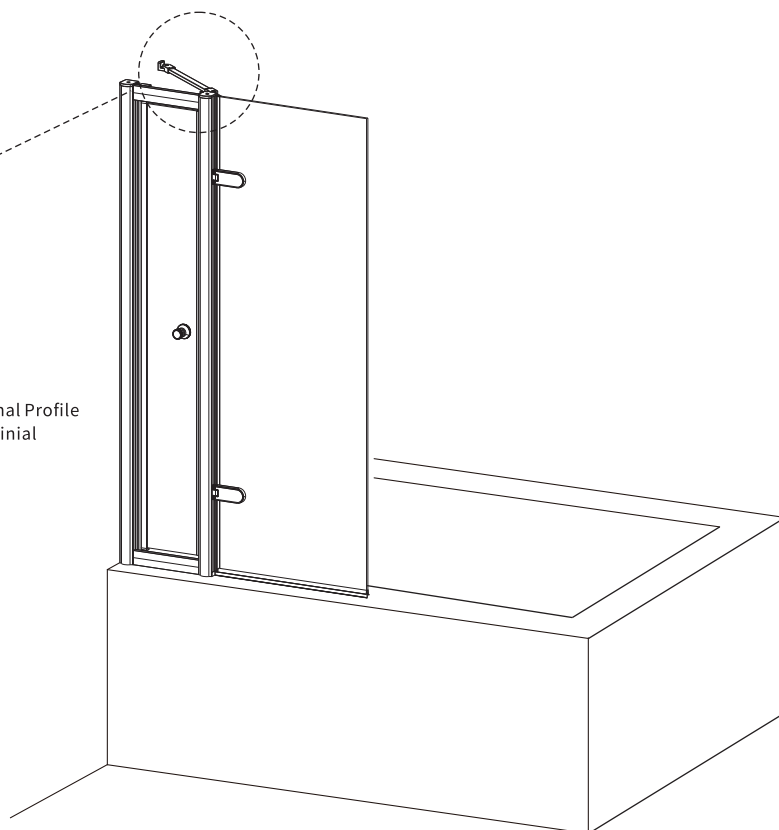

INSTALLATION

Burlington®

15

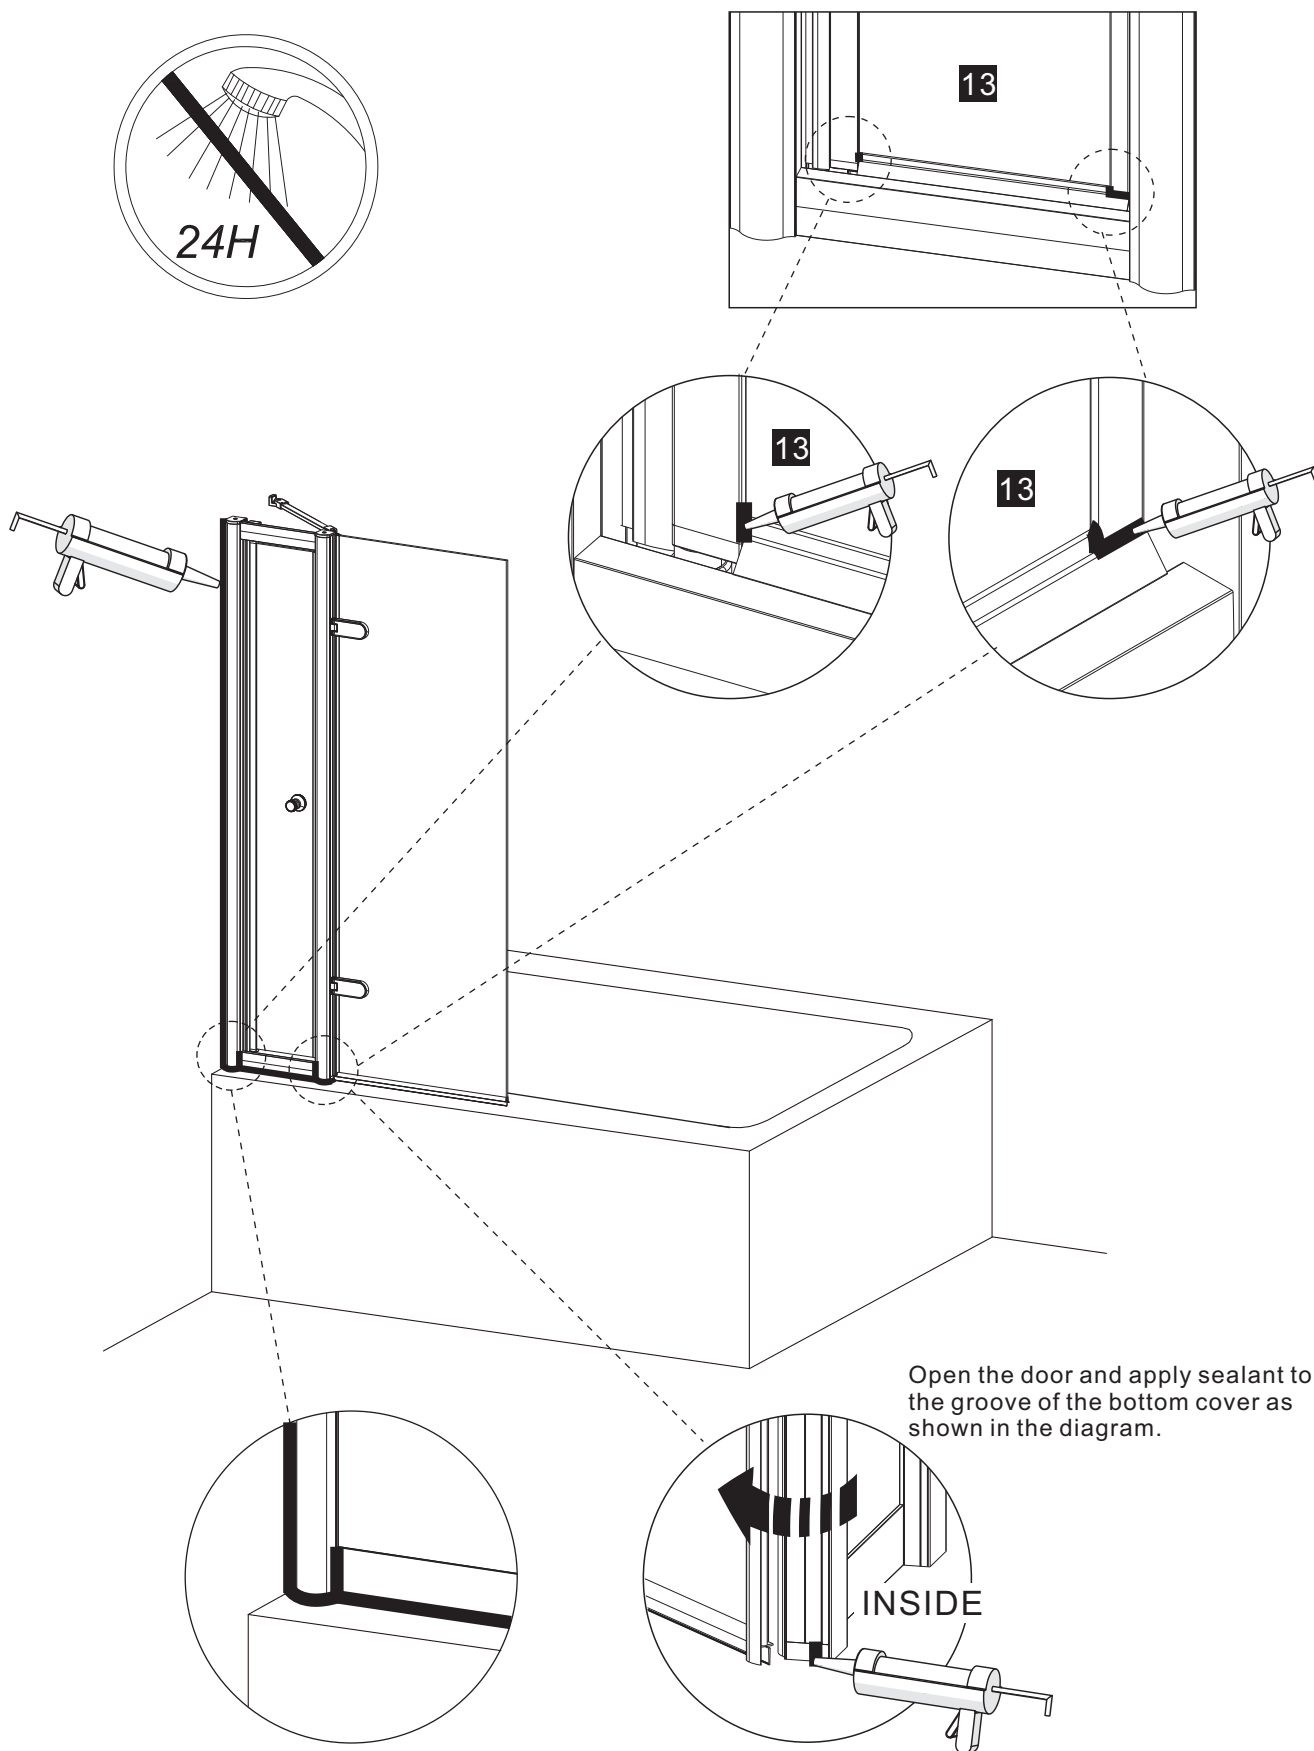

Burlington[®]

Burlington[®]

Part of the
Bathroom Brands Group

We reserve the right to make technical modifications without prior notice.

Burlington[®]

Lake View House
Rennie Drive, Dartford
Kent DA1 5FU
United Kingdom
0345 873 8840
www.crosswater.co.uk