



CLASSIQUE

Hinged Door & Side Panel

Burlington®

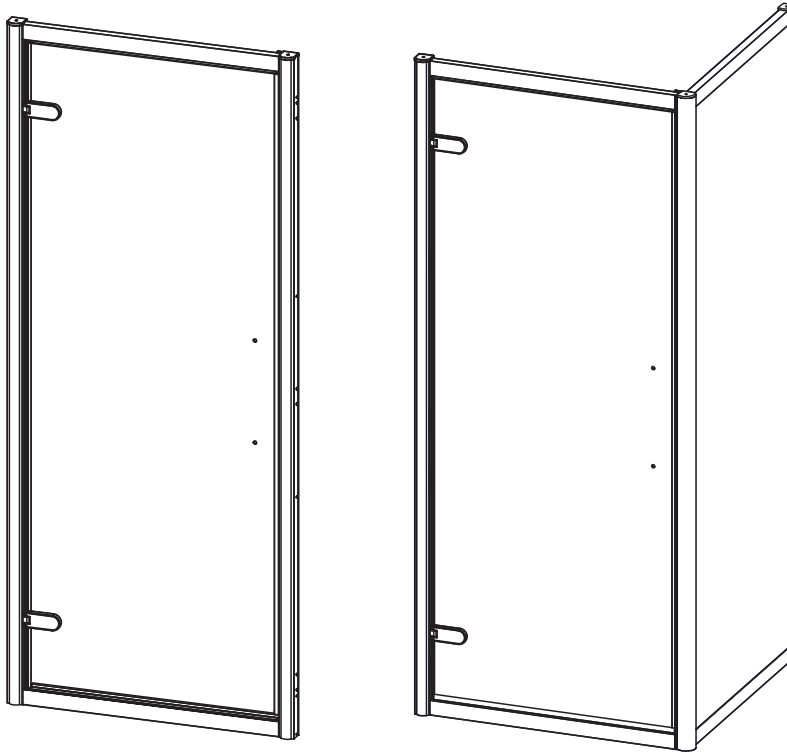

Optional handle & profile finial (not supplied with shower doors)

PRODUCT CODES:

CQHDSC0800
CQHDSC0900
CQHDSC1000
CQHDGC0800
CQHDGC0900
CQHDGC1000
CQHDL0800
CQHDL0900
CQHDL1000

CQSPSC0800
CQSPSC0900
CQSPGC0800
CQSPGC0900
CQSPLC0800
CQSPLC0900

CQ1909HDFNC	CQ1850HDFNC
CQ1909HDFNG	CQ1850HDFNG
CQ1909HDFNL	CQ1850HDFNL
CQ1909PRFNC	CQ1850PRFNC
CQ1909PRFNG	CQ1850PRFNG
CQ1909PRFNL	CQ1850PRFNL
CQ1909HDFNBPC	CQ1850HDFNBPC
CQ1909HDFNBPG	CQ1850HDFNBPG
CQ1909HDFNBPL	CQ1850HDFNBPL

1. Pre-Installation Checklist

☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Shower tray **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

⚠ Safety Notes:

- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

2. Unpacking & Components

Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

Missing/Damaged Parts?

Contact Bathroom Brands immediately: ☎0345 873 8840.

3. Step-by-Step Installation

A. Frame Assembly

1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×8 total).
- Cover ends with profile caps if any.

B. Door Installation

3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

C. Final Checks

5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

4. Care & Maintenance

- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.

Ensure seals are flush to prevent leaks.


ORIENTATION

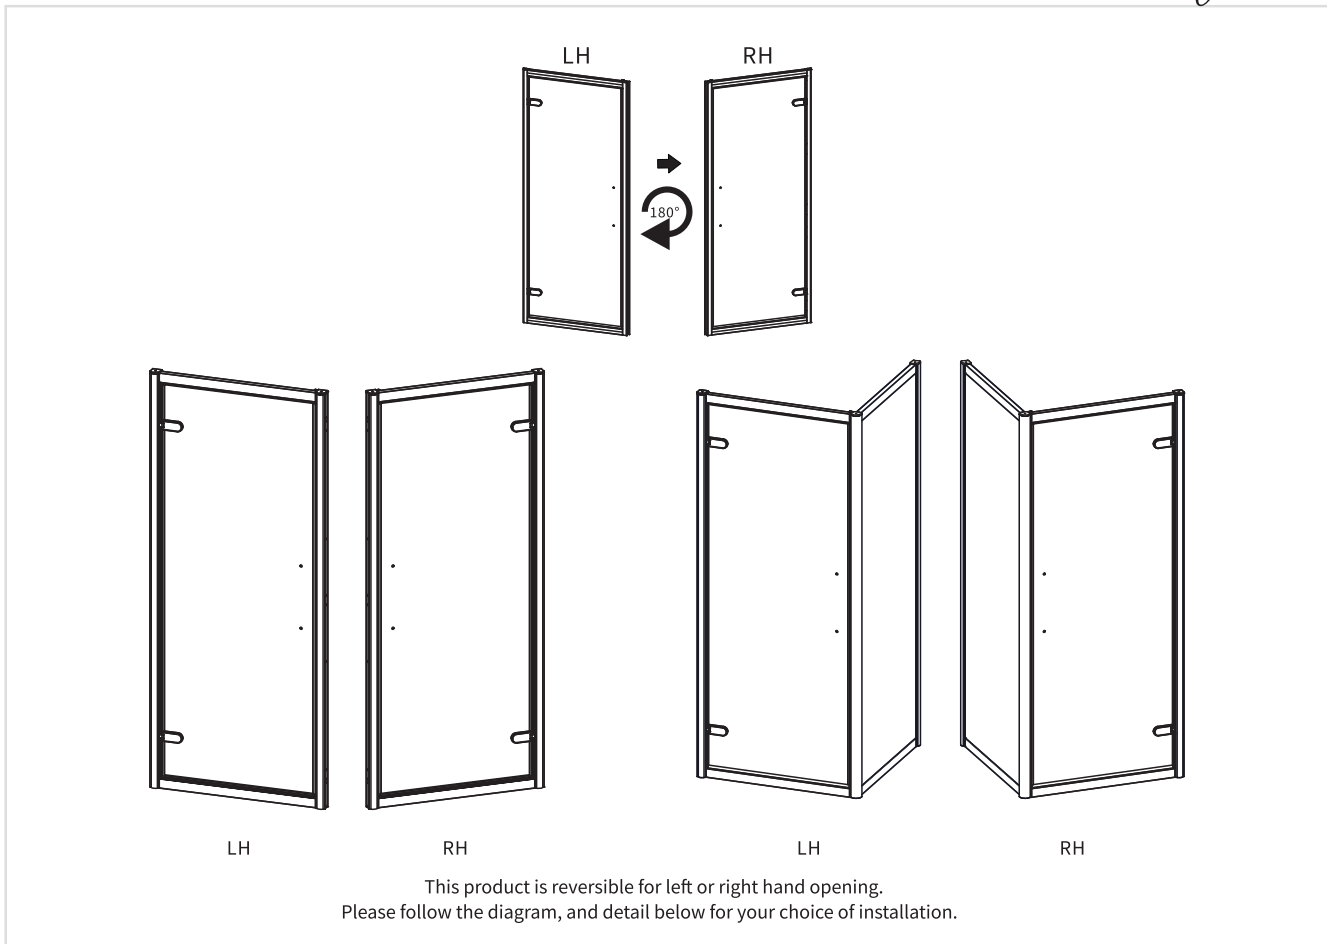

Tools Required (not supplied):

Spirit Level		Torque Screw Driver	
Pencil		Snips	
Drill		6mm Drill Bit	
Silicone		Measuring Tape	
Knife			





COMPONENTS

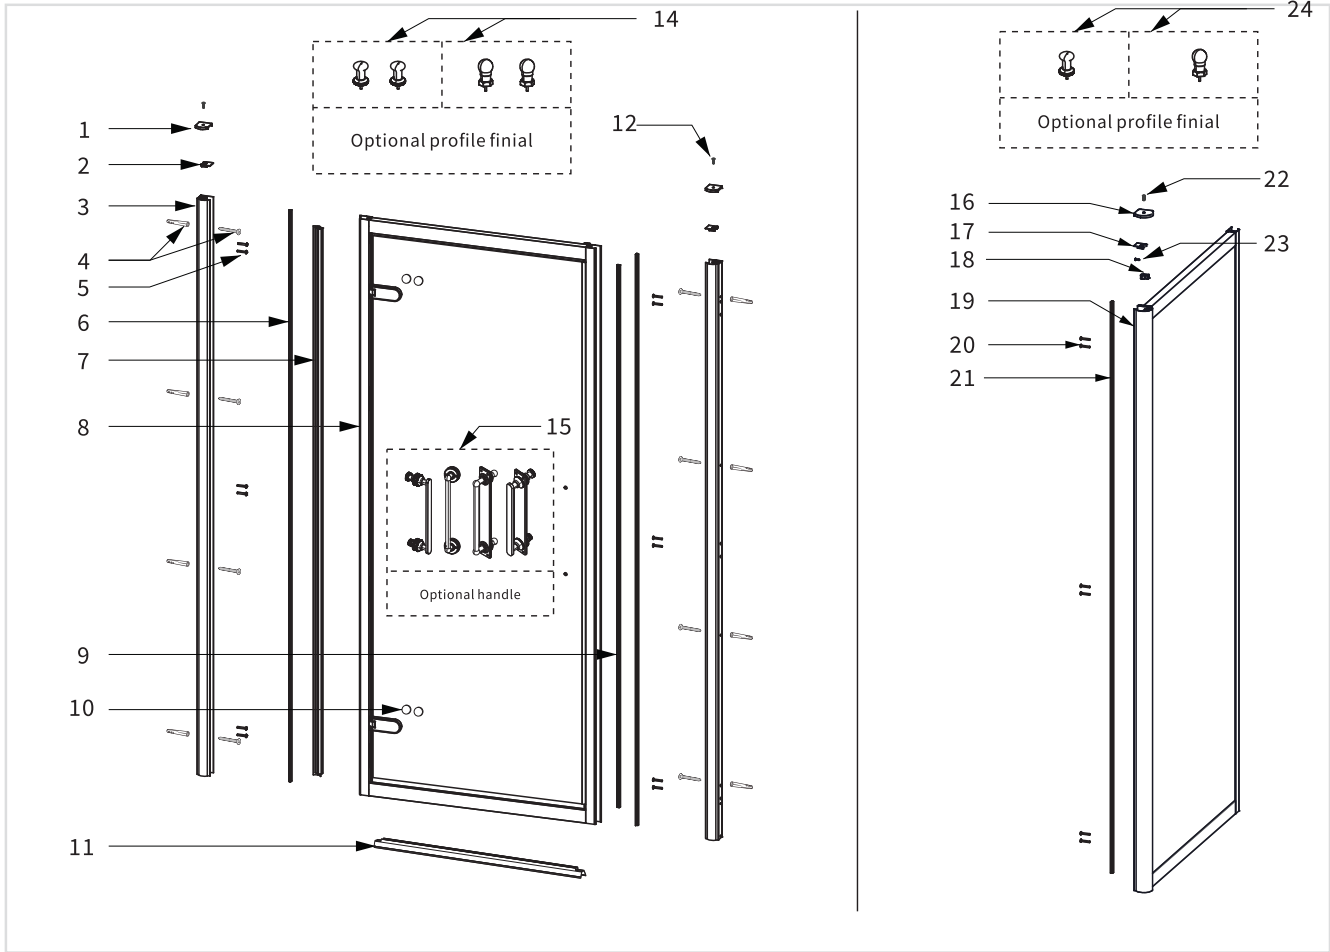


1	Wall profile cap L x1 R x1	2	Adjustment profile cap x2	3	Wall profile L x1 R x1	16	Wall profile cap L x1 R x1
4	Wall Plug and ST4x50mm Screw x8	5	M5*30 Screw x12	6	Profile Cover x2	17	Adjustment profile cap x1
7	Vertical Door Seal x1	8	Door x1	9	Magnetic Seal x1	18	Fixing part of profile cap x1
10	Hinge cap x4	11	Bottom Seal x1	12	M5*14 Screw x2	19	Side panel x1
13	4mm 3mm Allen Key	14	Optional profile finial x2	15	Optional handle x1	20	M5*30 Screw x6
						21	Profile Cover x1
						22	M5*14 Screw x1
						23	ST4*16 Screw x1
						24	Optional profile finial x1

INSTALLATION








1

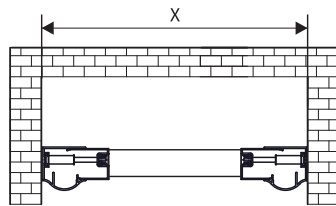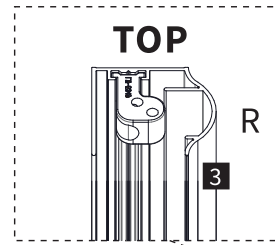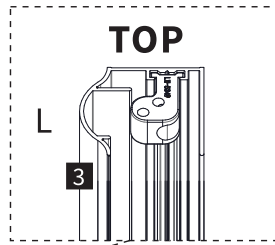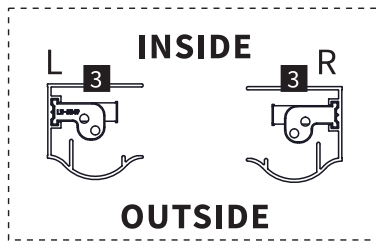

Product	X(mm)
800mm Hinge Door	750-790
900mm Hinge Door	850-890
1000mm Hinge Door	950-990

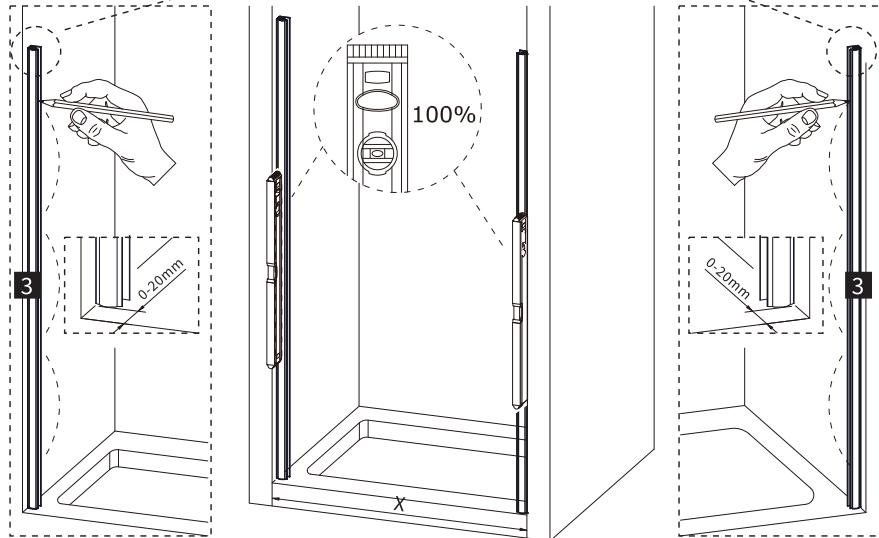


2

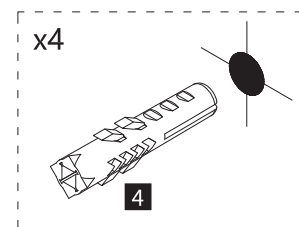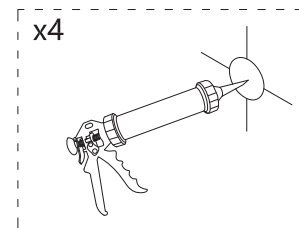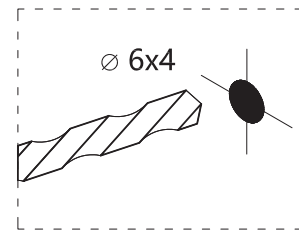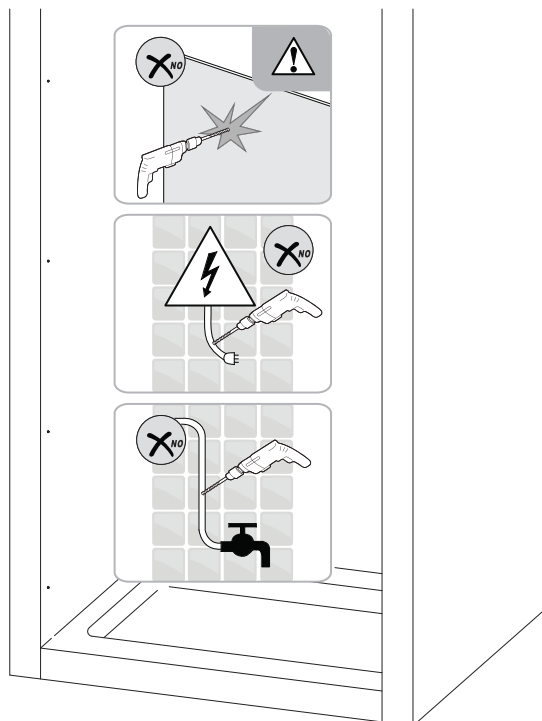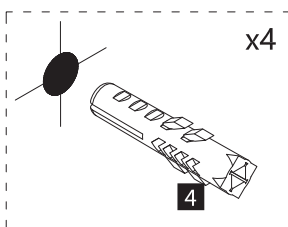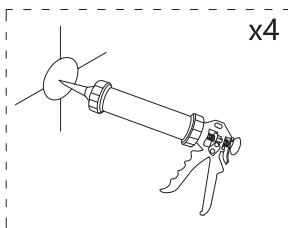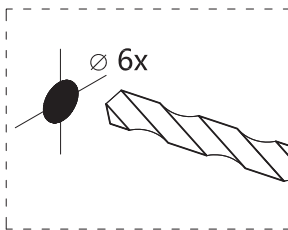


INSTALLATION

3

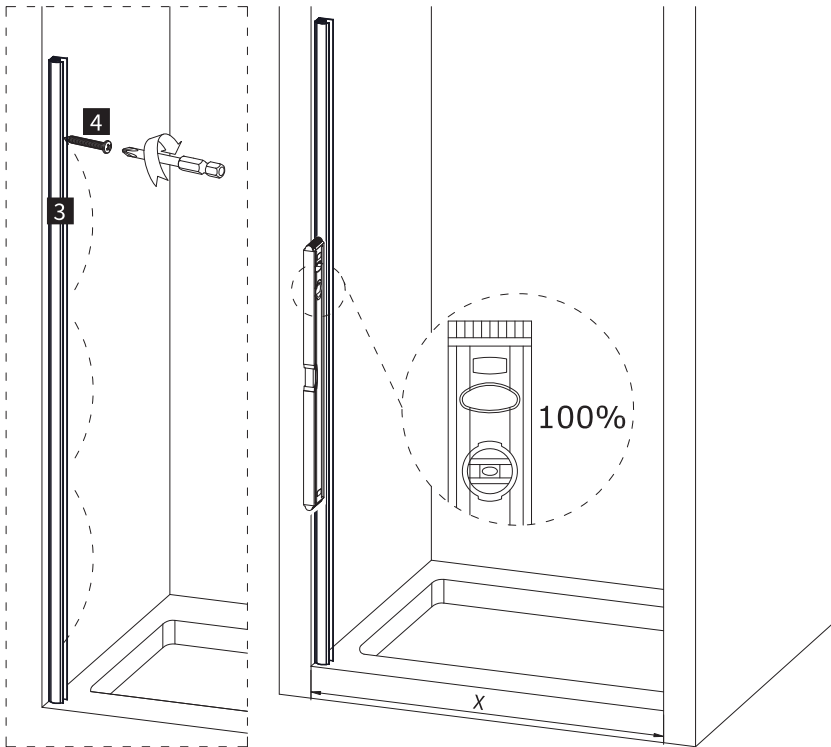


Product	X(mm)
800mm Hinge Door	750-790
900mm Hinge Door	850-890
1000mm Hinge Door	950-990

4

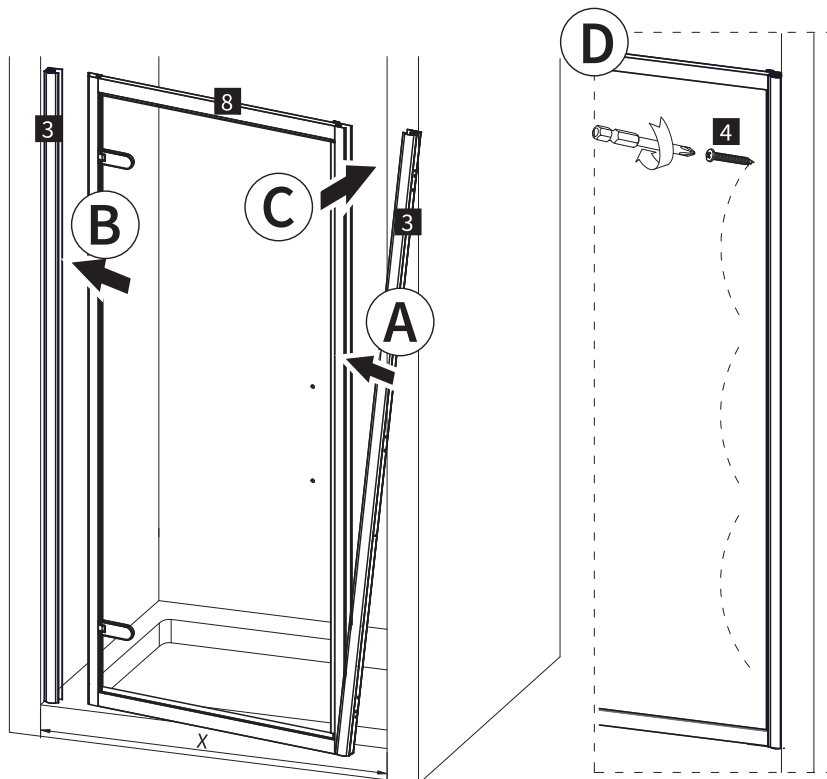


Product	X(mm)
800mm Hinge Door	750-790
900mm Hinge Door	850-890
1000mm Hinge Door	950-990

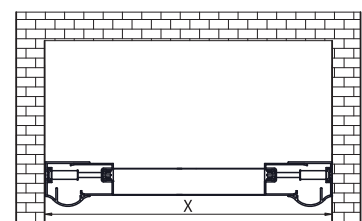


INSTALLATION

5

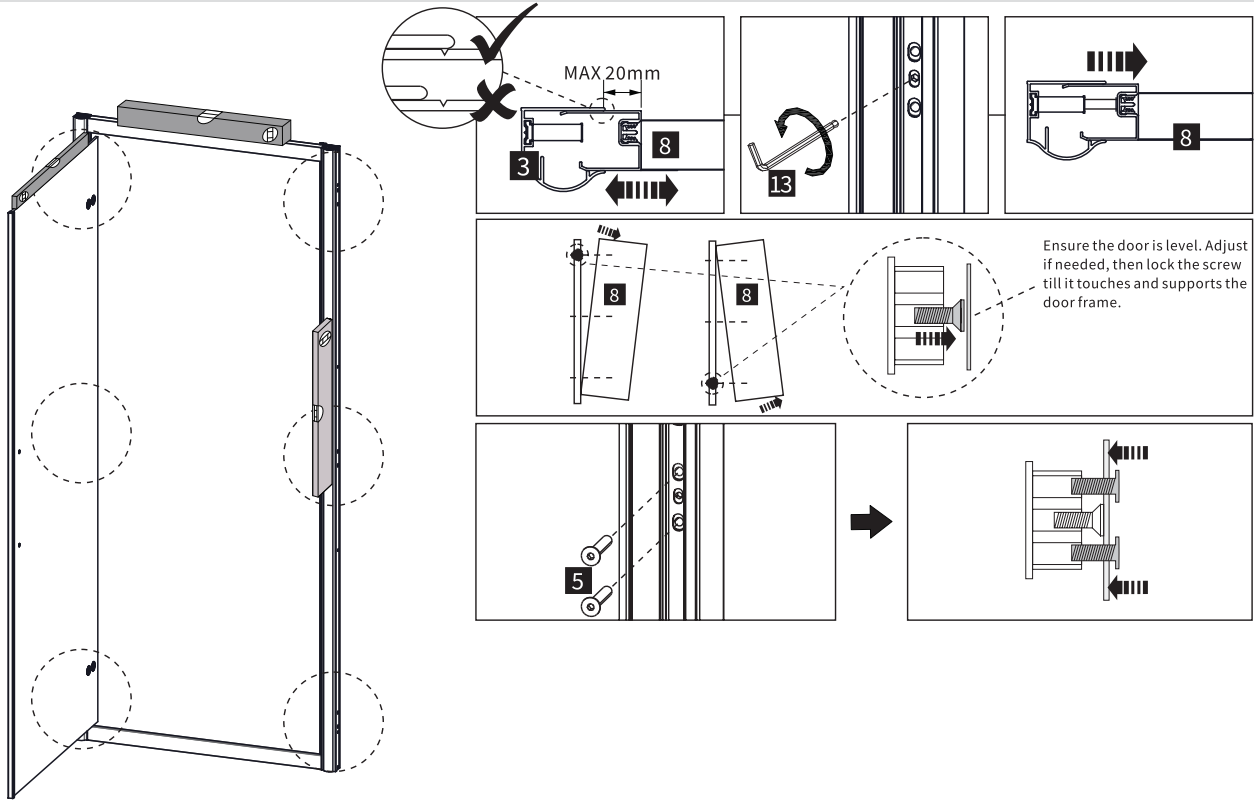


6

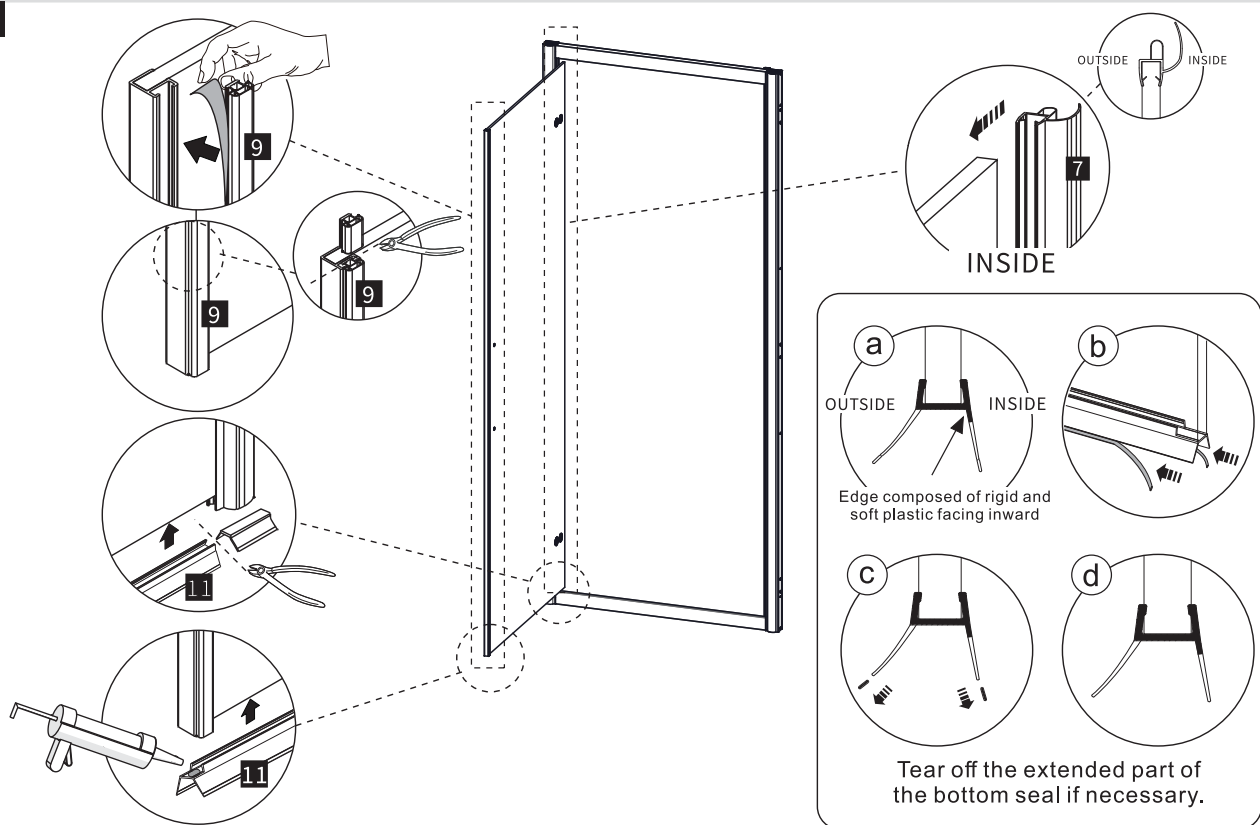


INSTALLATION

7

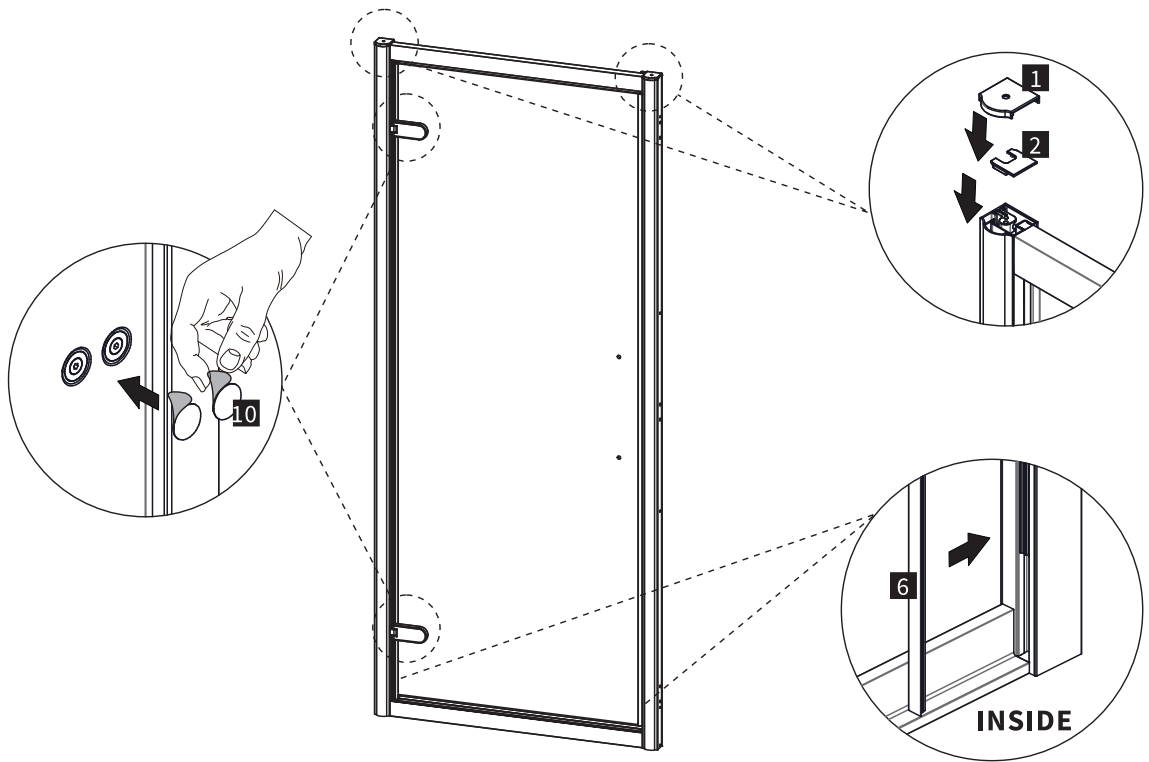


8

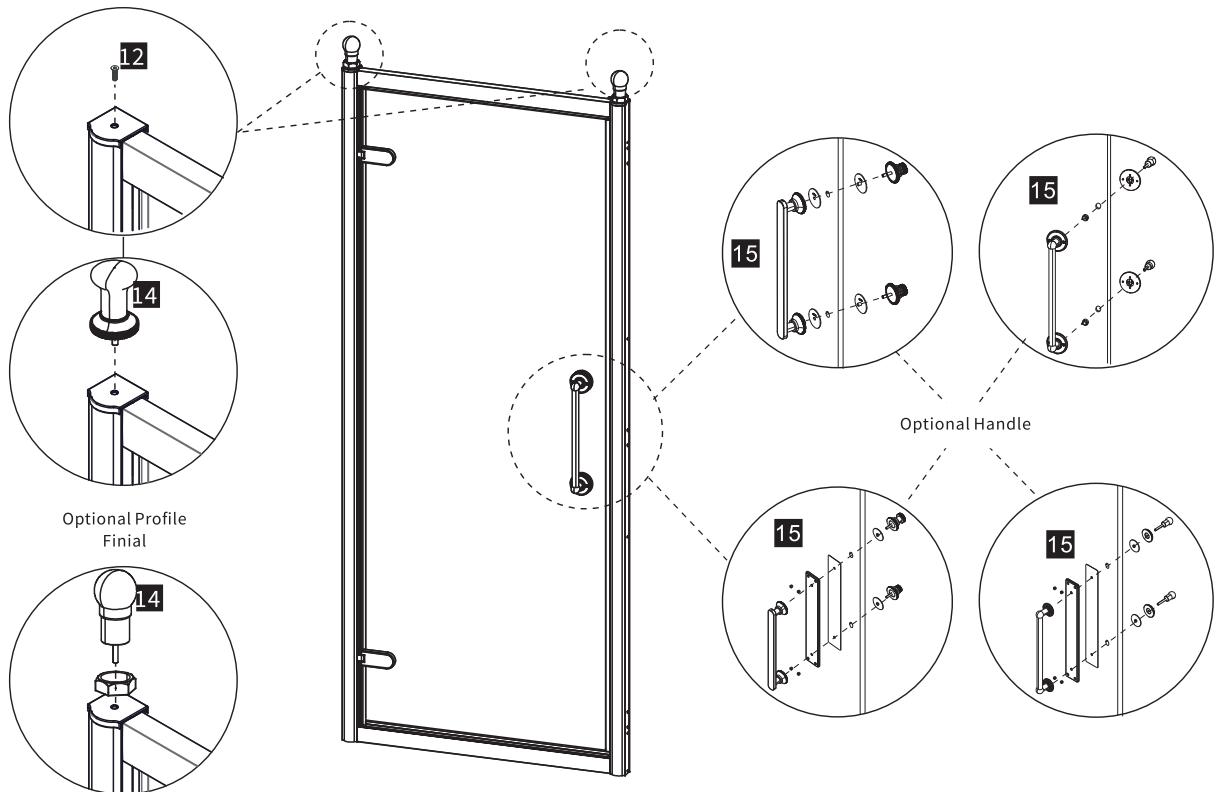



INSTALLATION

Burlington®

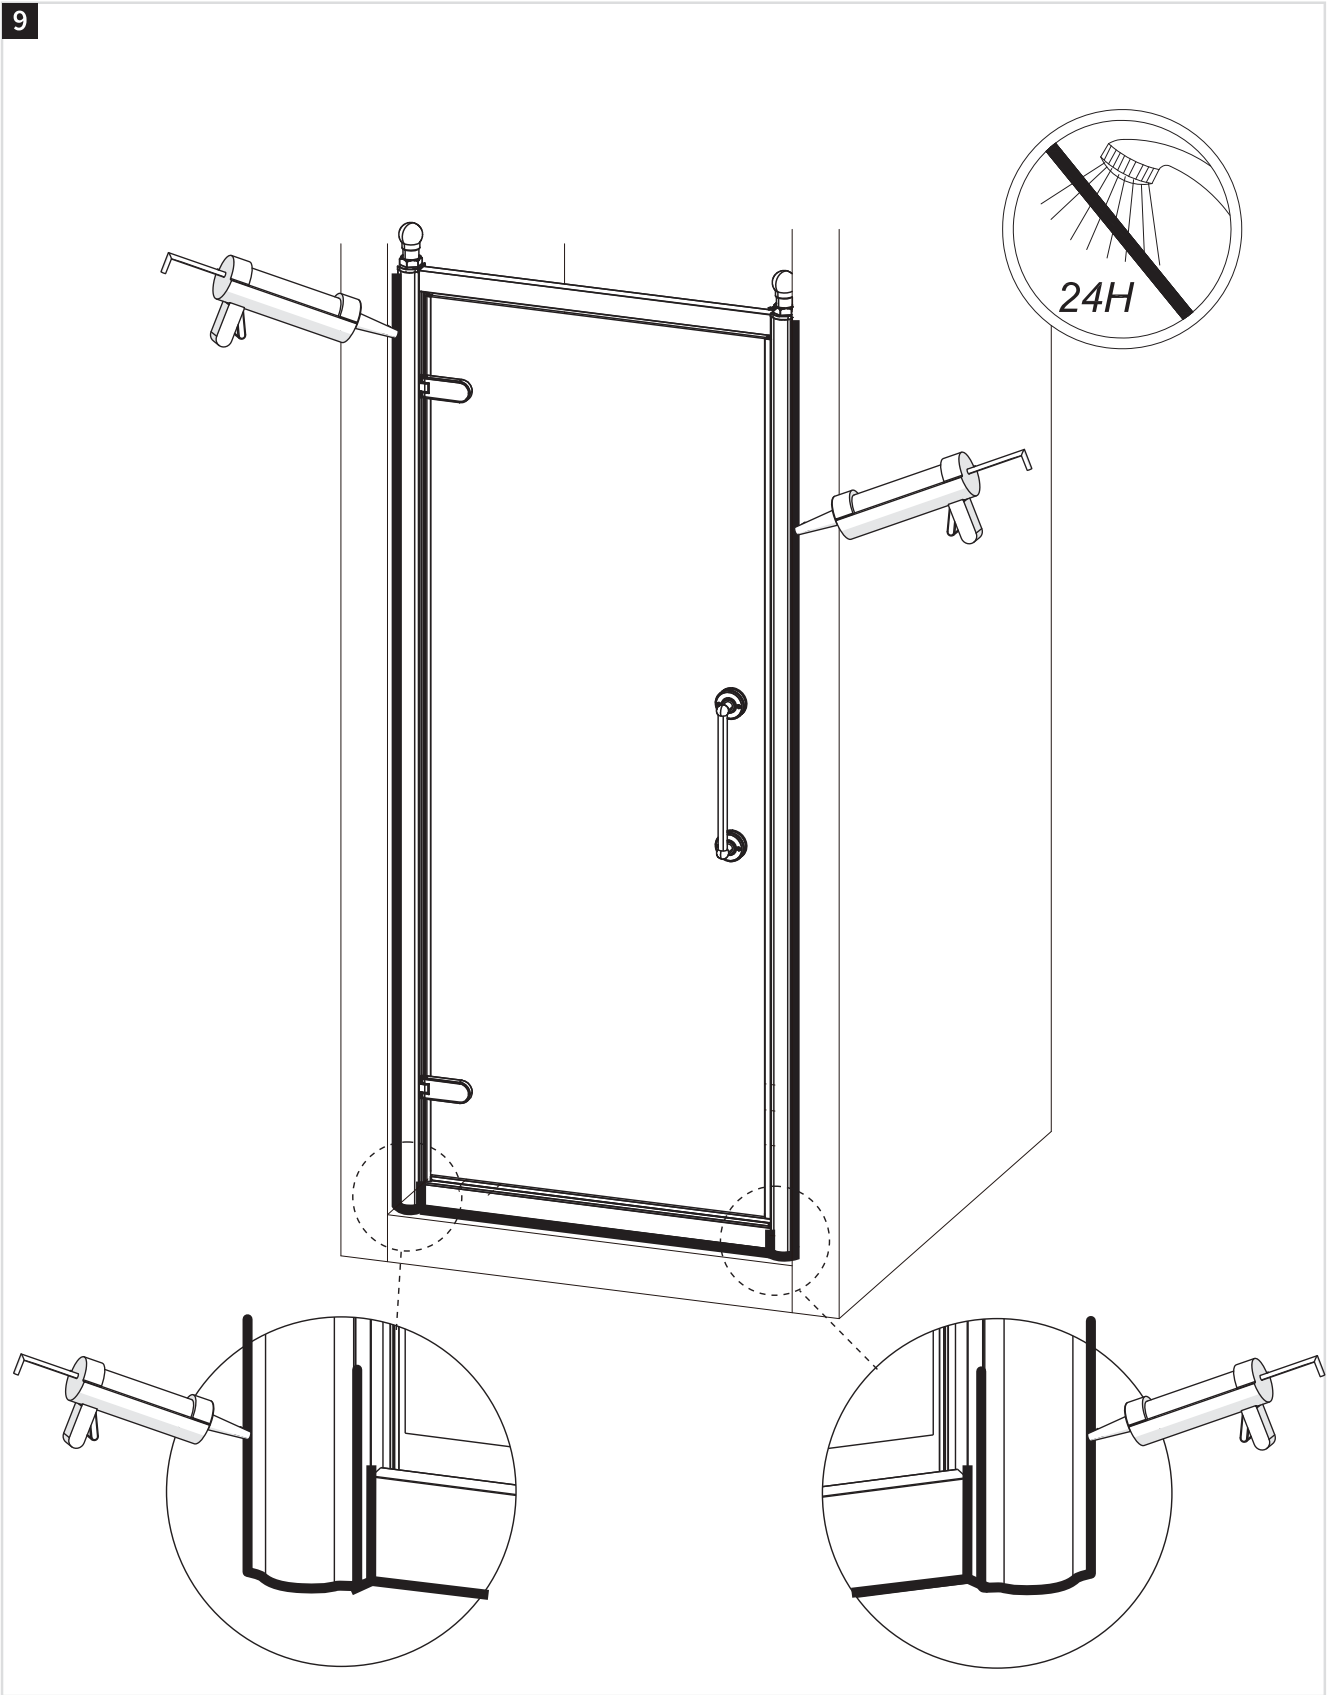



INSTALLATION

10




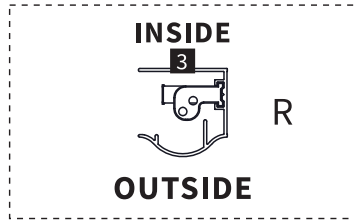
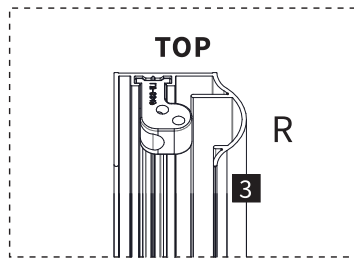


Product	X(mm)
800mm Hinge Door	760-780
900mm Hinge Door	860-880
1000mm Hinge Door	960-980

Product	Y(mm)
800mm Side Panel	770-790
900mm Side Panel	870-890

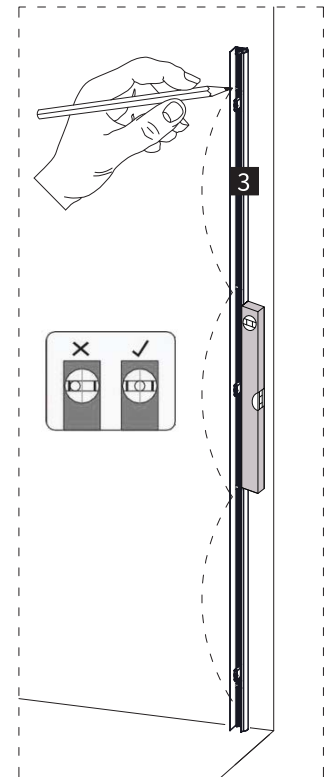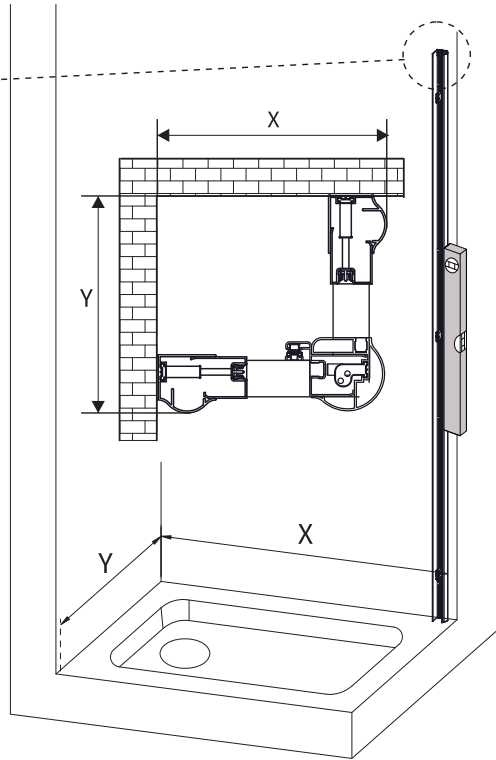


11

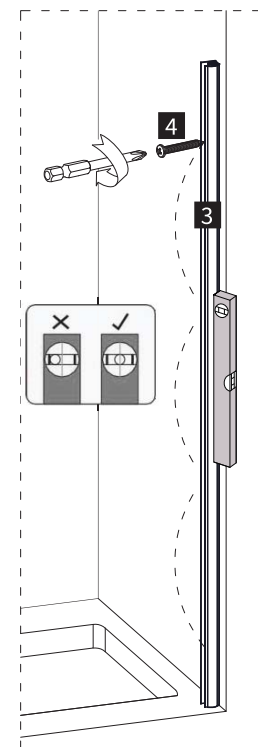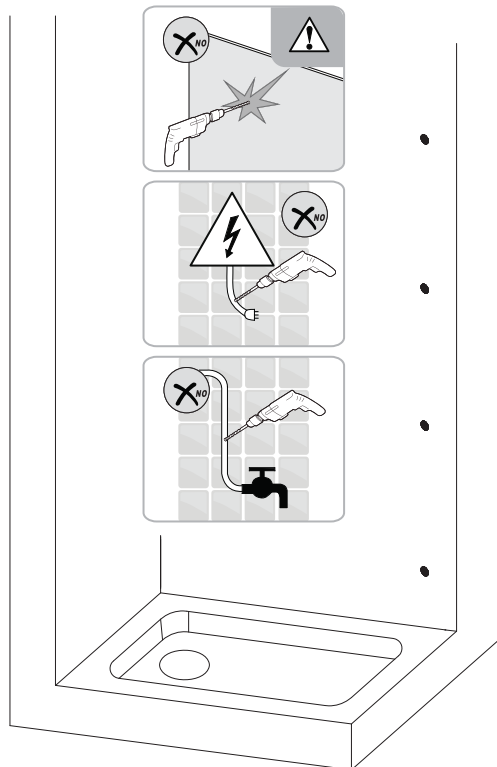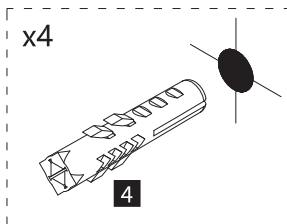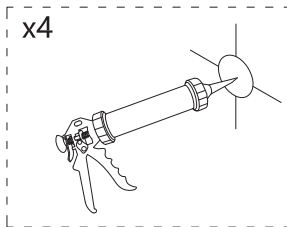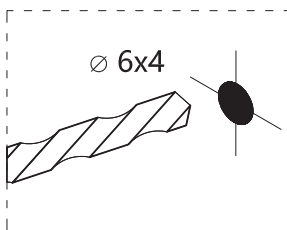


INSTALLATION

12

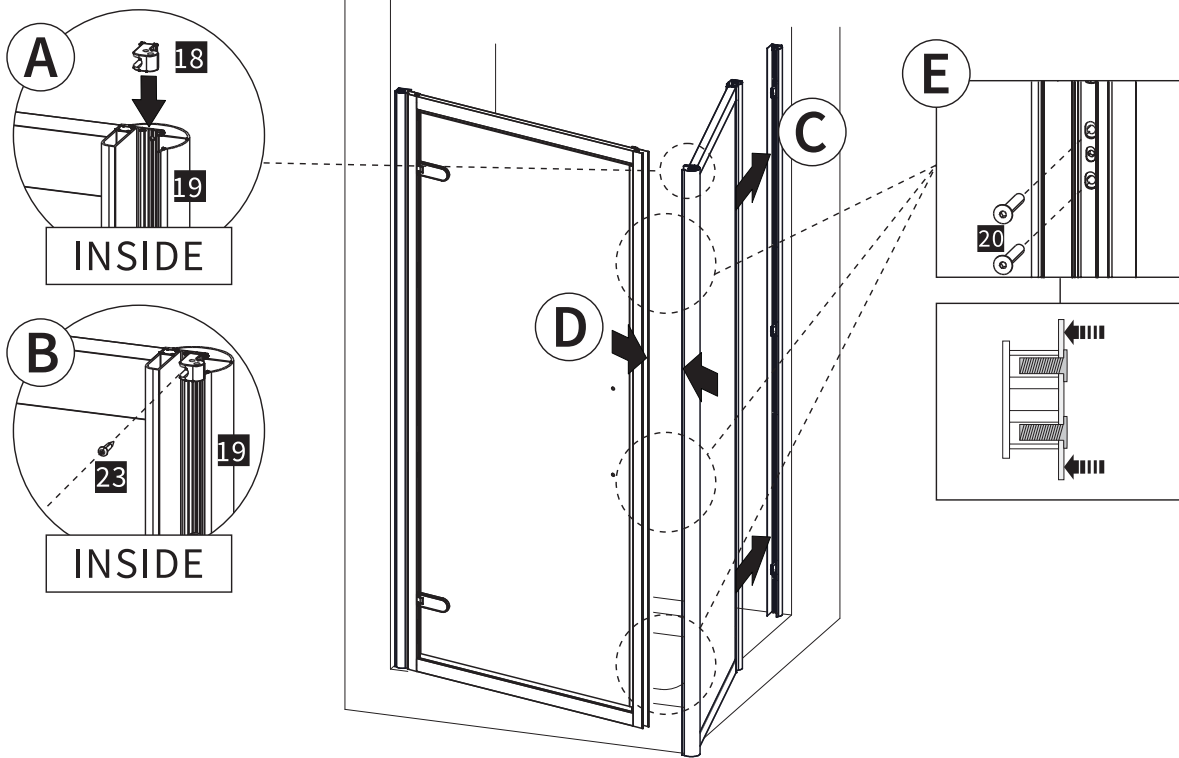


13

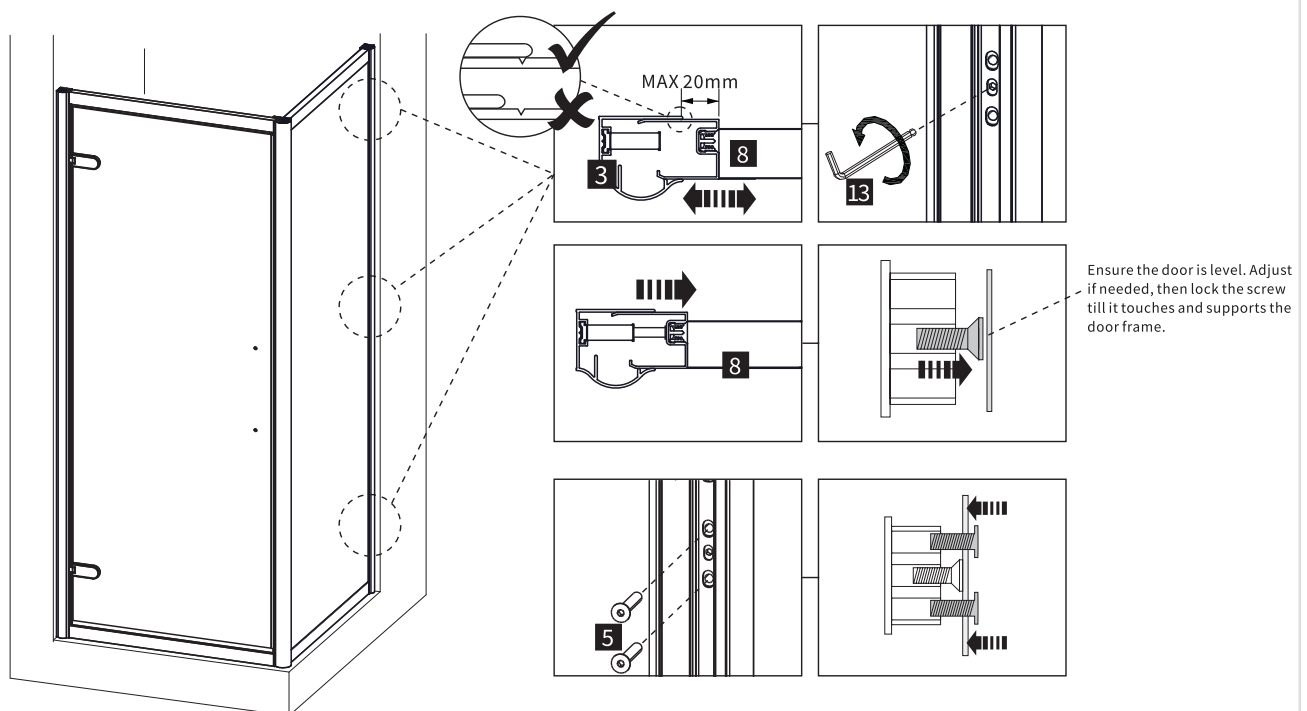


INSTALLATION

14




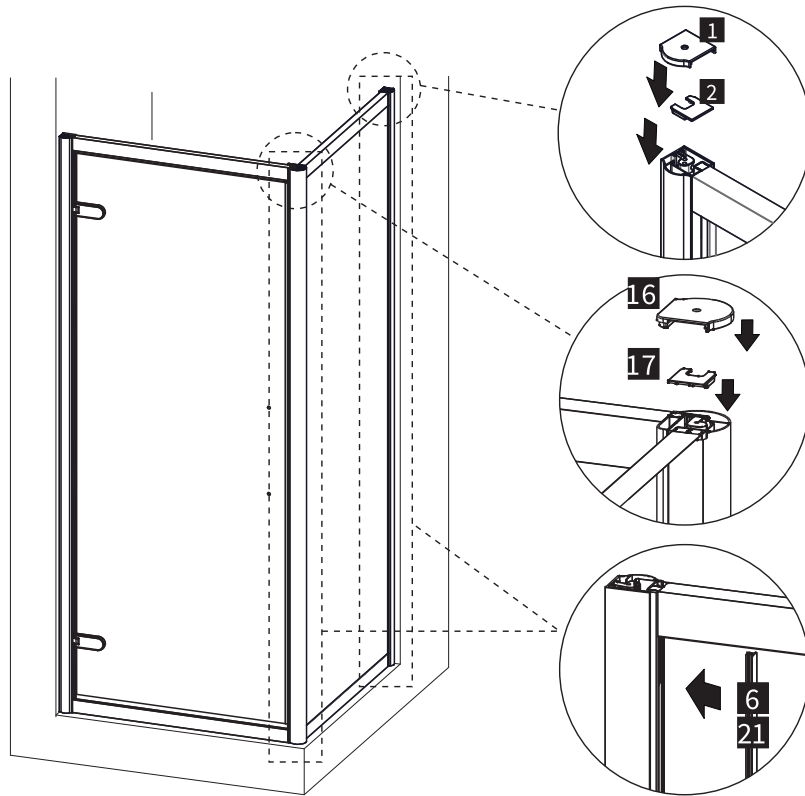


15

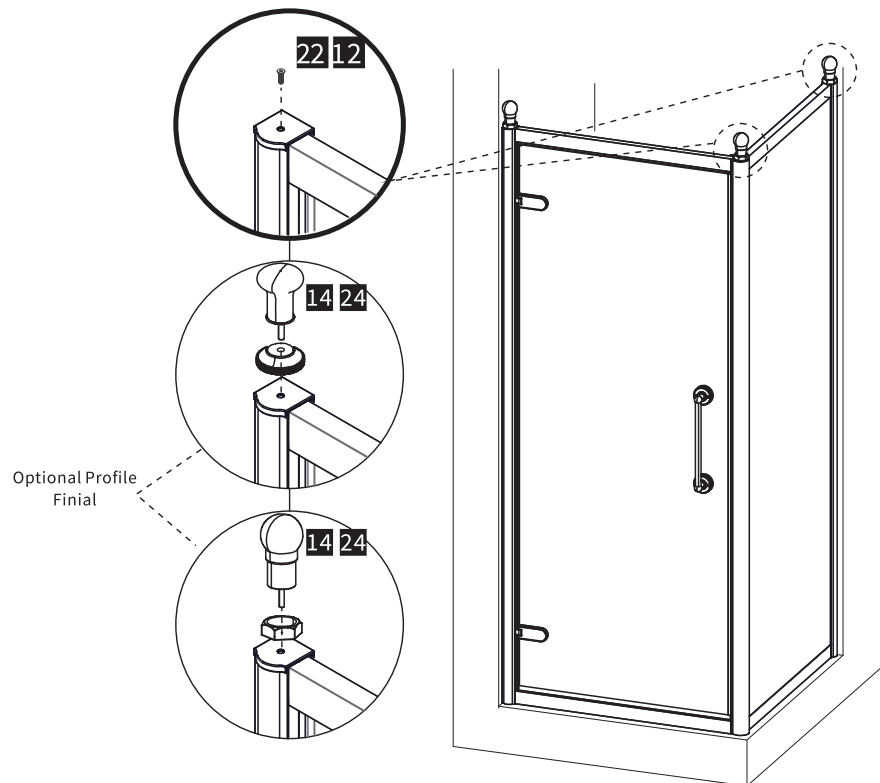

INSTALLATION

16

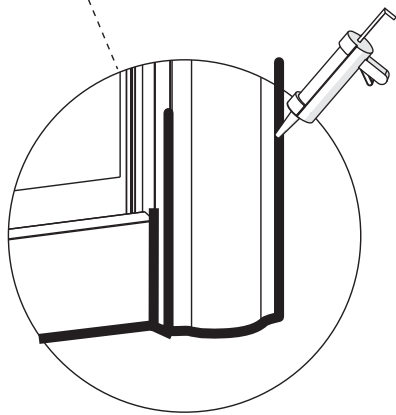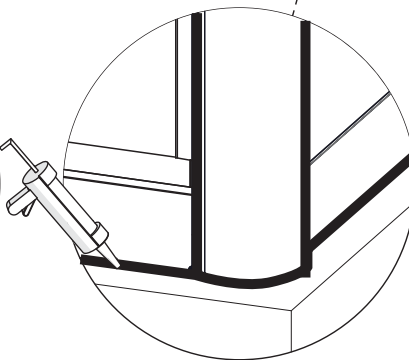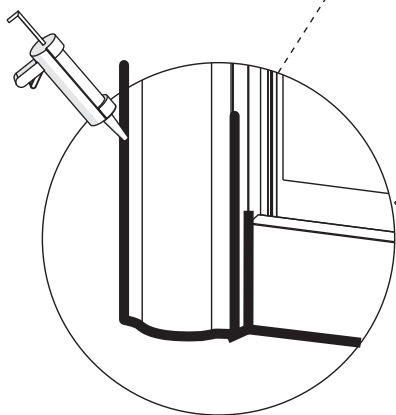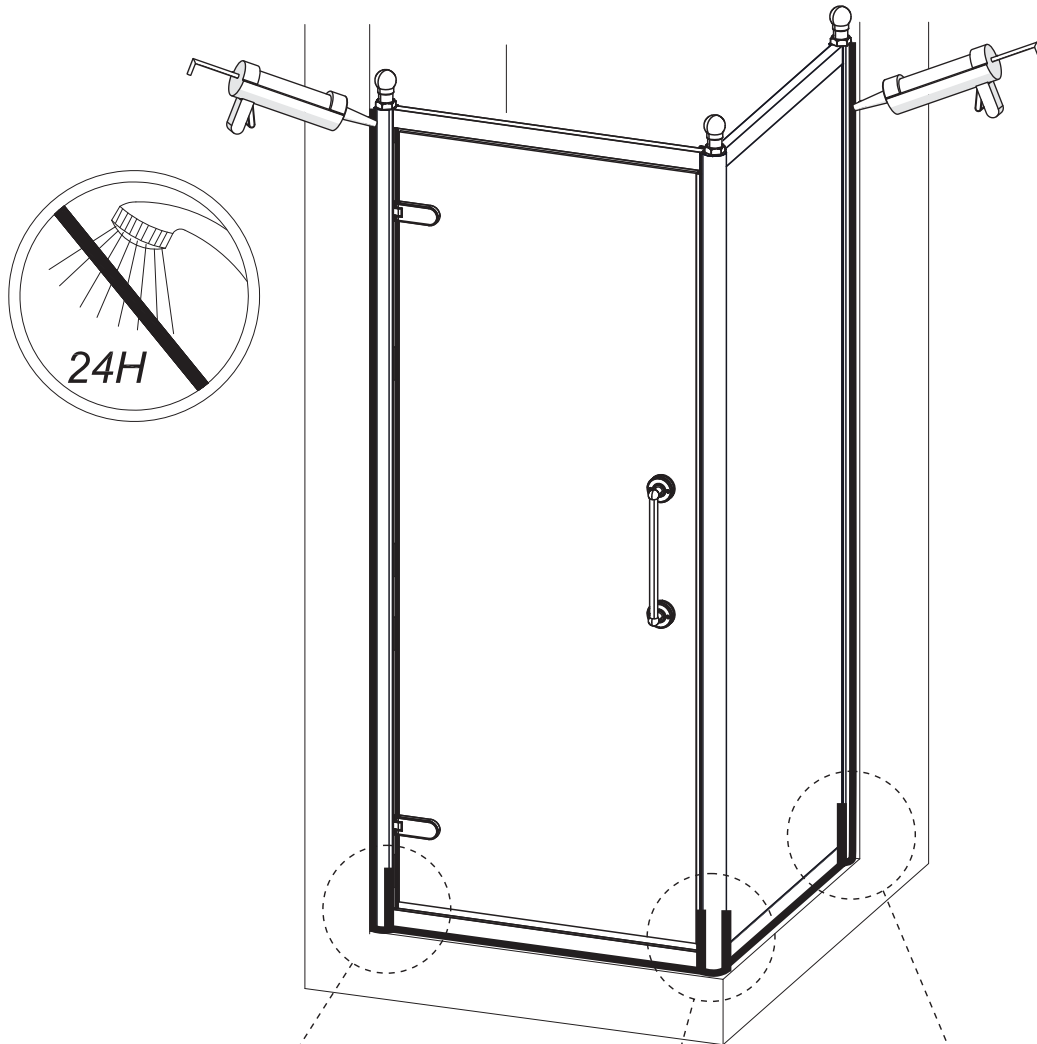

Burlington[®]

Burlington[®]

Part of the
Bathroom Brands Group

We reserve the right to make technical modifications without prior notice.

Burlington[®]

Lake View House
Rennie Drive, Dartford
Kent DA1 5FU
United Kingdom
0345 873 8840
www.crosswater.co.uk