

GUILD

Basin Washstand

Burlington®



PRODUCT CODES:

GU45X77
GU56X77
GU62X77
GU85X77



IMPORTANT INFORMATION BEFORE YOU START

Please read carefully and keep this information for further reference.

All products manufactured and supplied by Burlington are safe provided they are installed, used correctly and receive regular maintenance in accordance with these instructions. If you are in any doubt about your ability to install this product safely you must employ the services of an experienced qualified plumber.

These fittings need to be installed in accordance with, and meet the requirements of the Water Supply (Water Fittings) Regulations 1999 and Scottish Byelaws 2004.

Operating pressure range: Minimum 0.3 bar, Maximum 5.0 bar.


Maximum static pressure: 10.0 bar.

Note: Nominally equal (balanced) inlet supply pressures are recommended for optimum performance with mixer taps.

Designed to comply with BS EN 817 for single hole mixers, for water systems of type 2 general technical specifications and to be used within systems designed to BS 6700. BS 6700 recommends the temperature of stored water should never exceed 65°C.

A stored water temperature of 60°C is considered sufficient to meet all normal requirements and will minimise the build up of lime scale in hard water areas. If the fitting is installed at low pressure (tank fed), then the minimum distance from the highest installed position of the outlet to the underside of the cold tank should be at least 2 metres to ensure adequate performance.

COMPONENTS

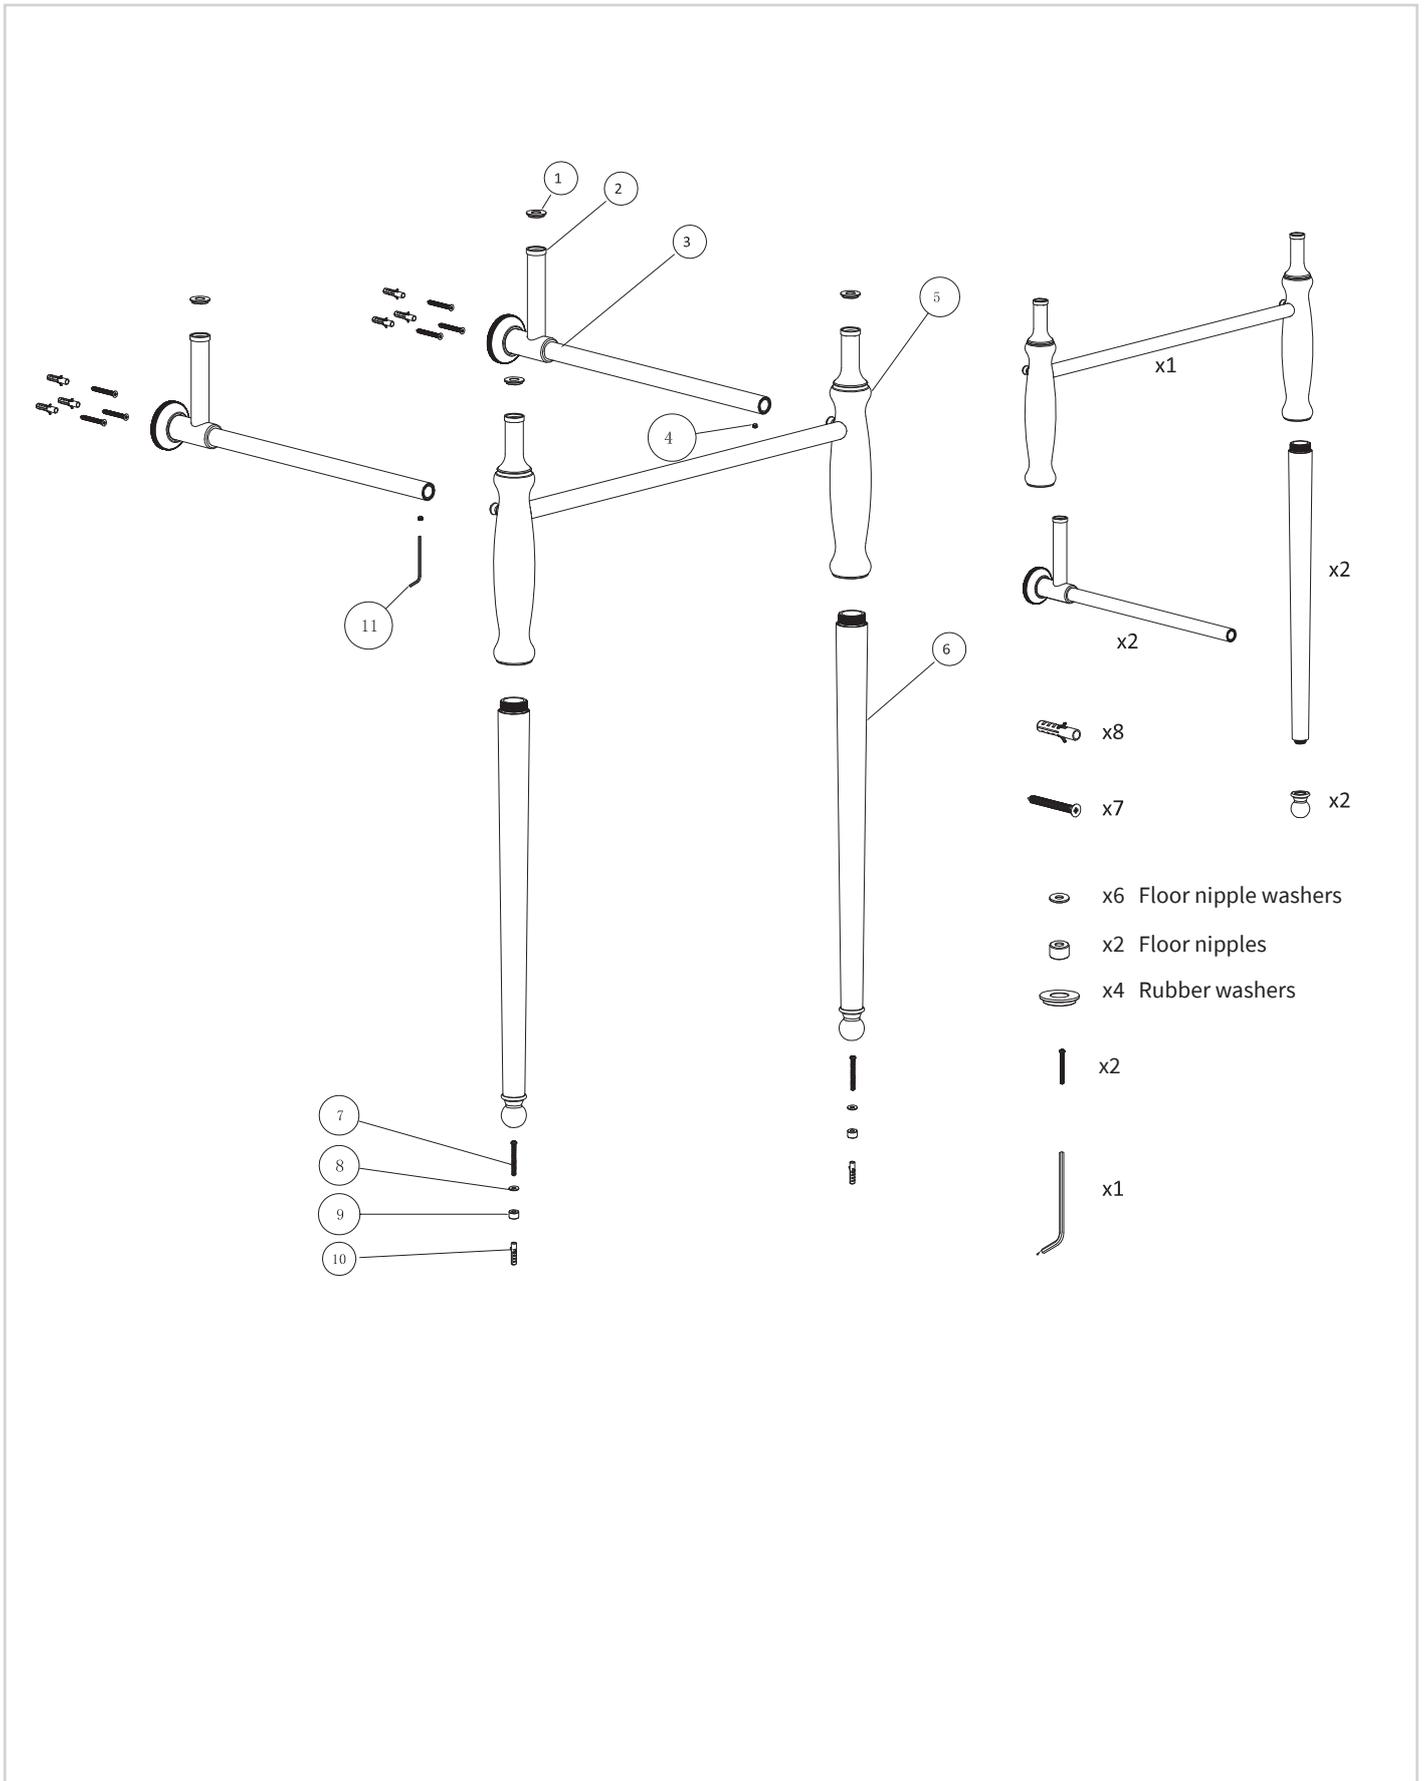

BEFORE YOU START

Important Pre-Installation Notes

Remove all packaging and check the fitting for damage before starting installation.

Warning: Before starting any installation please consider the following: before drilling into walls, check that there are no hidden electrical wires, cables or water supply pipes. This can be checked with the aid of an electronic detector.

If power tools are used do not forget to: -

Wear eye protection

Unplug equipment after use



Important:

Remember to turn off the mains water supply before connecting to any existing pipe work. Fitting isolating valves to the inlet feeds is recommended for ease of maintenance.


Warning: The installation must comply with all plumbing codes including local codes and be installed by a licensed plumbing contractor. Assemble the parts on a mat to protect against scratching the surface. Avoid getting cement, grit, sand or masonry products on to the surface. Protect and cover the items during installation, other tradesmen might damage them if no precautions are taken.

Please make sure you have the correct basin suitable for the basin legs. The recommended combination is as follows: GU0451SCW with GU45X77, GU0561SCW with GU56X77, GU0621SCW with GU62X77, GU0853SCW with GU85X77


Tools Required (not supplied):
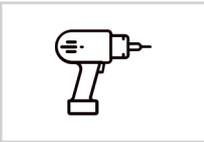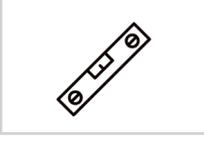
<u>Drill + 1/4" Drill Bit</u>		<u>Pencil</u>	
<u>Tape Measure</u>		<u>Cross Head Screw Driver</u>	
<u>Spirit Level</u>		<u>Safety Goggles</u>	
<u>Hammer</u>			


INSTALLATION

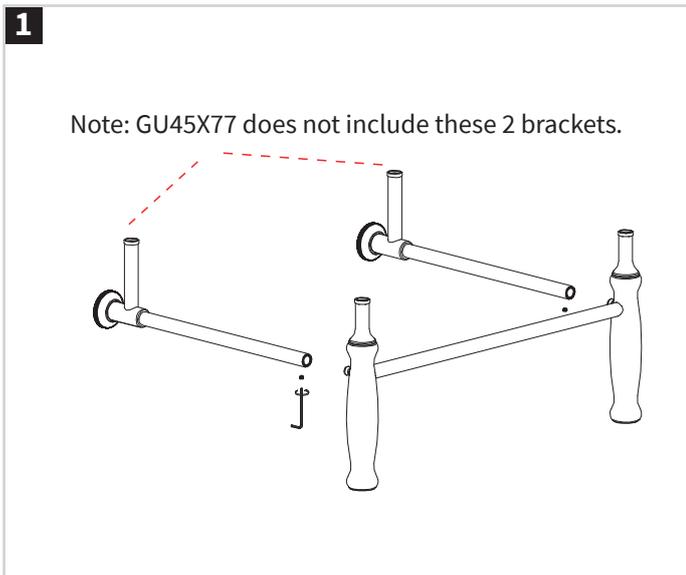


Attach the two horizontal rails to the front rail.

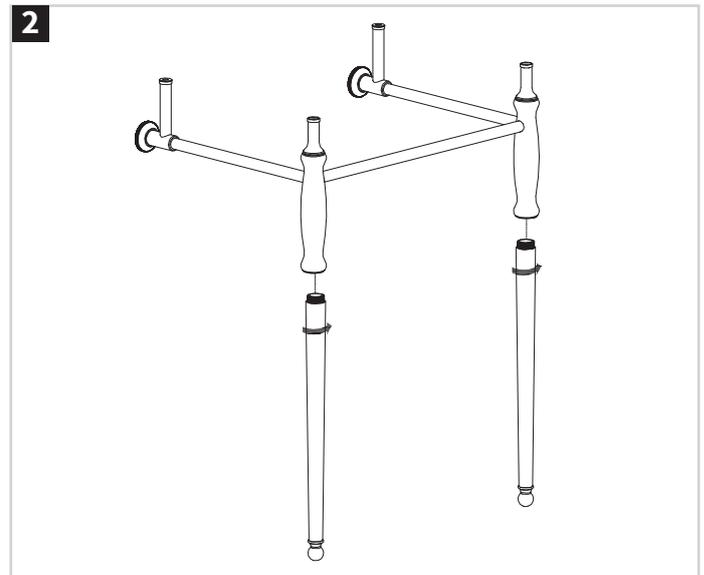

Screw the legs into the rail.

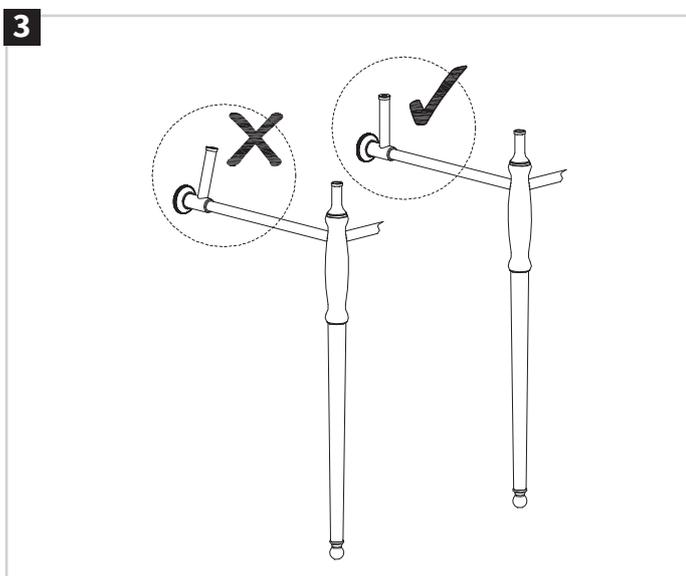


Check that the horizontal bracket bar is vertical using a spirit level.

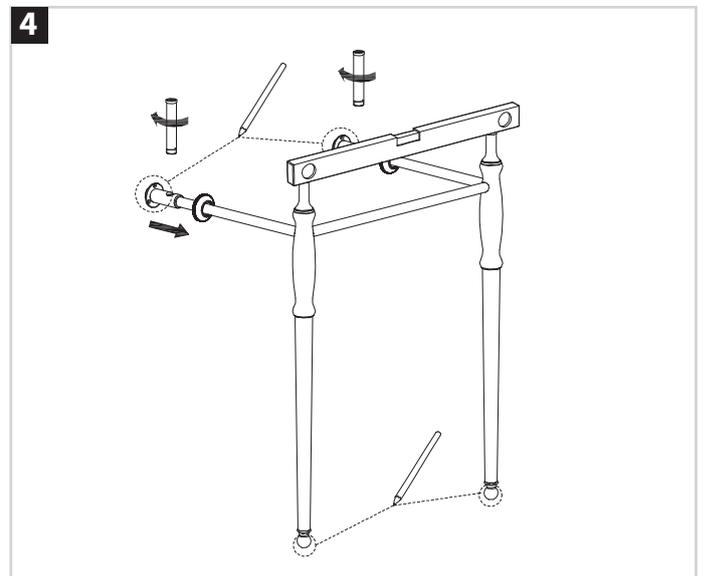

Determine the final installation position and mark the 6 wall and two floor fixing hole positions in pencil. Please make sure to include the floor nipples (and washers if necessary) when determine the installation position because the stand may elevate after the floor nipples are fitted.


INSTALLATION

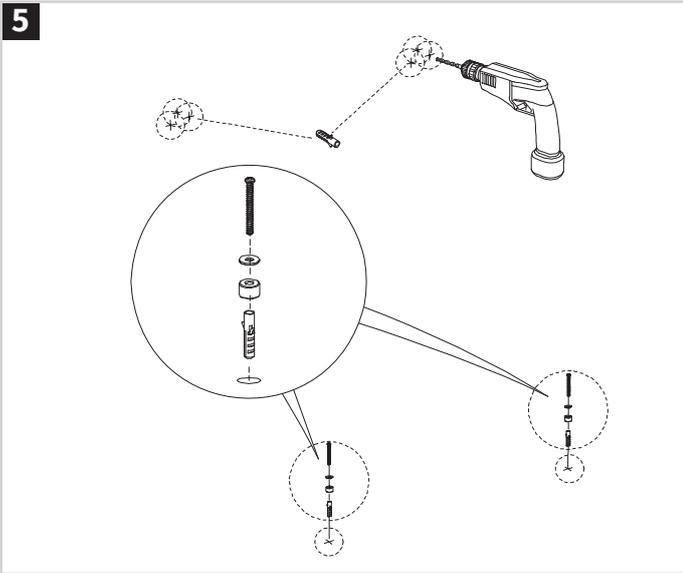


Using a 1/4" drill bit drill the eight holes on the marked positions.

Note: In the event that the wall/floor fixings supplied being inappropriate for the wall/floor, please source alternatives.


Fix the floor nipples onto the floor. There are 6 floor nipple washers supplied. These can be inserted onto the floor nipples to adjust for an uneven floor.

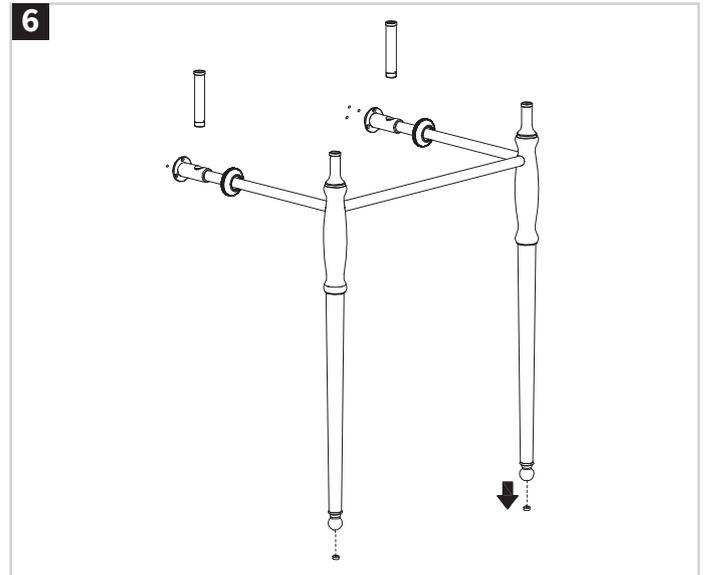

Fit the two legs over the floor nipples.

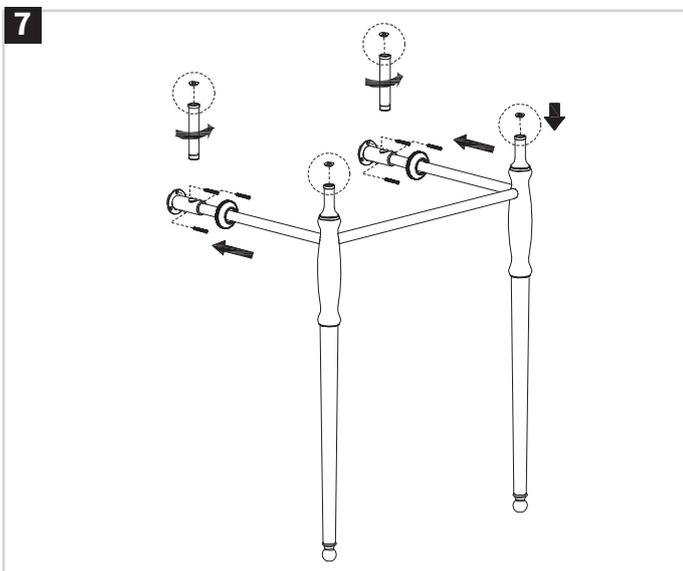

Fix each of the two brackets onto the wall using the 6 screws provided. Ensure that the screw heads are parallel to the floor. Place the 4 rubber washers into the 4 recesses as shown. The 4 rubber washers are not recommended to use when installing the marble basin onto the stand.

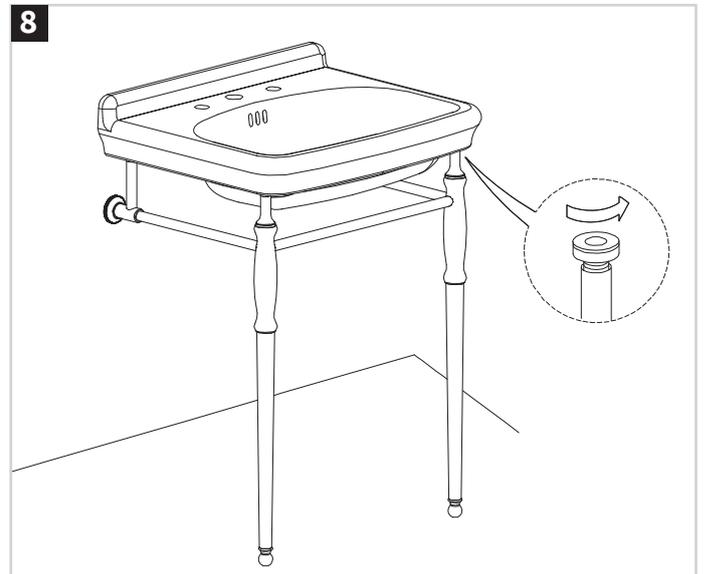

For ceramic basin, place the basin in position ensuring that it is level. The basin must be fixed to the wall at the rear using appropriate wall fixing screws. The top part of the rail can be adjusted slightly if the basin is not level.

Burlington[®]

CARE & MAINTENANCE

The material we use in our products is very durable, nevertheless care should be taken when cleaning them. They should be cleaned only with warm soapy water followed by rinsing with clean water and drying with a soft cloth. All finishes are vulnerable to acid attack and some strong substances such as household cleaners, disinfectants, denture cleaners, hair dyes, wine making, and photographic chemicals can cause the surface to go black or peel.

Note: Never use abrasive detergents or disinfectants or those containing alcohol, hydrochloric acid or phosphoric acid.

Burlington[®]

Lake View House
Rennie Drive, Dartford
Kent DA1 5FU
United Kingdom
0345 873 8840
www.burlingtonbathrooms.com