

● PLEASE REFER TO THE INDIVIDUAL DOOR AND SIDE PANEL INSTRUCTIONS FOR CORRECT INSTALLATION WITH THIS INLINE PANEL.

- Check the contents of the pack carefully before installation.
- The tray **MUST** be installed level and fully sealed to the tiles.
- Handle with care. Impacts can damage both the glass and the frame.
- Check for any hidden pipes or cables before drilling holes in the wall.
- The enclosure is reversible: " door can be either left or right opening. "

In the remainder of this manual the illustrations will only show the right hand installation.



The parts marked "LH" or "RH" would be only suitable for the relative shower enclosure.

- The wall fixings supplied may not be suitable for your installation. You may need to source alternatives depending on the construction of the wall you are fixing to.



Care and Cleaning:

- Do not use solvents or abrasive material or chemicals to clean the enclosure.
- Only clean using soapy water and a soft cloth, rinse thoroughly afterwards.


Hinged Door and Inline Panel (Pages 5 - 10)

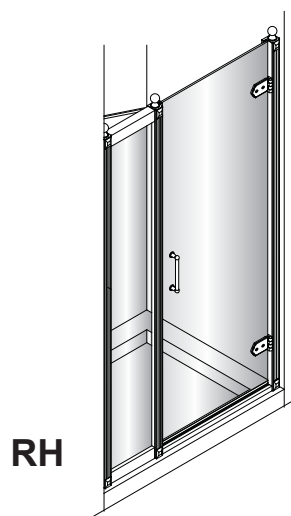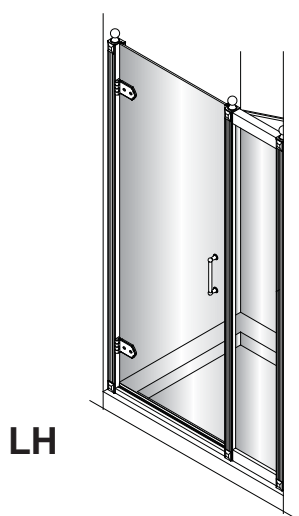

Hinged Door and Inline Panel with Side Panel (Pages 11 - 17)

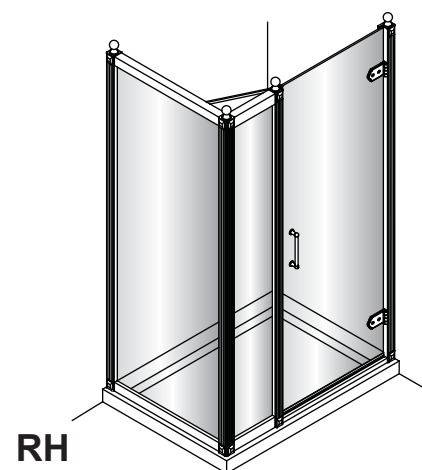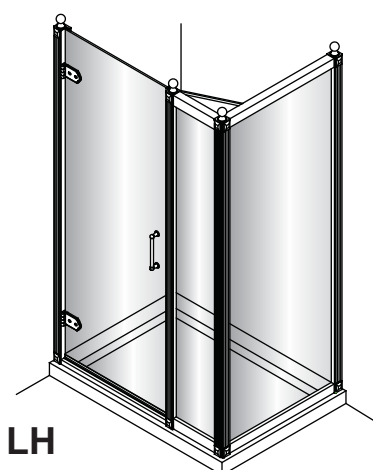






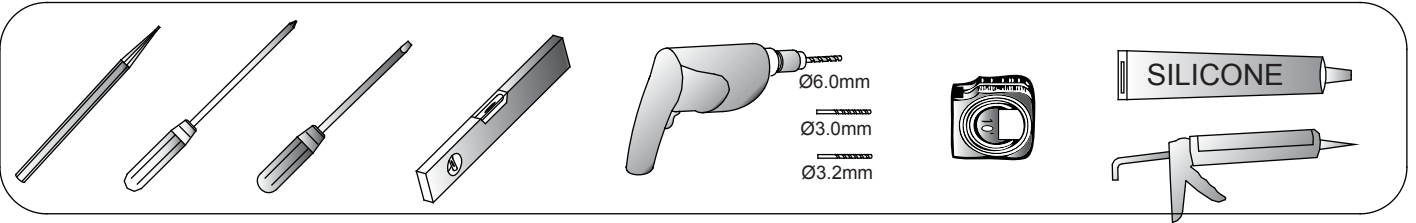





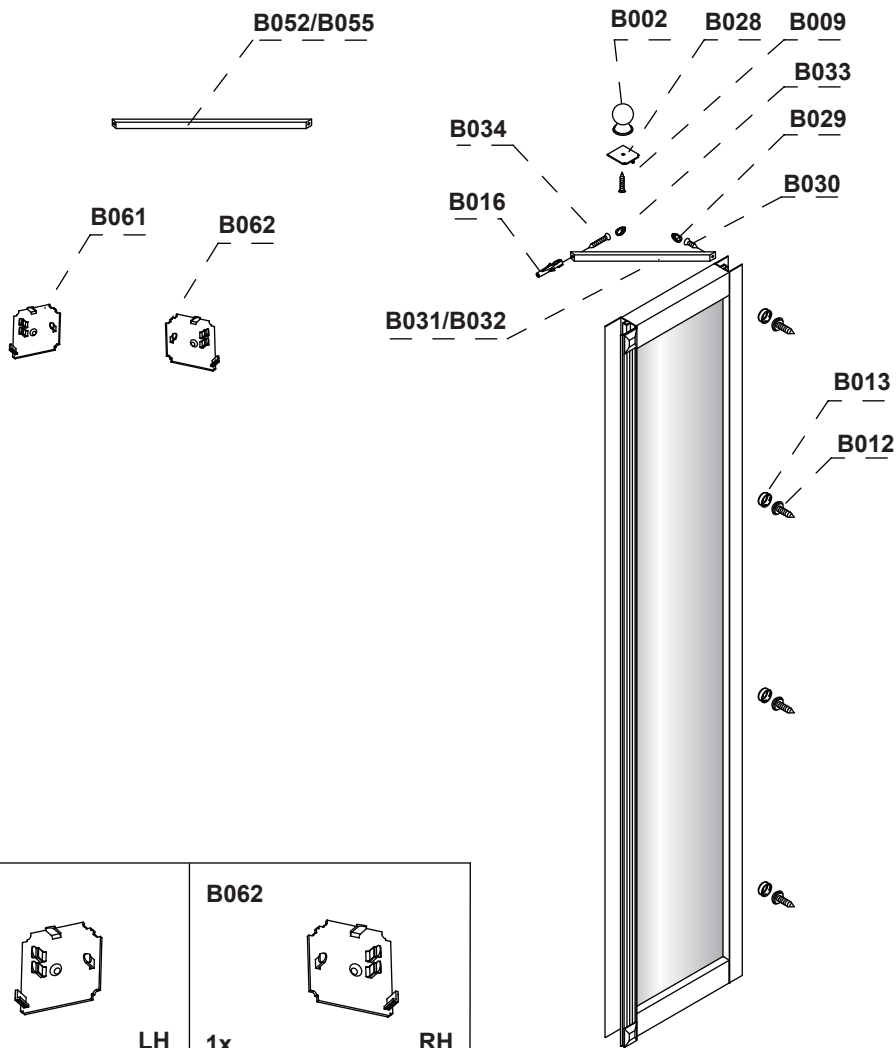




Tools required:




Parts supplied:

Inline Panel Box - C15/C16/C17

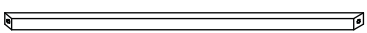


B061  1x LH	B062  1x RH			
B002  1x	B027  1x	B028  1x	B009  1x ST3.5*16mm	B034  1x ST4*35mm
B033  1x	B030  1x ST4*25mm	B029  1x	B016  1x	B012  4x ST3.5*10mm
B013  4x	B031/B032  1x - B031 is for 200 Inline panel - B032 is for 300, 400 Inline panel		B052/B055  1x - B052 is for 200 Inline panel - B055 is for 300, 400 Inline panel	

Tools required:

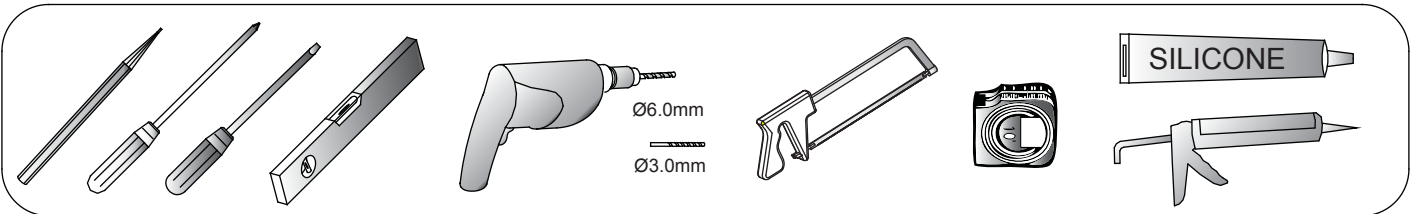


Parts supplied:

Hinged Door Box - C19/C20/C21

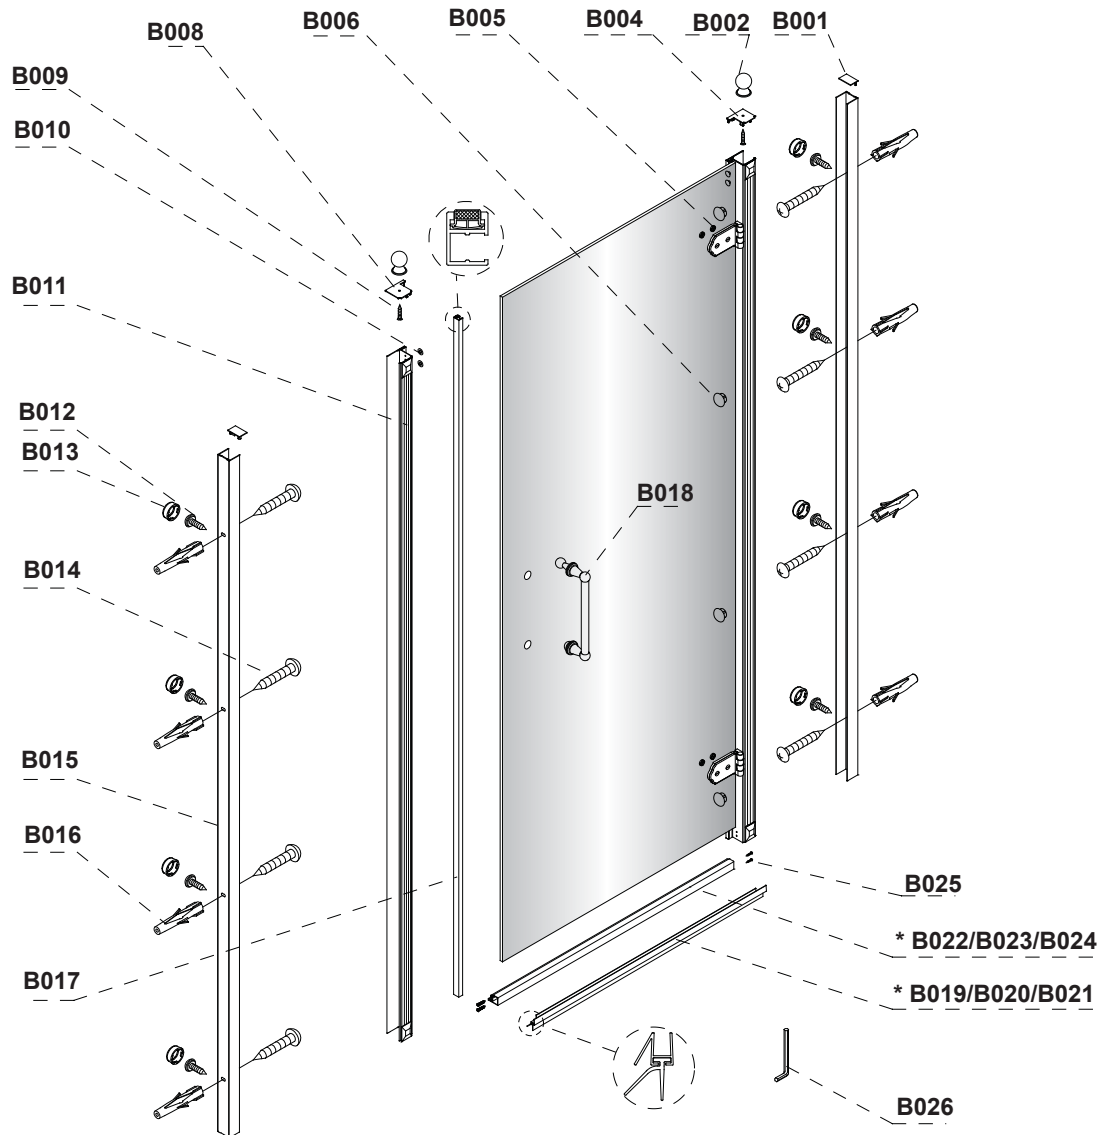


B001 2x	B002 2x	B003 1x LH	B004 1x RH	B005 4x	B006 4x
B007 1x LH	B008 1x RH	B009 2x ST3.5*16mm	B010 4x	B011 1x	B012 8x ST3.5*10mm
B013 8x	B014 8x ST4*50mm	B015 2x	B016 8x	B017 1x	B018 1x
* B019/B020/B021 1x - B019 is for 760 Hinged door - B020 is for 800 Hinged door - B021 is for 900 Hinged door		* B022/B023/B024 1x - B022 is for 760 Hinged door - B023 is for 800 Hinged door - B024 is for 900 Hinged door		B025 4x ST4*30mm	B026 1x 4mm

Tools required:

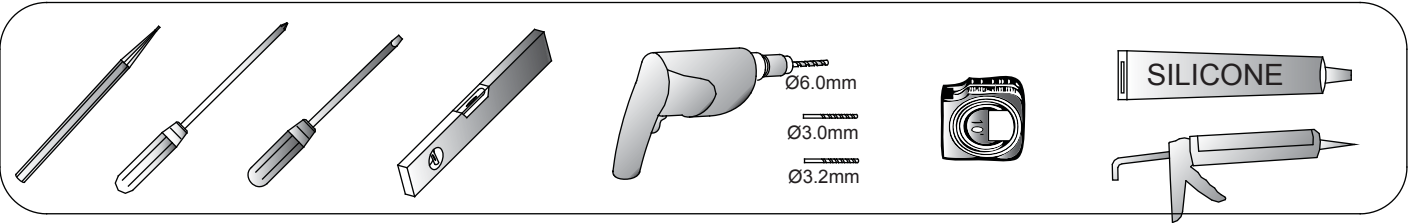

Parts supplied:

Side Panel Box - C11/C12/C13/C14

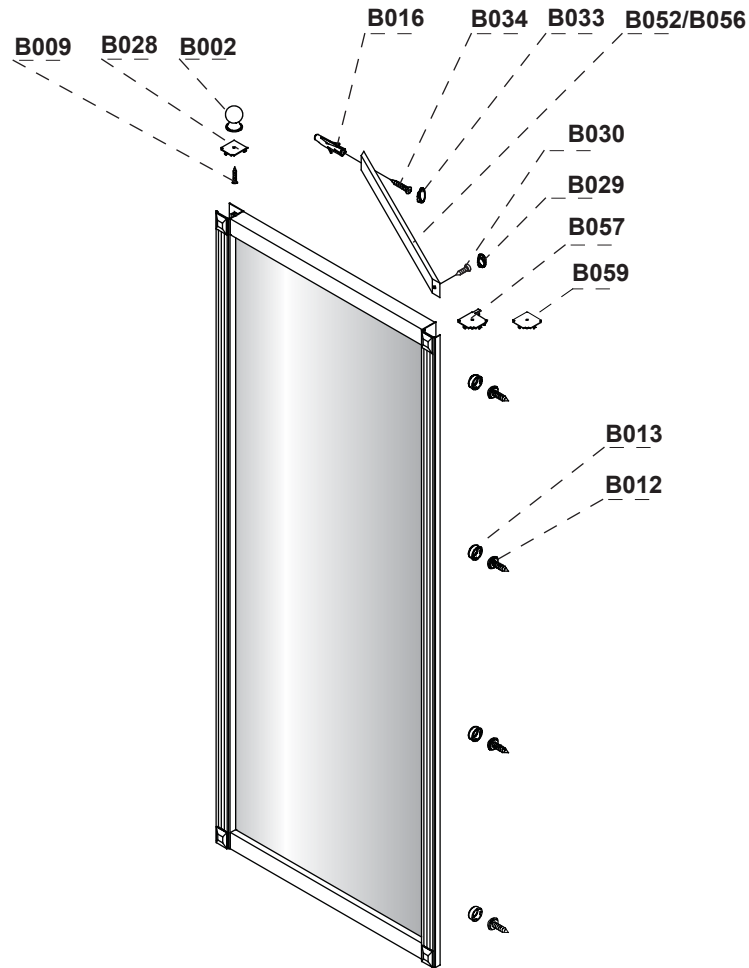


B002 1x	B027 1x	B028 1x	B009 1x ST3.5*16mm	B034 1x ST4*35mm
B033 1x	B030 1x ST4*25mm	B029 1x	B016 1x	B012 4x ST3.5*10mm
B013 4x	B057 1x RH	B058 1x LH	B059 1x RH	B060 1x LH
B052/B056 1x - B052 is for 700, 760, 800 side panel - B056 is for 900 side panel				


Hinged Door and Inline Panel (Pages 5 - 10)






Left

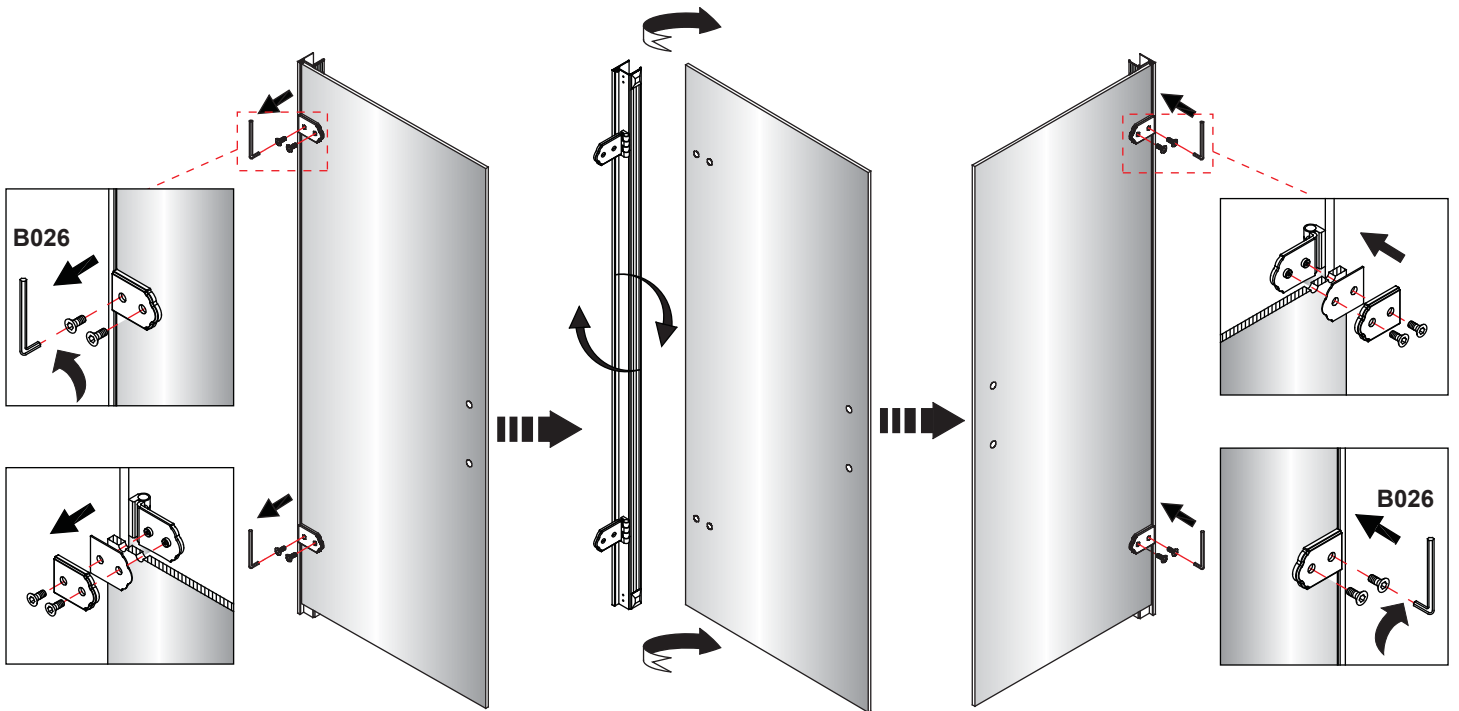


①

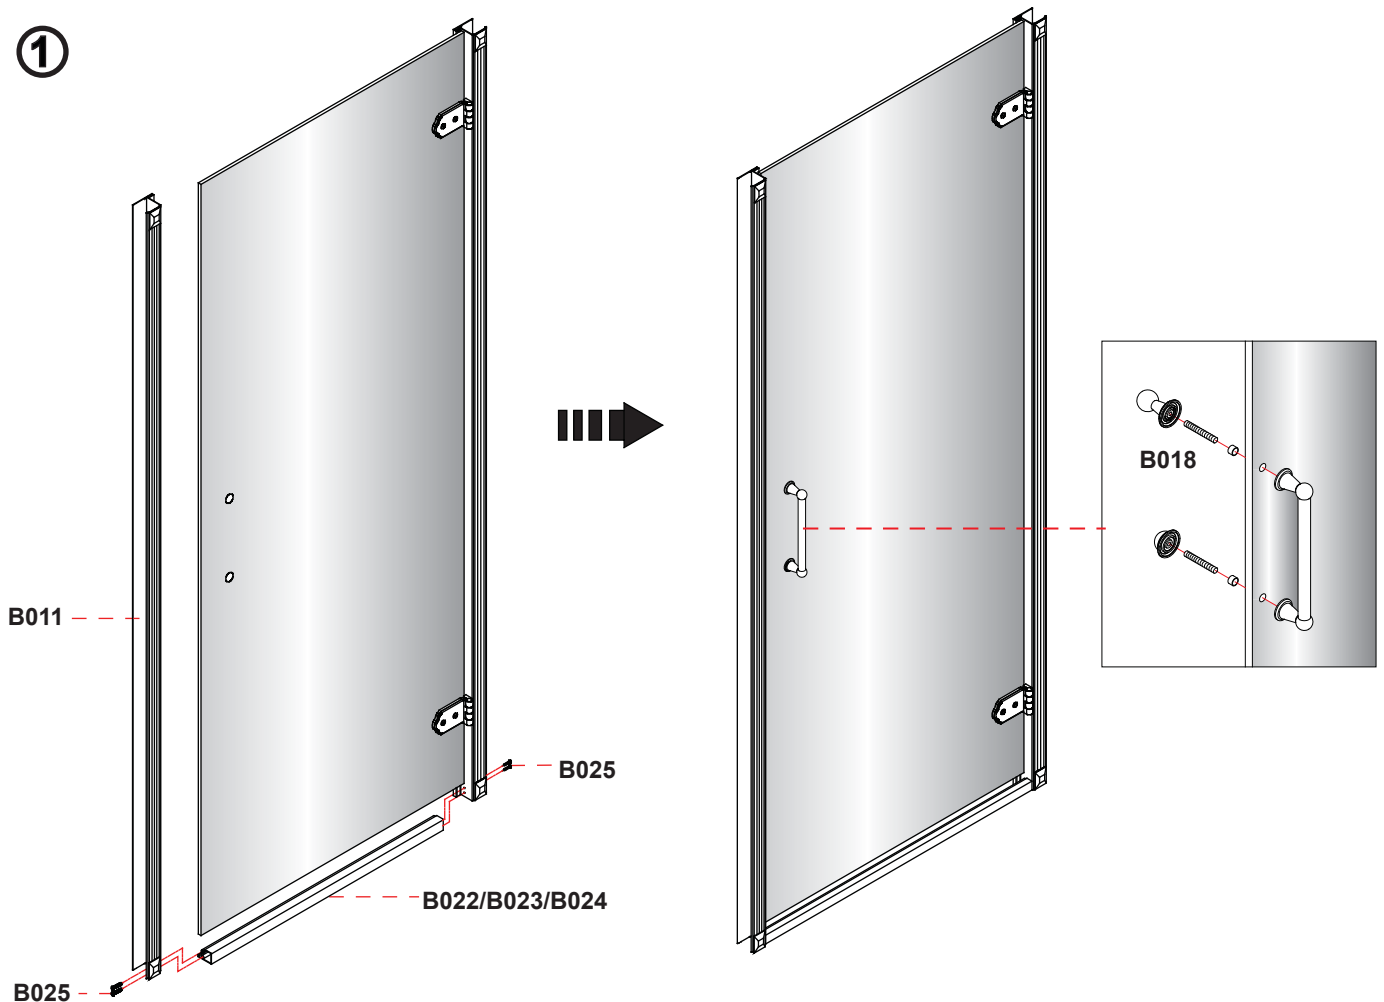


At this step the wall profile on the hinged side should not be fixed to the wall, and should be done at step 5.

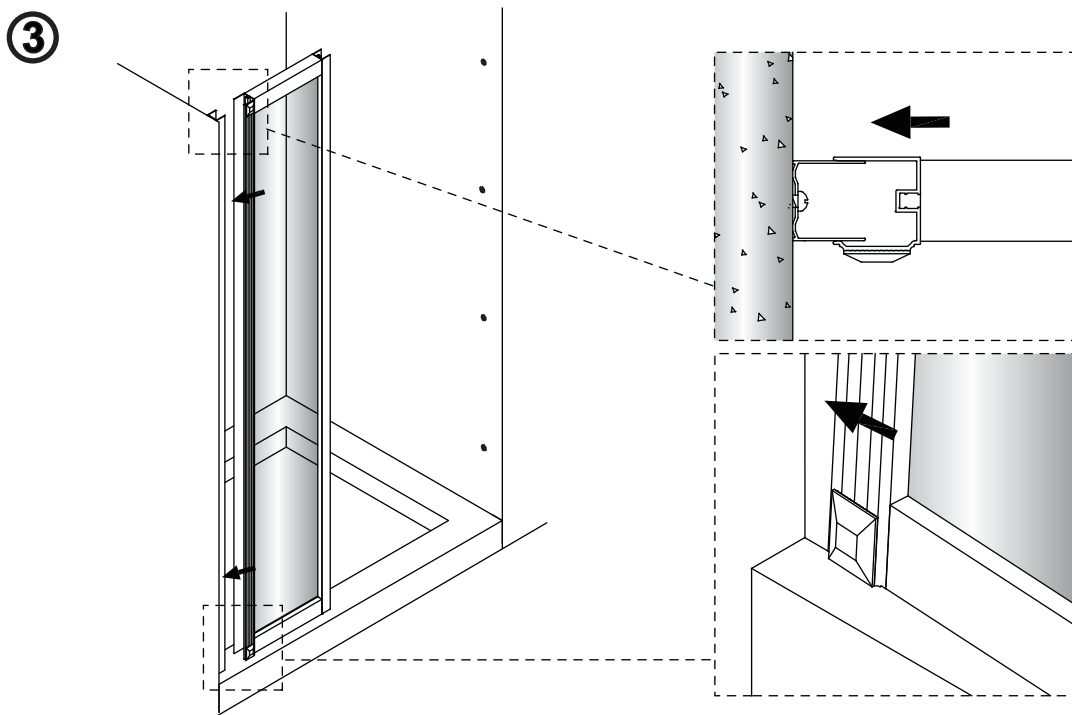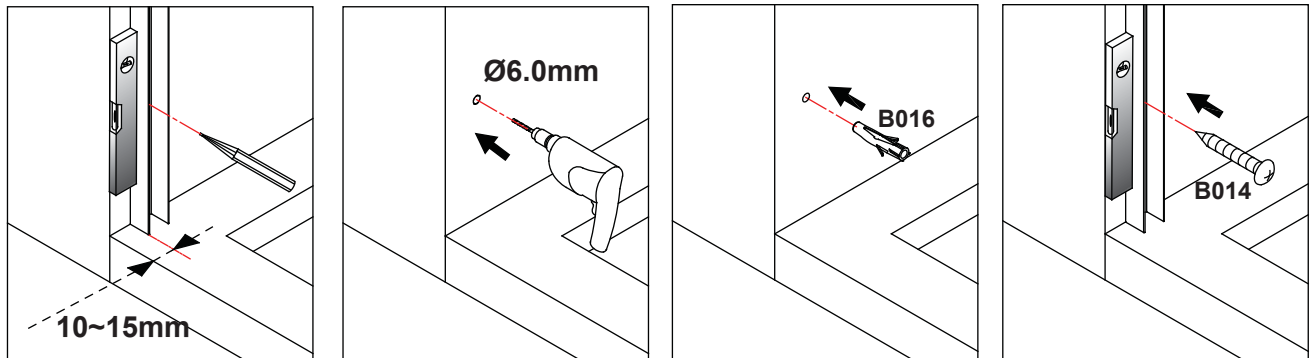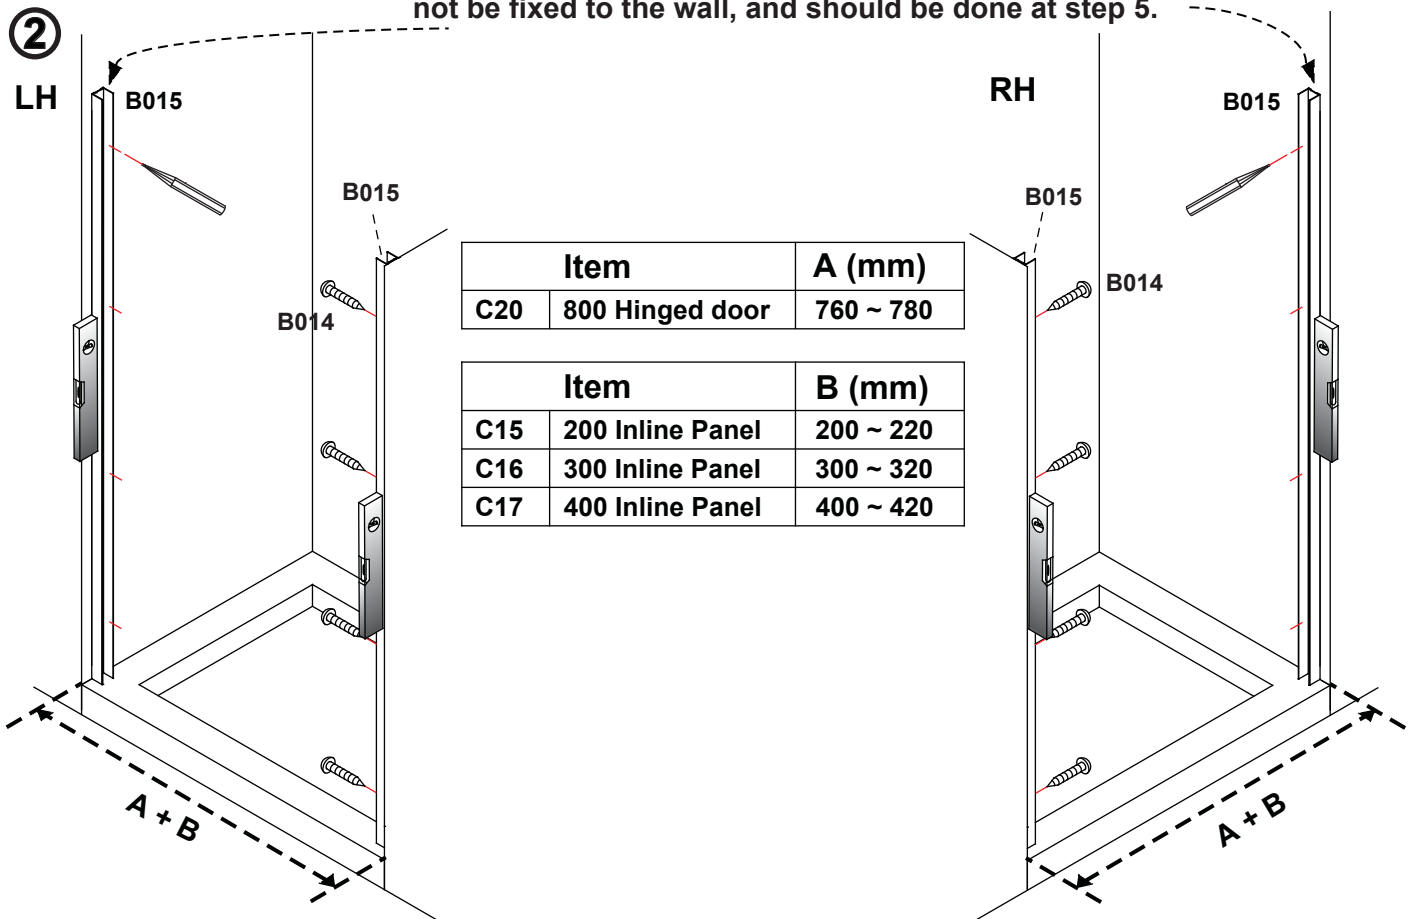

④

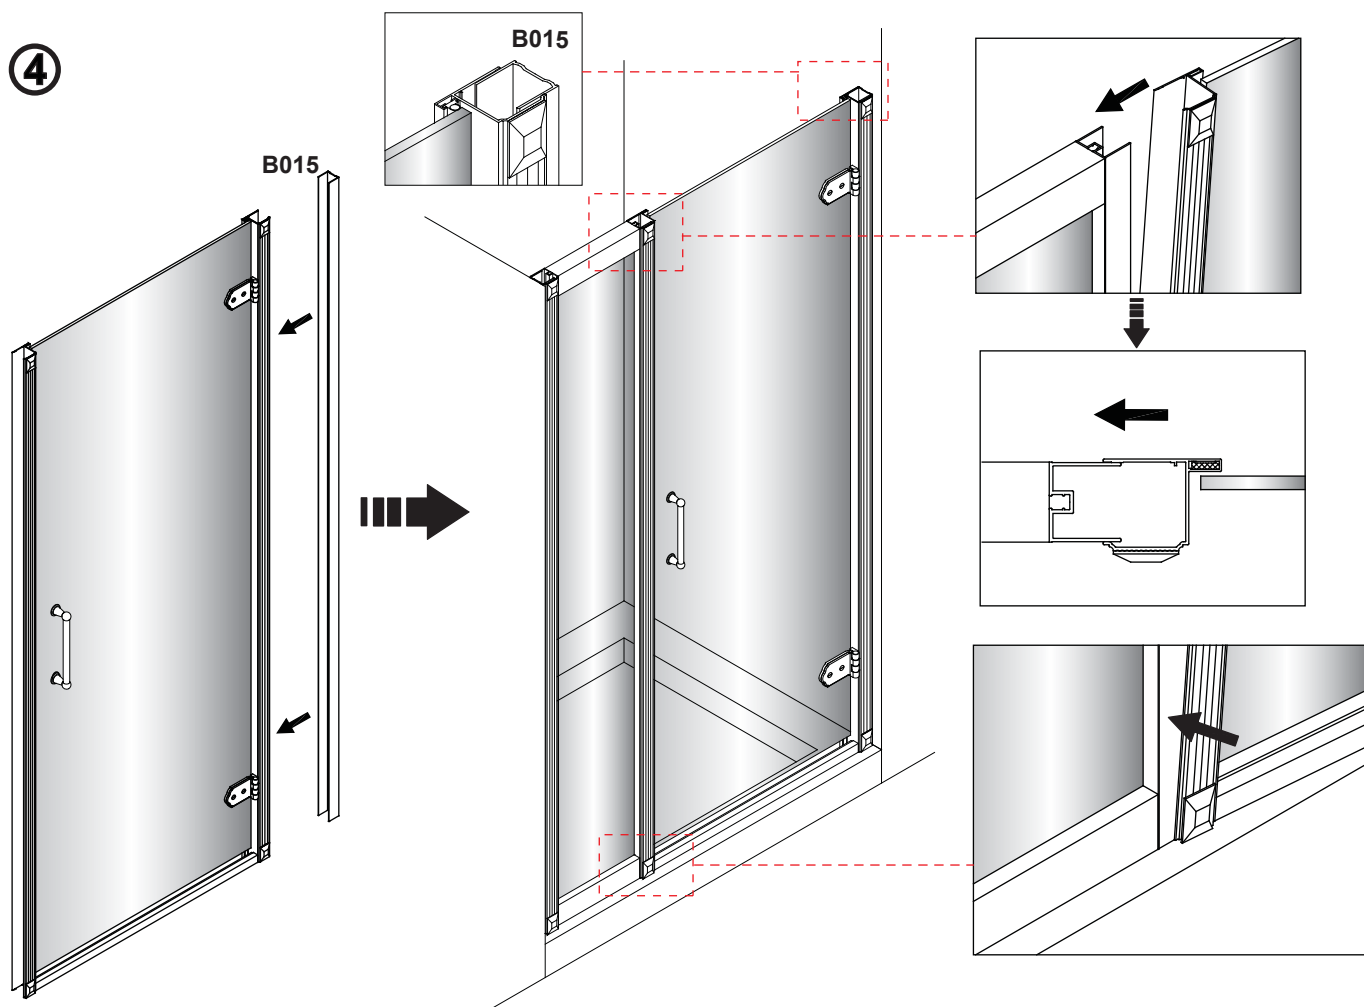


⑤

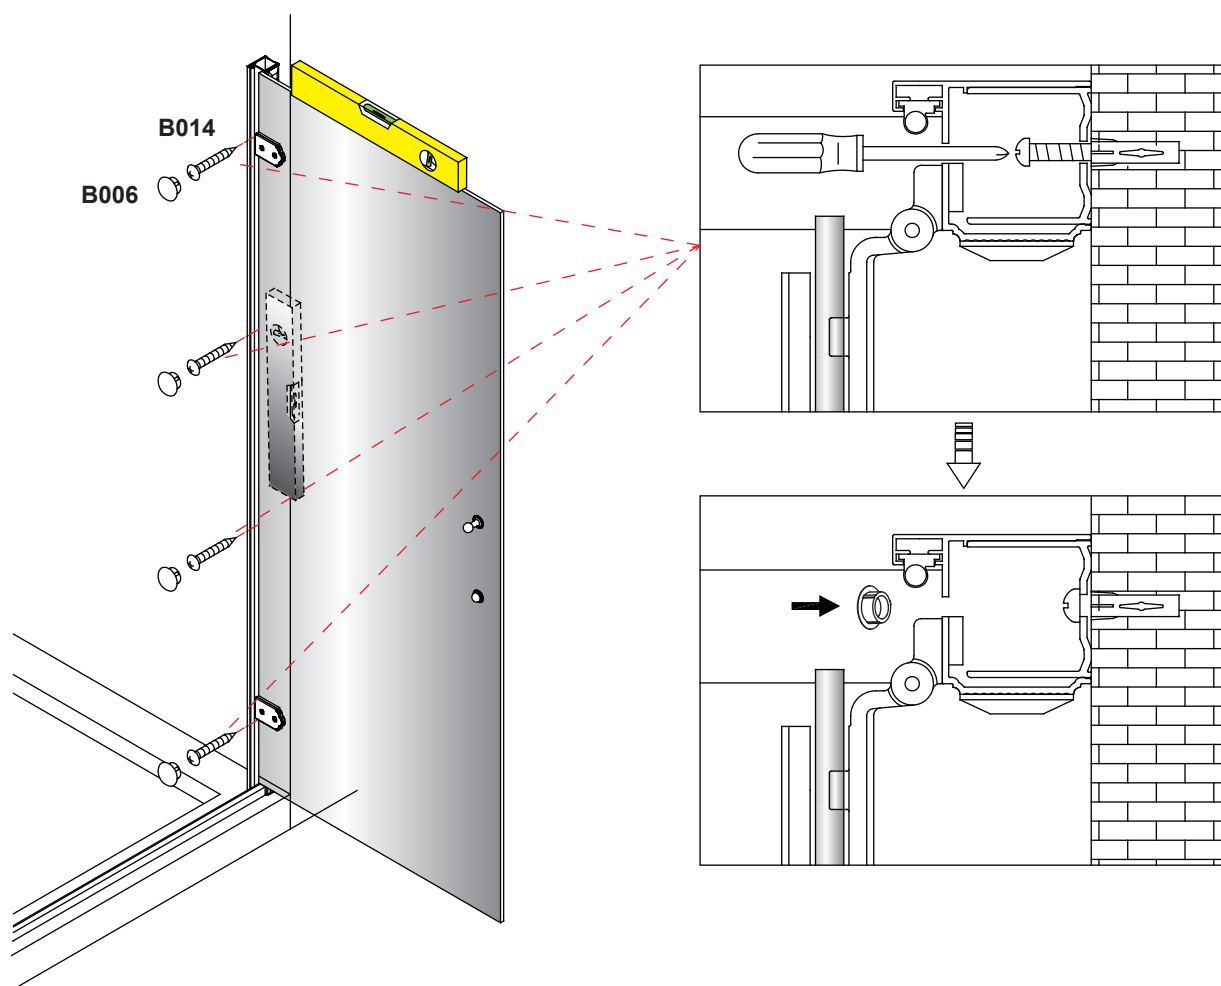


* Please note when cutting parts B019/B20/B21 a sharp fine tooth hacksaw should be used.

⑥

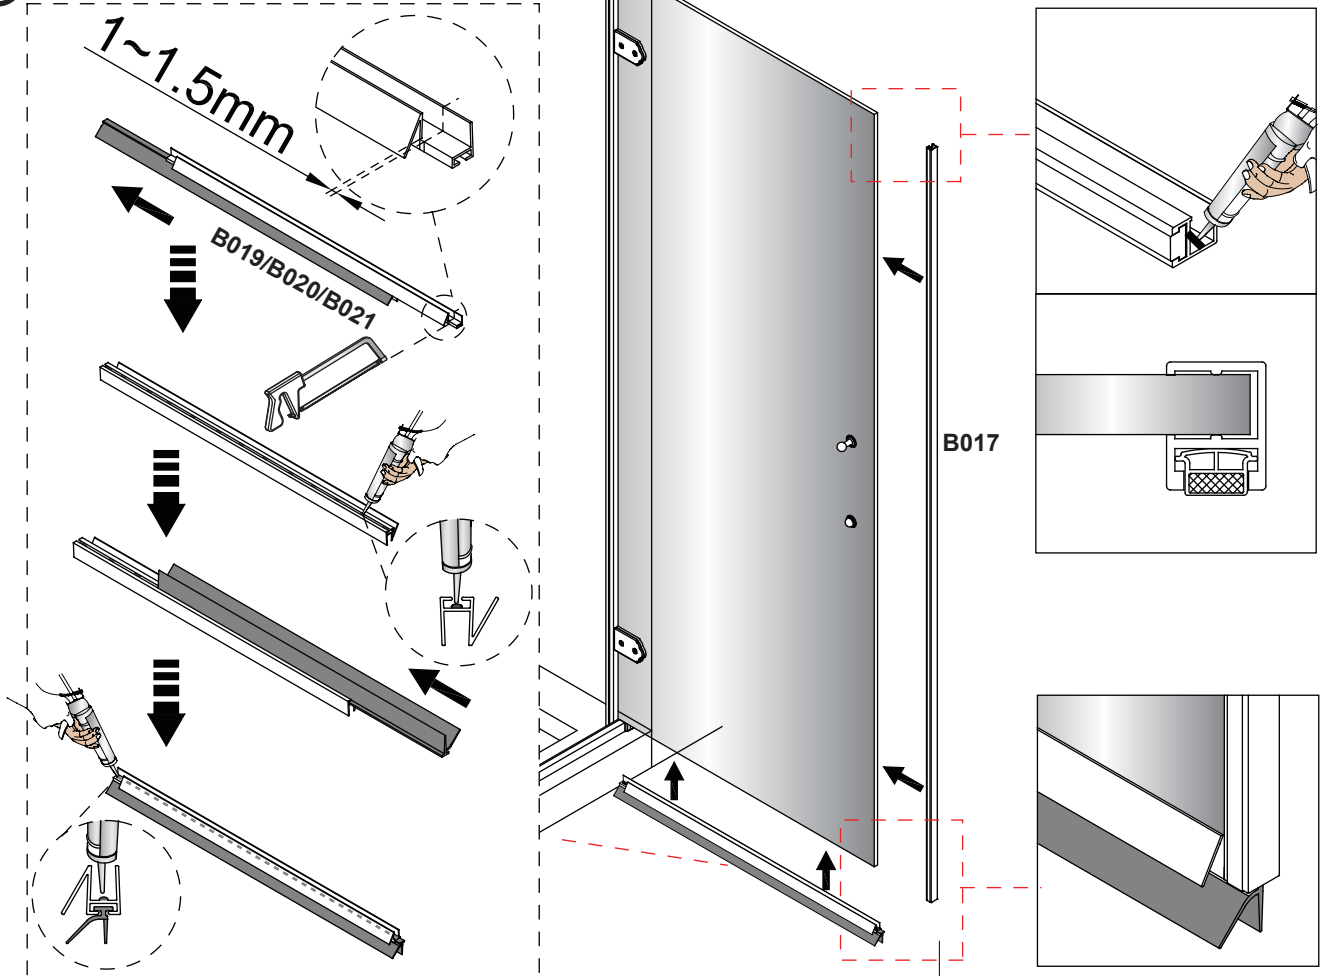



⑦

Once you have checked that the door opens and closes correctly, fix the door frame to the wall channels. From inside drill 4 holes through door frame (in the marked positions). Fix using screws (B012), attach on the covers (B013).

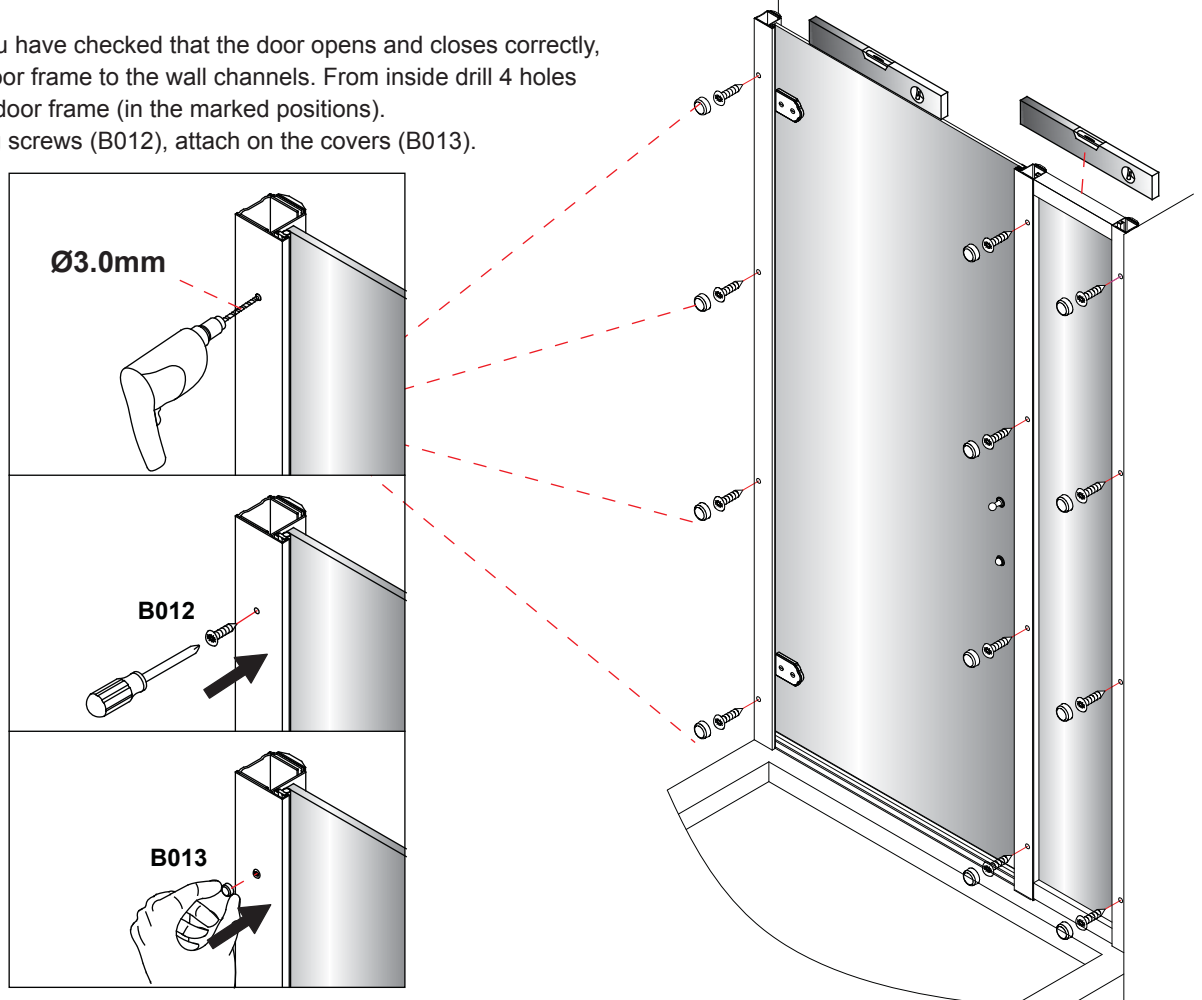












Only if adjustment is required.

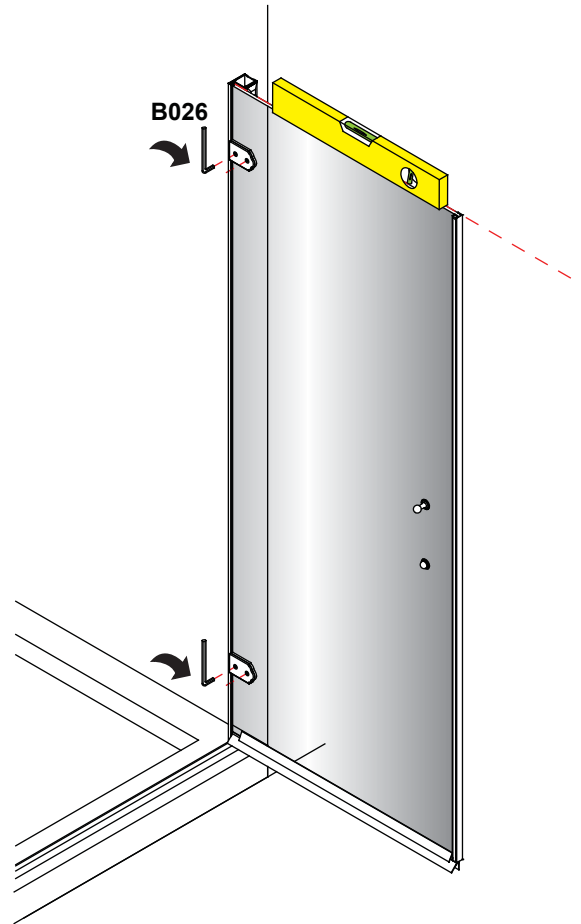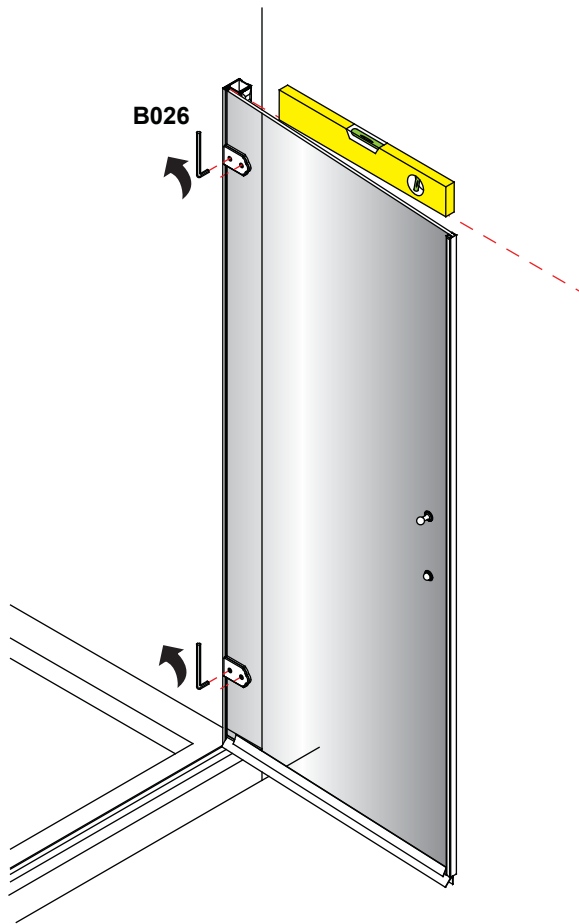





8

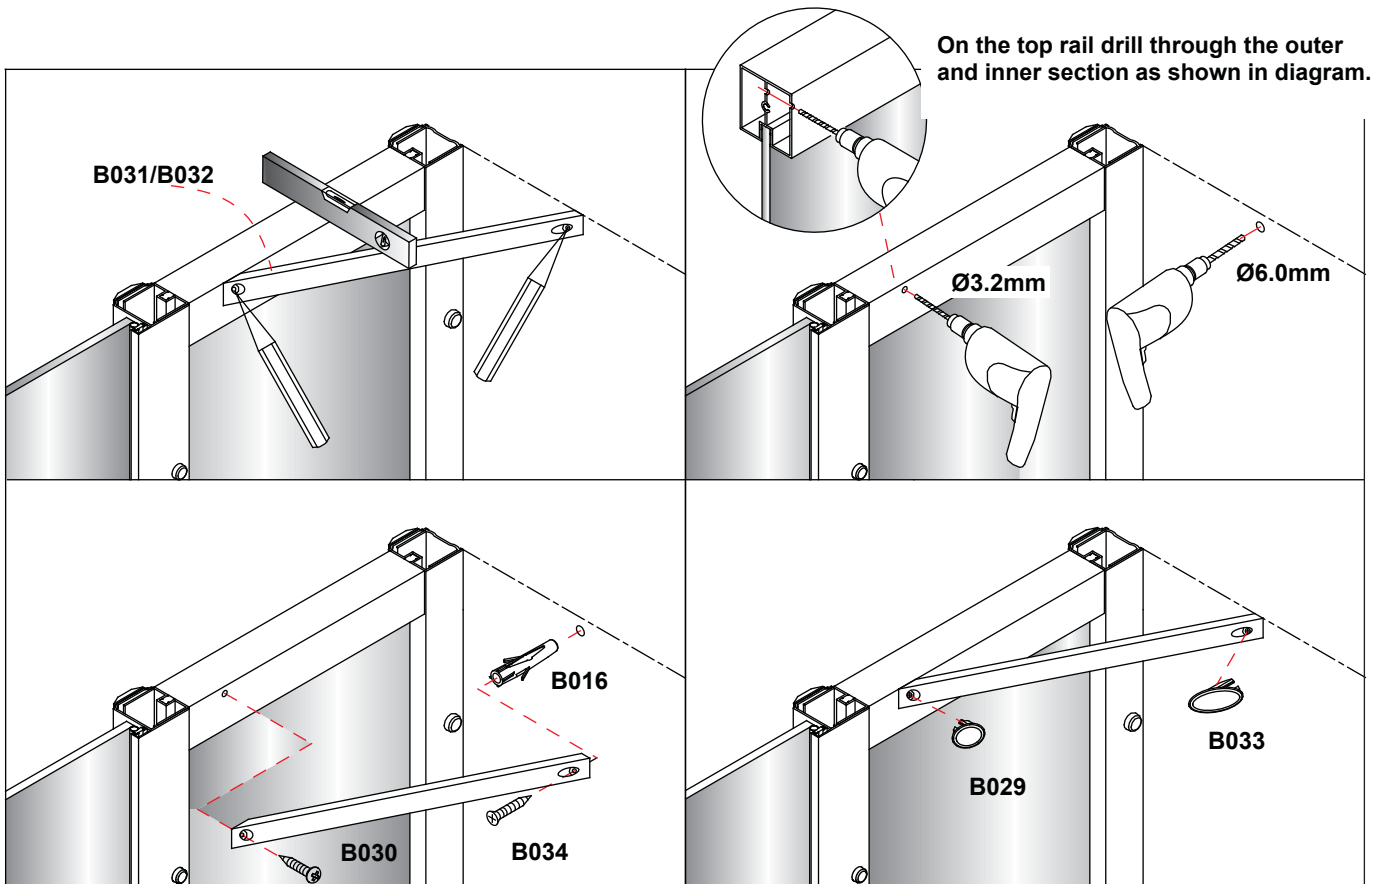

9

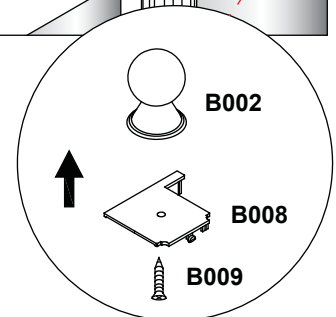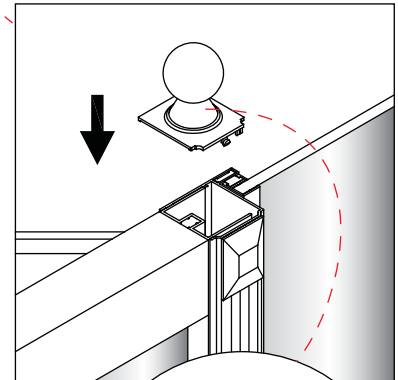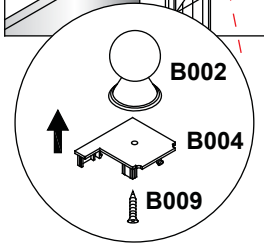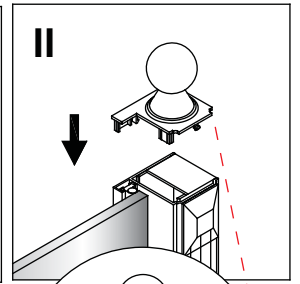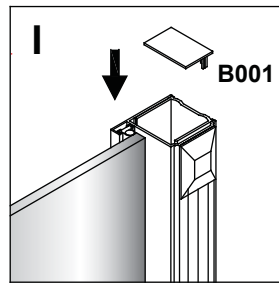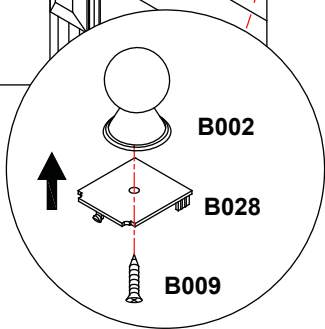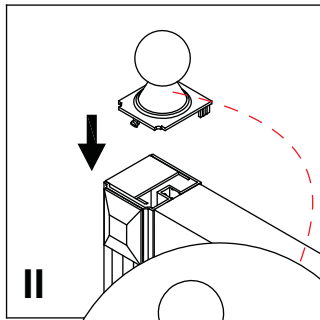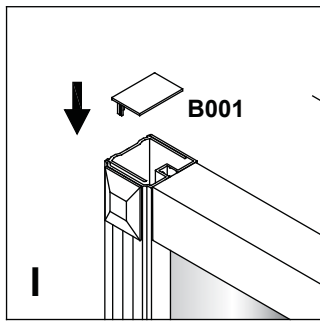

10

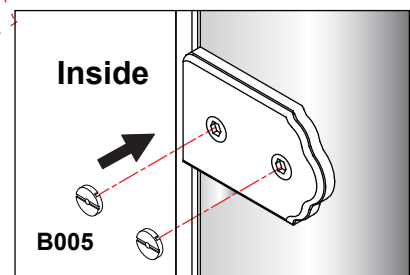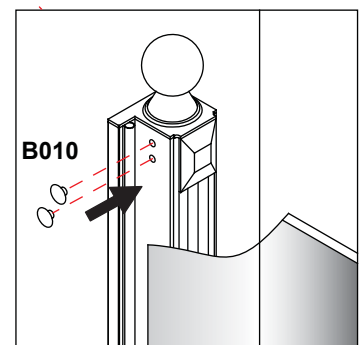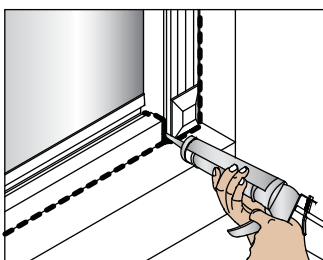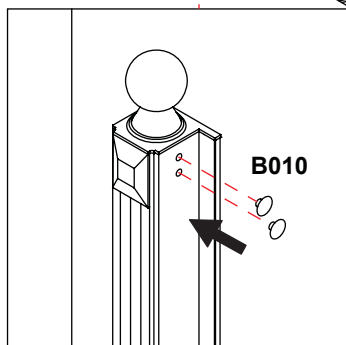

Hinged Door and Inline Panel Installation Complete




The hinged door is supplied for Right Handed installation. For Left Handed installation please loosen the hinges and reverse the glass as shown below.


Right Hand



Left Hand

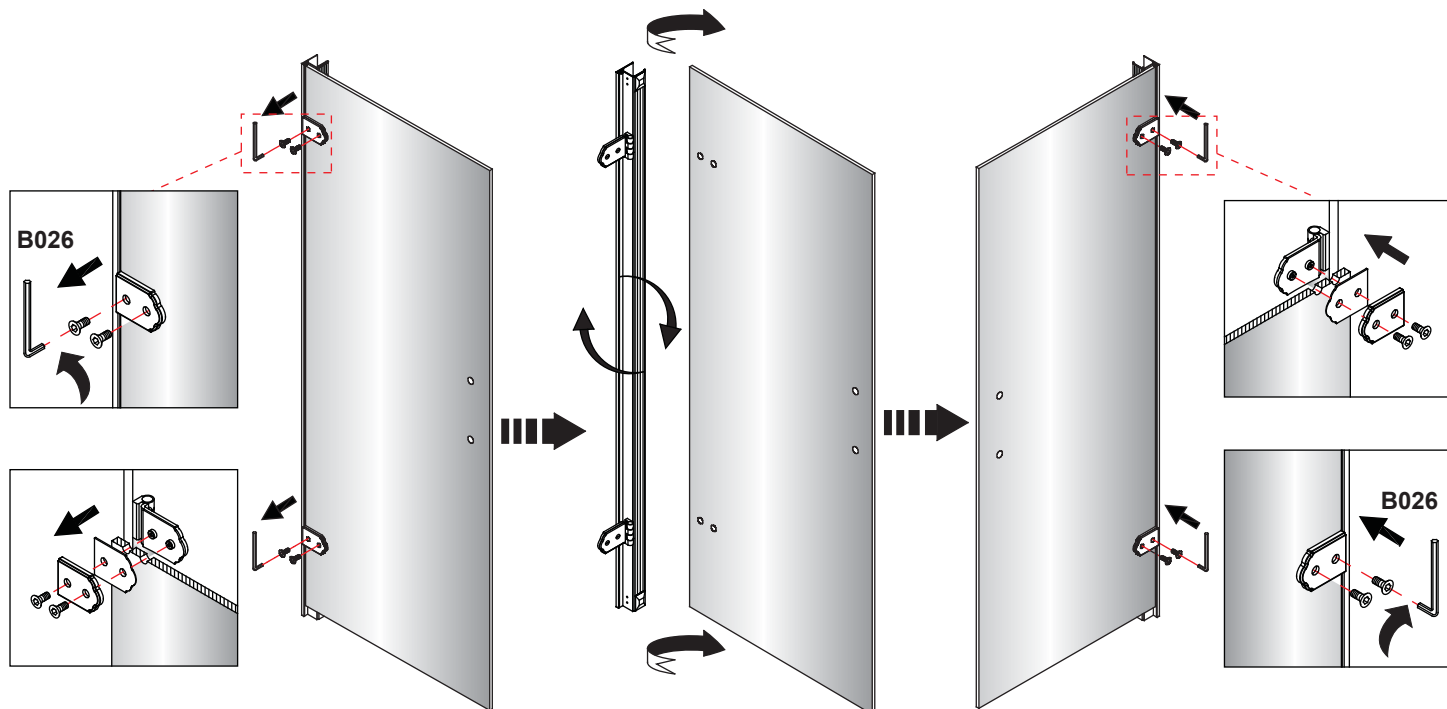


①

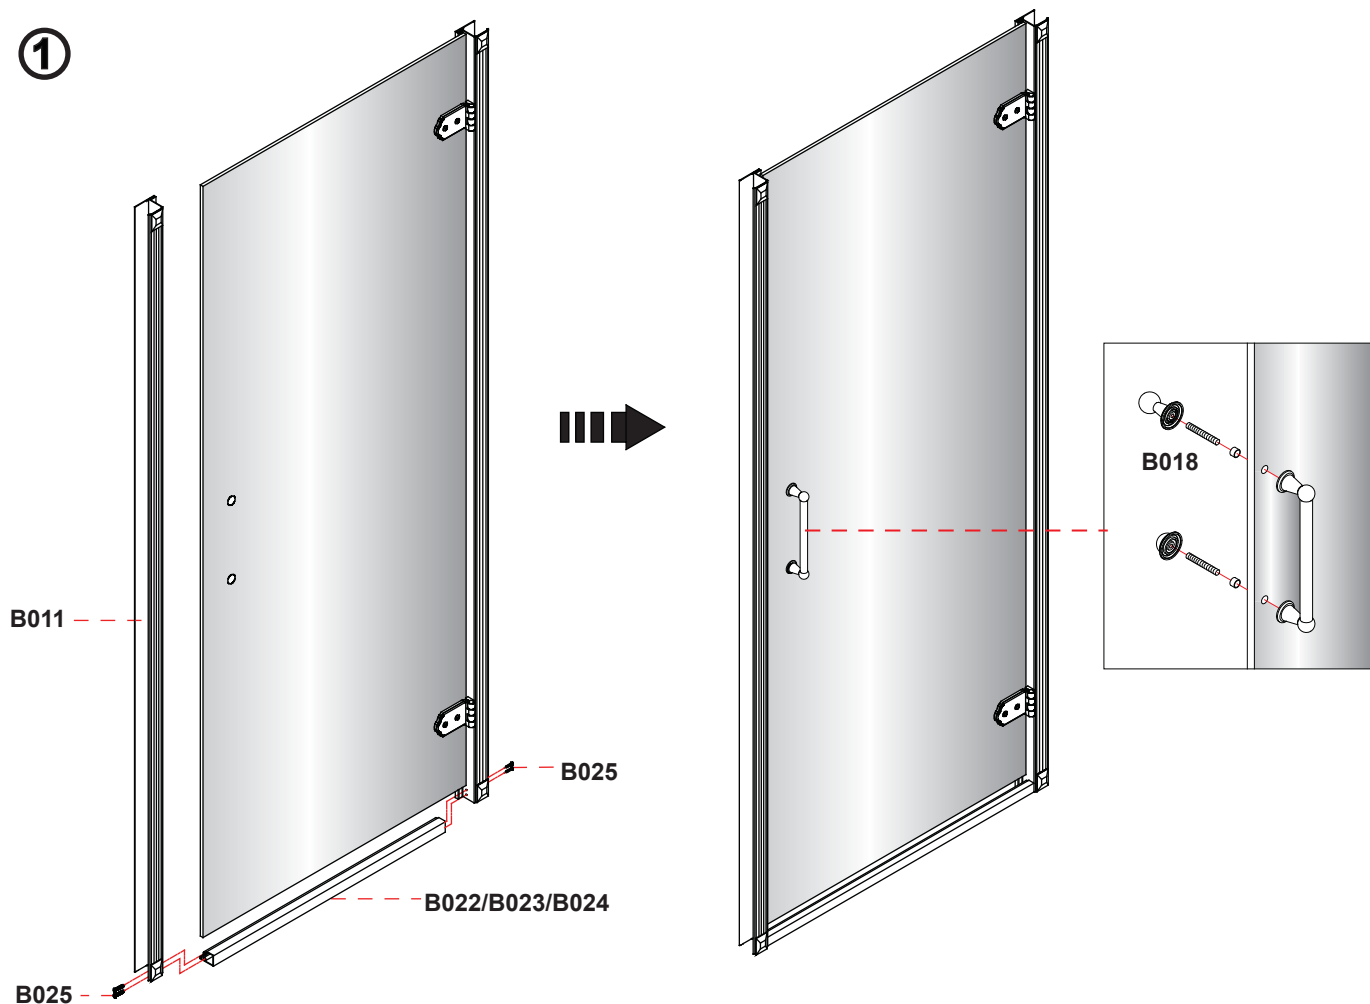

②

LH

At this step the wall profile on the hinged side should not be fixed to the wall, and should be done at step 5.





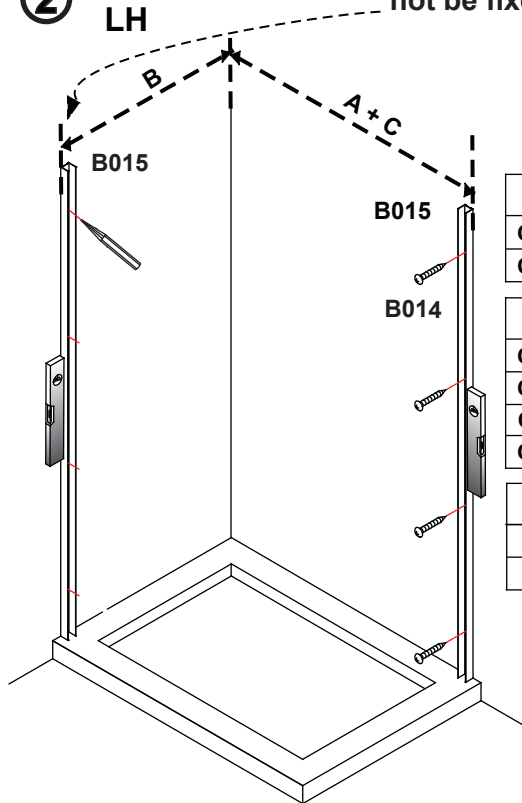


Item	A (mm)
C20 800 Hinged door	760 ~ 780
C21 900 Hinged door	860 ~ 880




Item	B (mm)
C11 700 Side Panel	660 ~ 680
C12 760 Side Panel	720 ~ 740
C13 800 Side Panel	760 ~ 780
C14 900 Side Panel	860 ~ 880

Item	C (mm)
C15 200 Inline Panel	200
C16 300 Inline Panel	300

RH

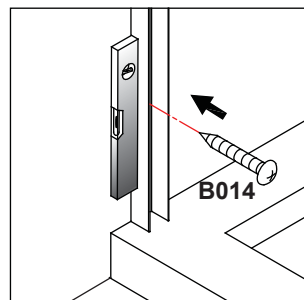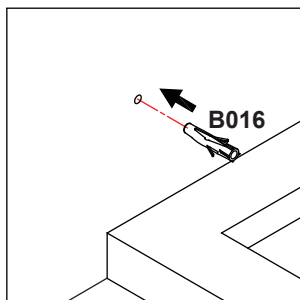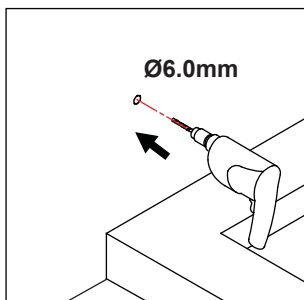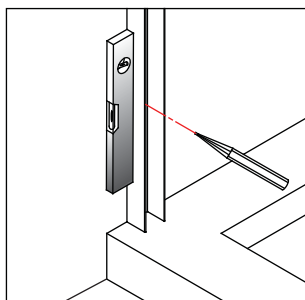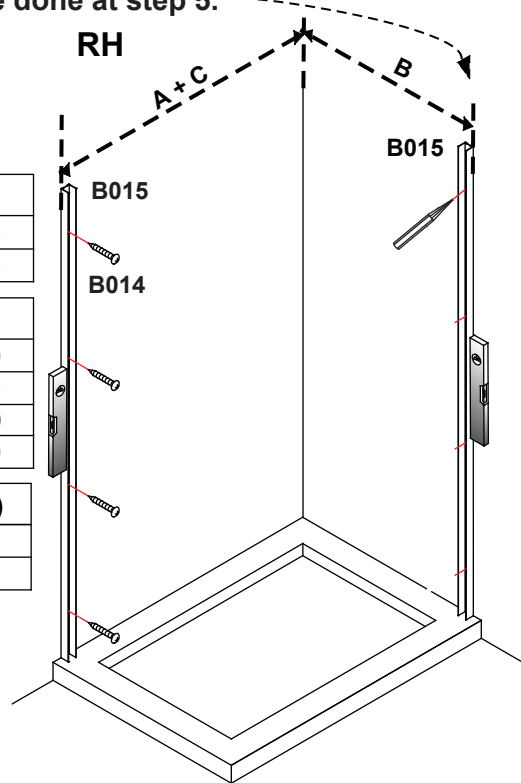


③

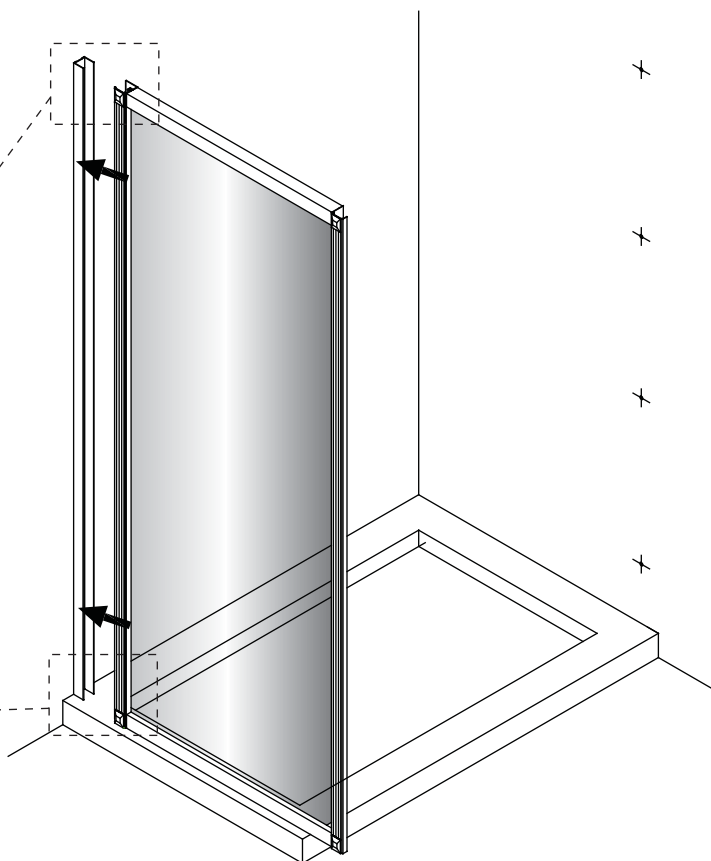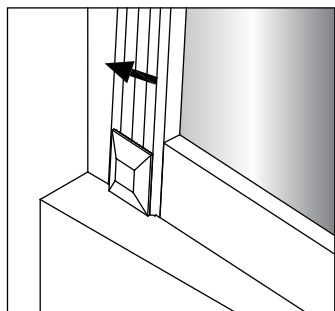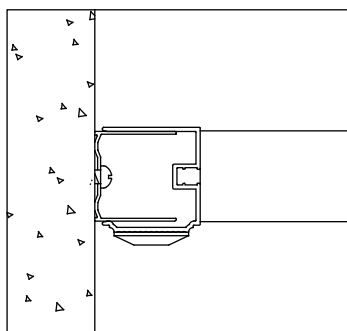


④

- Inline panel should be totally fitted within side panel and door profiles.
- Any adjustment required, can be gained from the wall profiles only.




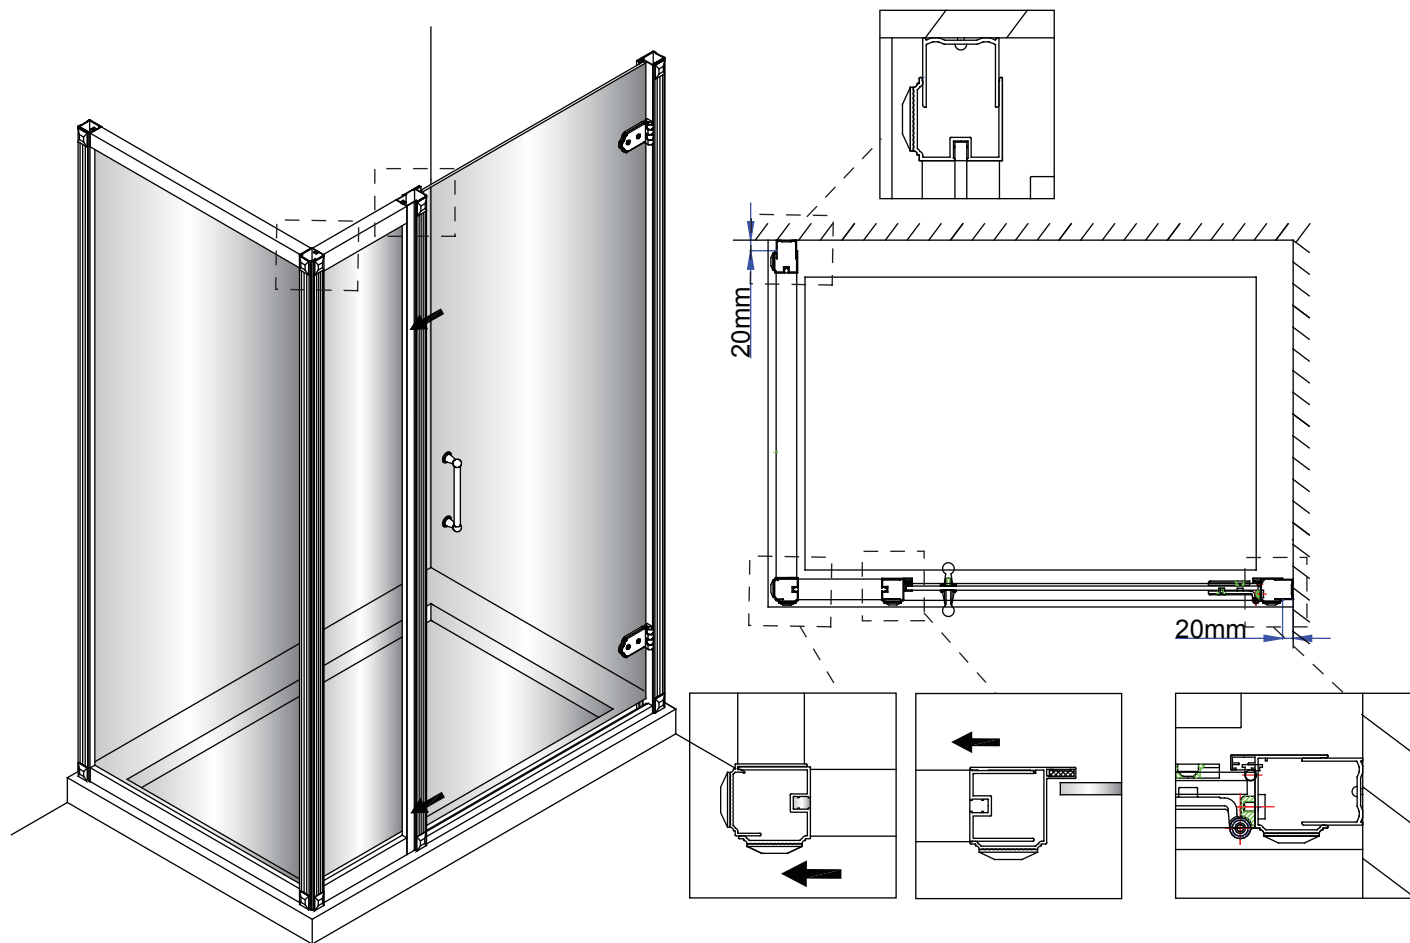


⑤

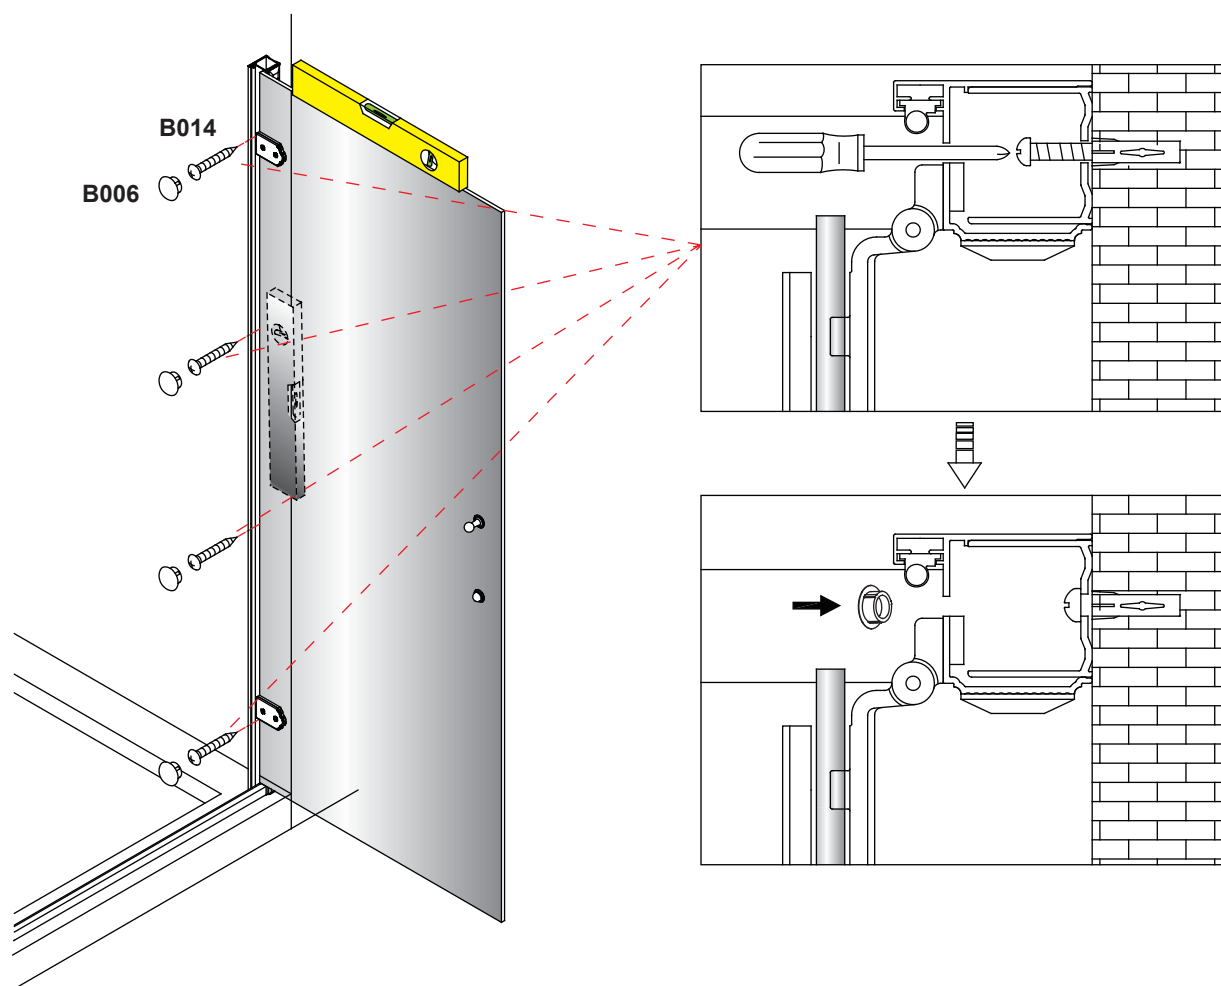



* Please note when cutting parts B019/B20/B21 a sharp fine tooth hacksaw should be used.

⑥

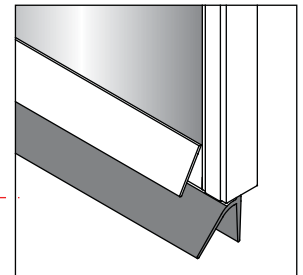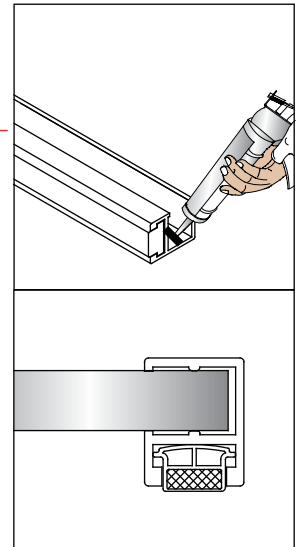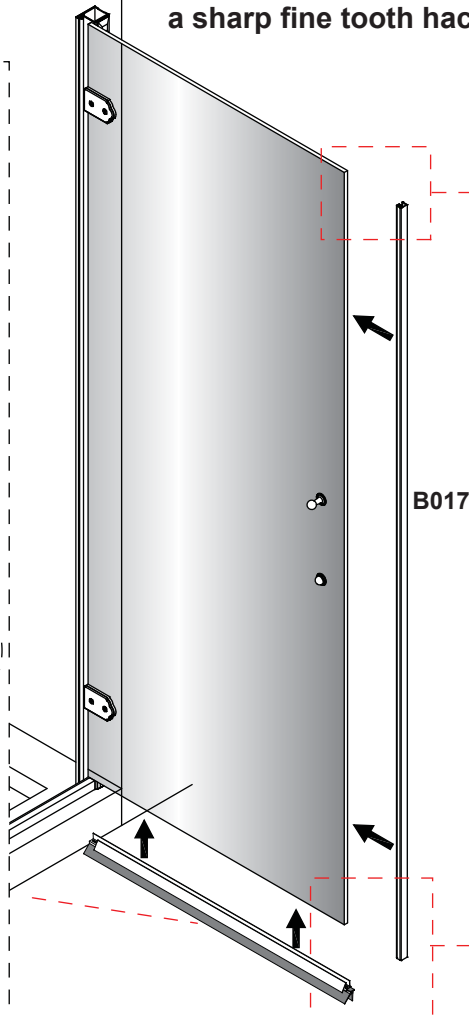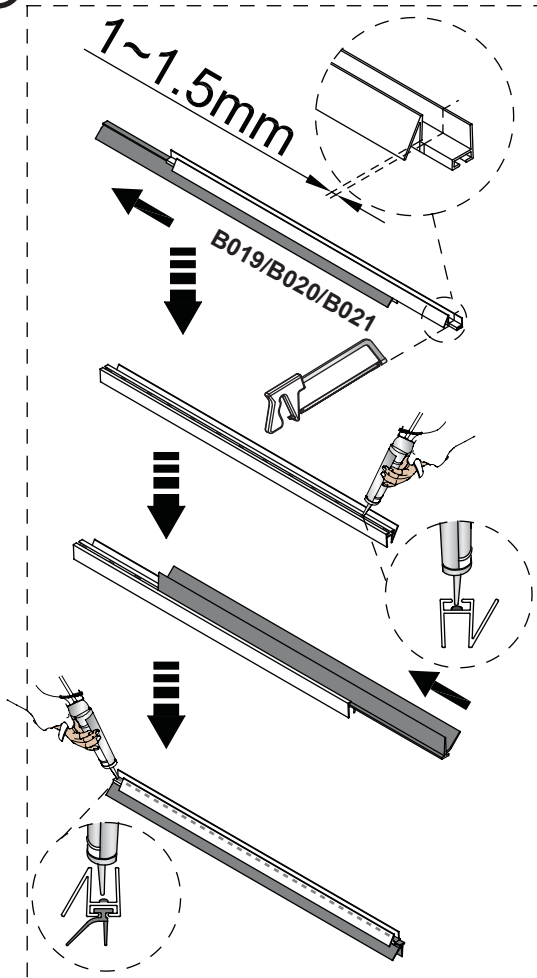



⑦

Once you have checked that the door opens and closes correctly, fix the door frame to the wall channels.
From inside drill 4 holes through door frame (in the marked positions)
Fix using screws (B012), attach on the covers (B013).

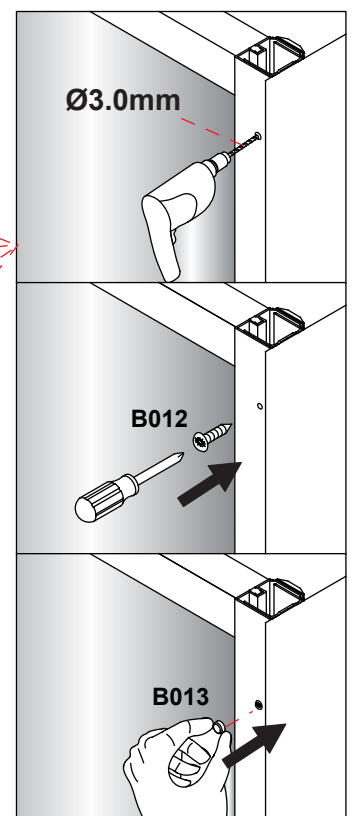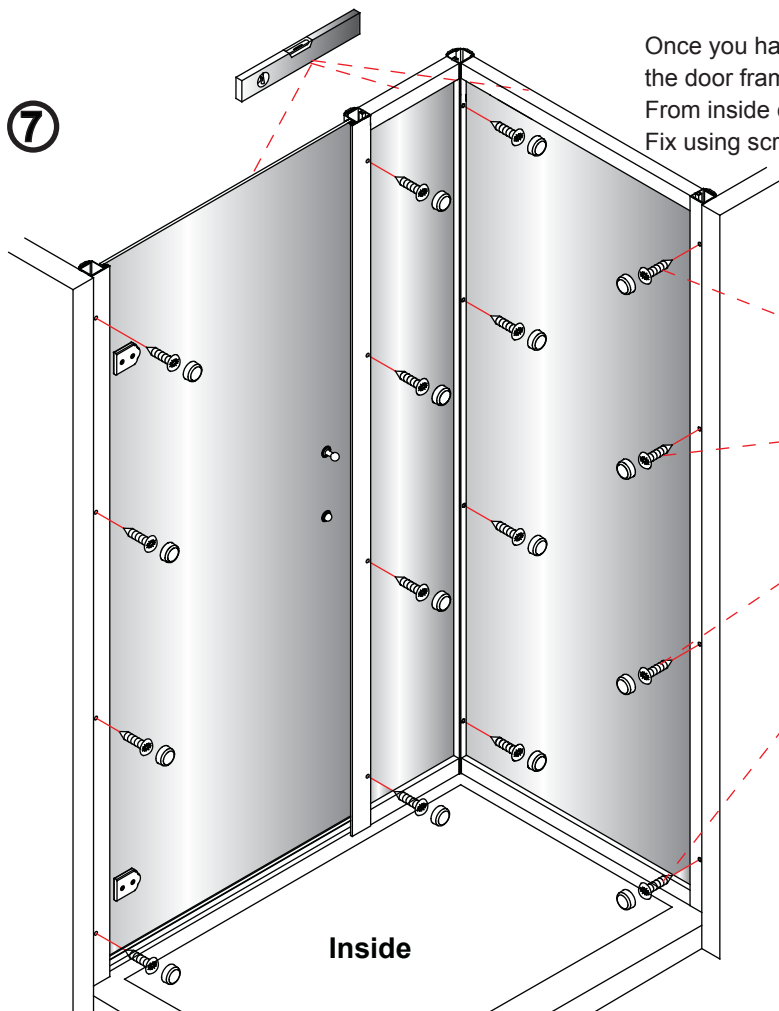







Only if adjustment is required.

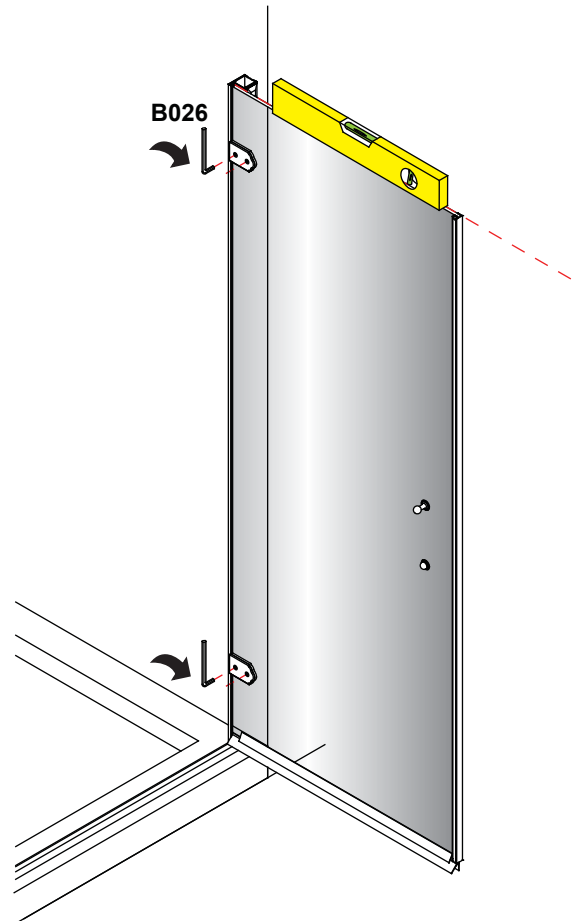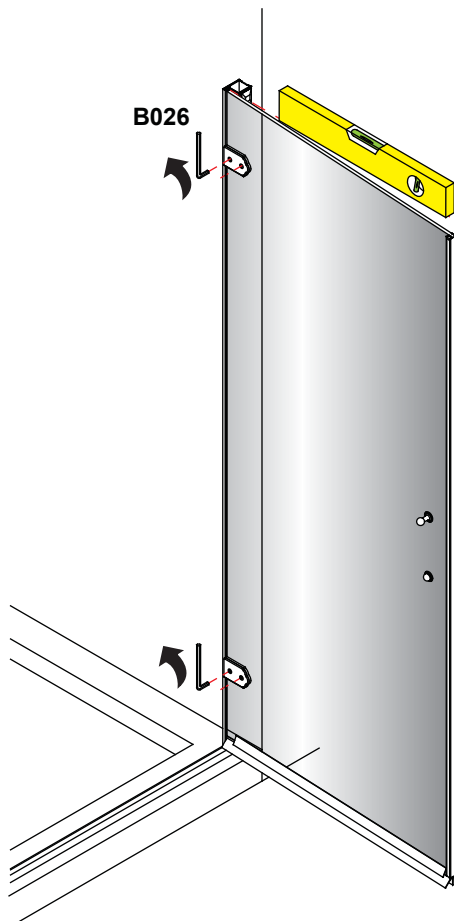


⑧



On the top rail drill through the outer and inner section as shown in diagram.

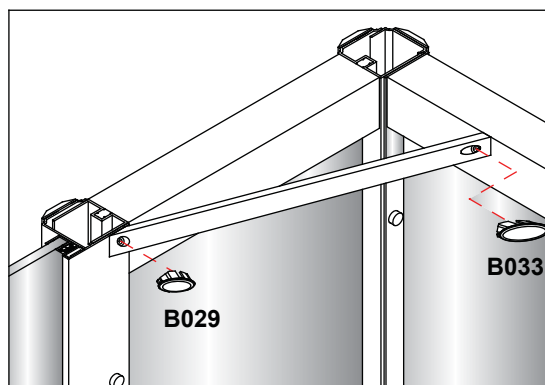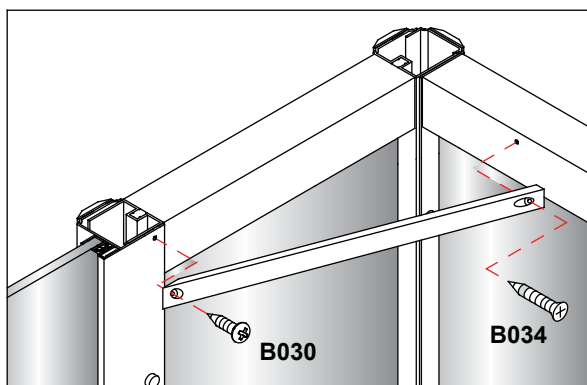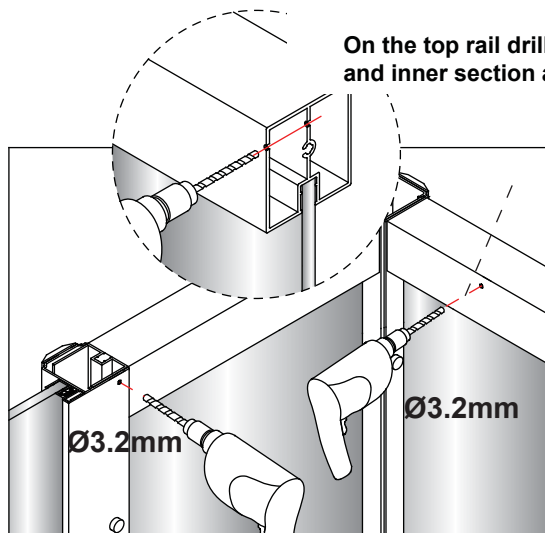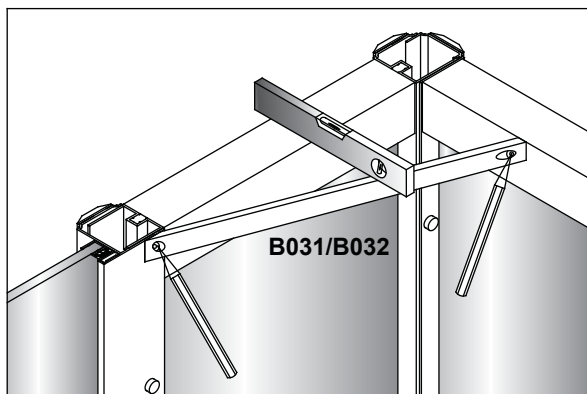

9

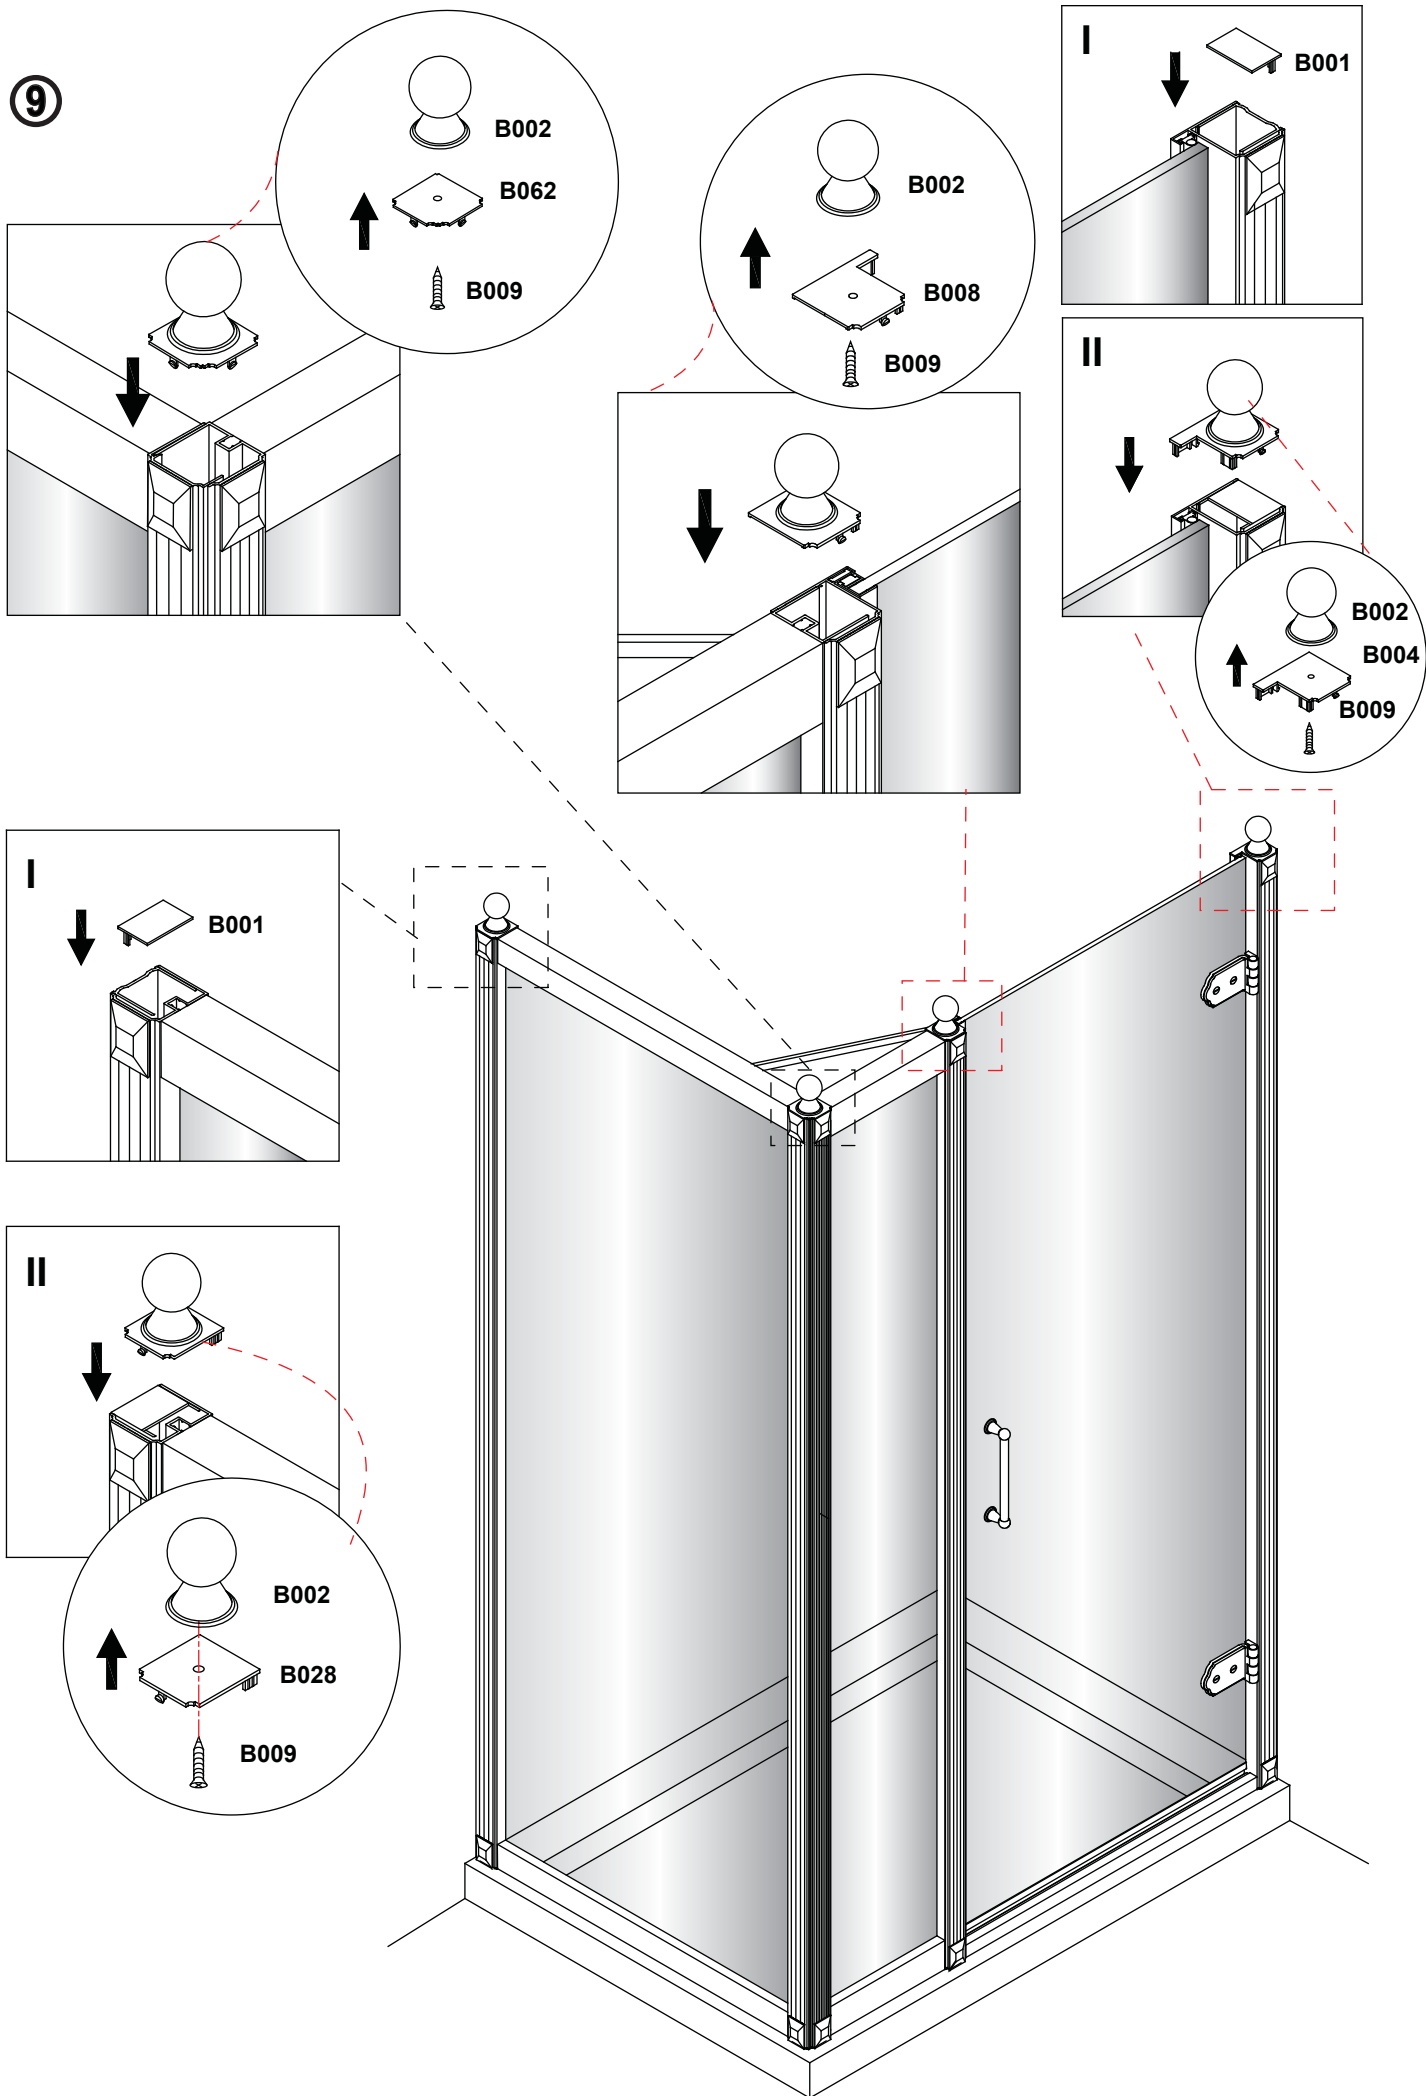

10 Install the supporting bar supplied with the side panel if necessary.

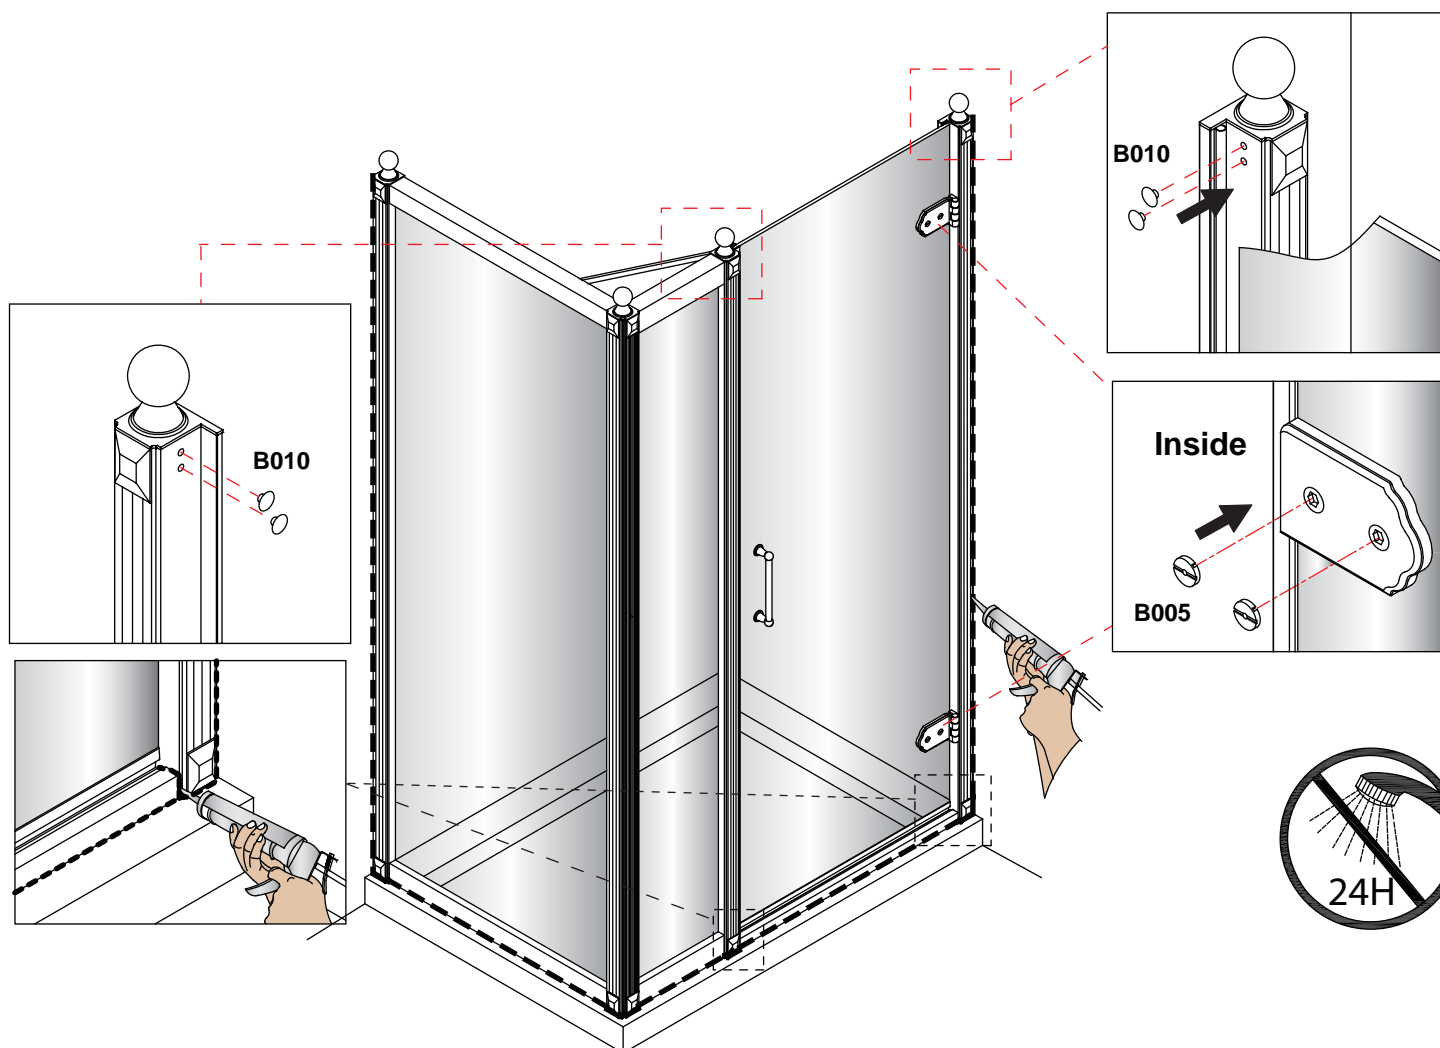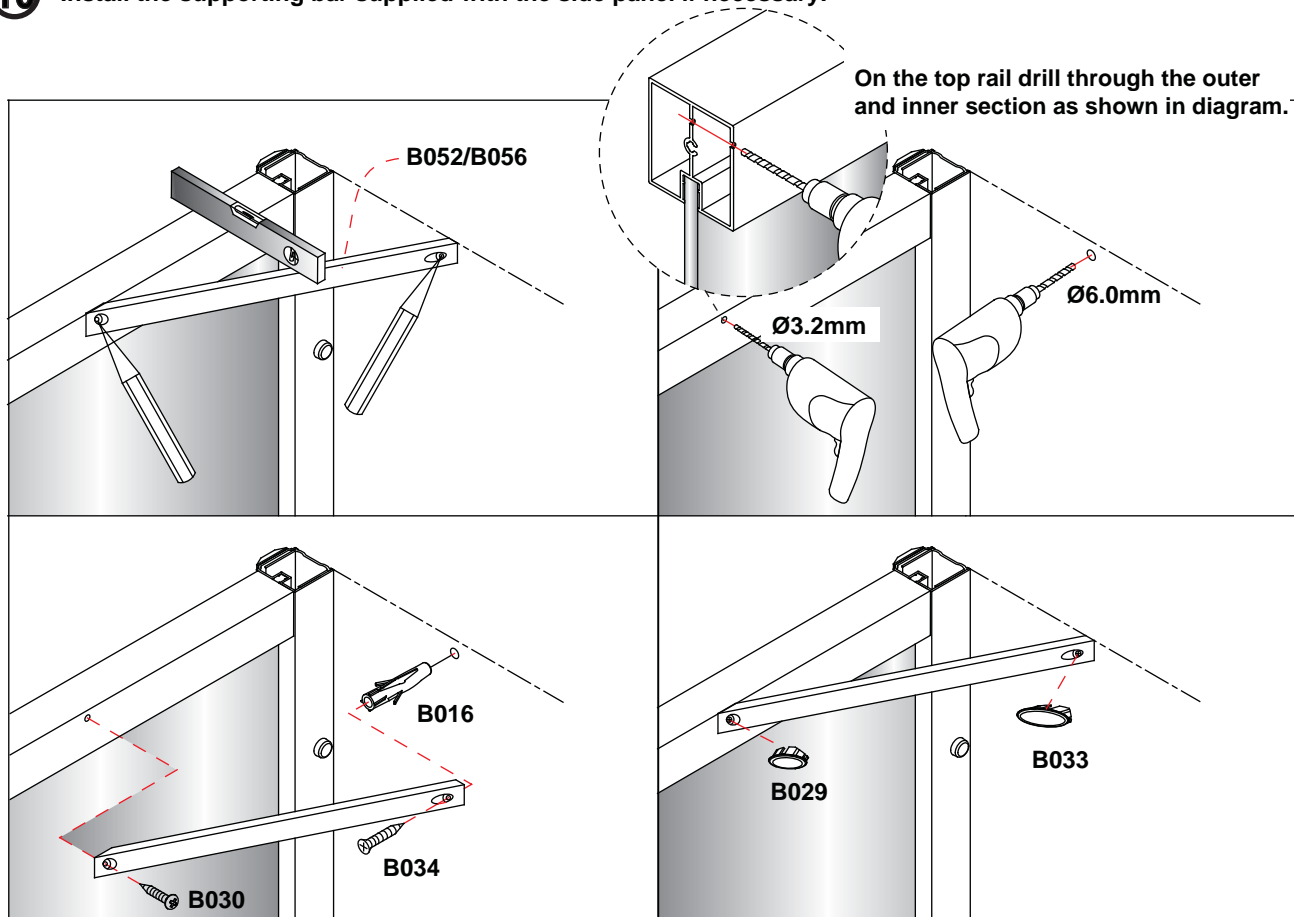

Hinged Door and Inline Panel with Side Panel Installation Complete

● PLEASE REFER TO THE INDIVIDUAL DOOR AND SIDE PANEL INSTRUCTIONS FOR CORRECT INSTALLATION WITH THIS INLINE PANEL.

- Check the contents of the pack carefully before installation.
- The tray **MUST** be installed level and fully sealed to the tiles.
- Handle with care. Impacts can damage both the glass and the frame.
- Check for any hidden pipes or cables before drilling holes in the wall.
- The enclosure is reversible: " door can be either left or right opening. "

In the remainder of this manual the illustrations will only show the right hand installation.



The parts marked "LH" or "RH" would be only suitable for the relative shower enclosure.

- The wall fixings supplied may not be suitable for your installation. You may need to source alternatives depending on the construction of the wall you are fixing to.



Care and Cleaning:

- Do not use solvents or abrasive material or chemicals to clean the enclosure.
- Only clean using soapy water and a soft cloth, rinse thoroughly afterwards.


Hinged Door and 2x Inline Panel (Pages 5 - 10)

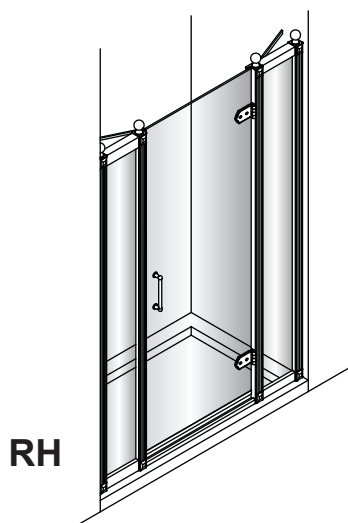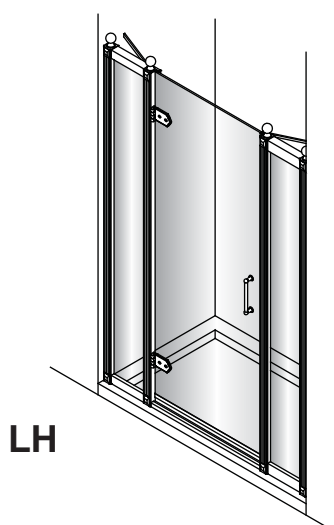

Hinged Door and 2x Inline Panel with Side Panel (Pages 11 - 18)

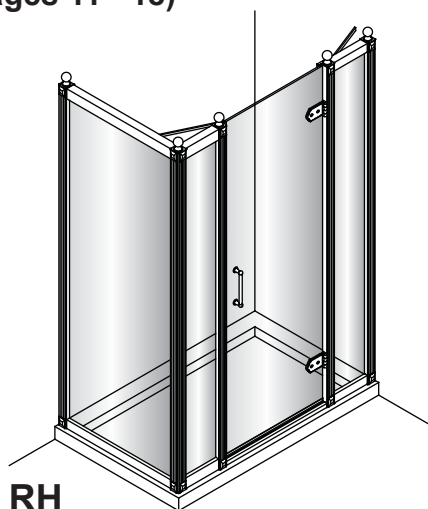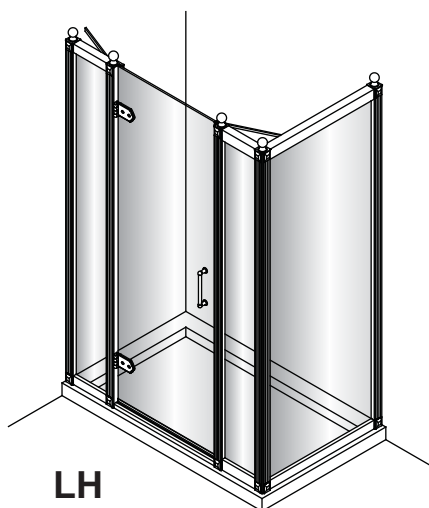






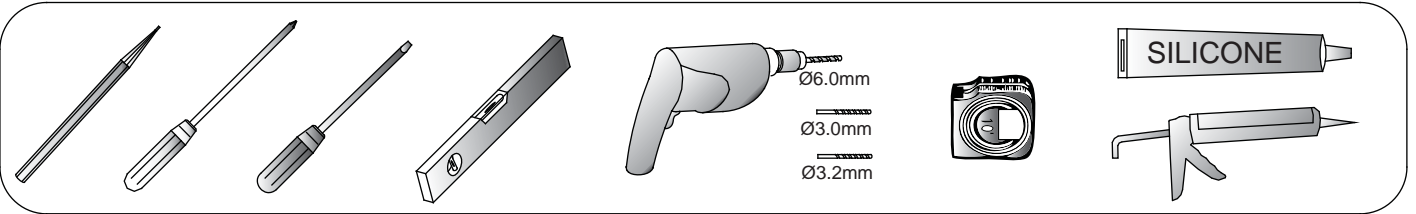





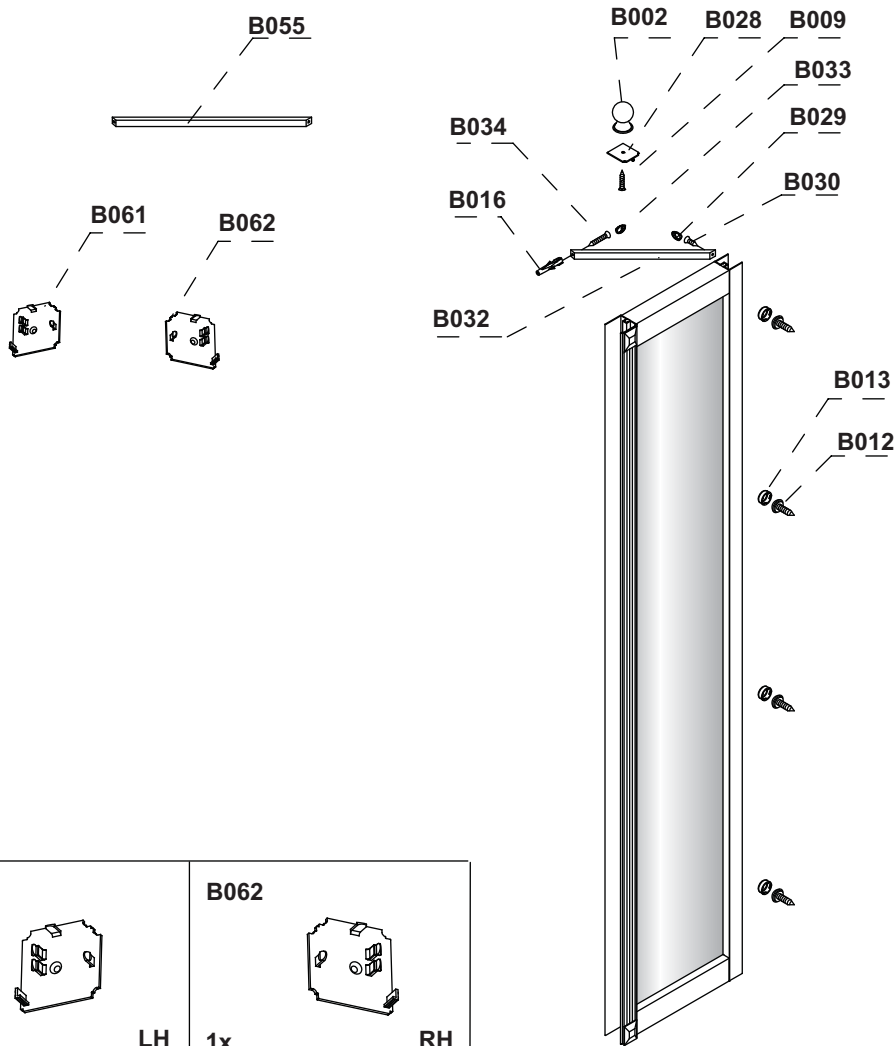




Tools required:




Parts supplied:

Inline Panel Box - C16/C17

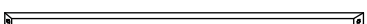


B061  1x LH	B062  1x RH			
B002  1x	B027  1x	B028  1x	B009  1x ST3.5*16mm	B034  1x ST4*35mm
B033  1x	B030  1x ST4*25mm	B029  1x	B016  1x	B012  4x ST3.5*10mm
B013  4x	B032  1x - B032 is for 300, 400 Inline panel	B055  1x - B055 is for 300, 400 Inline panel		

Tools required:

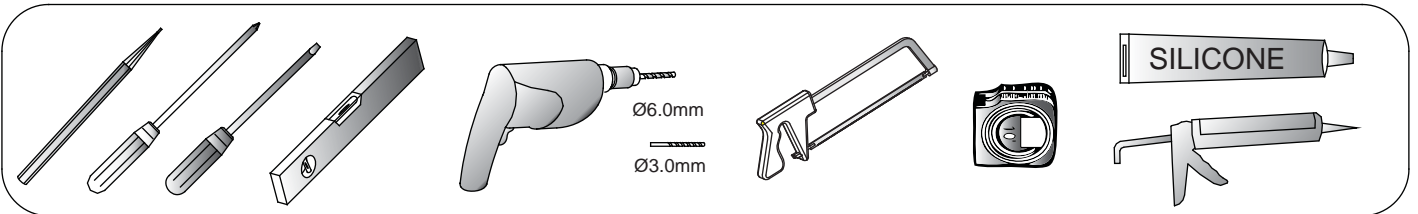


Parts supplied:

Hinged Door Box - C19/C20/C21

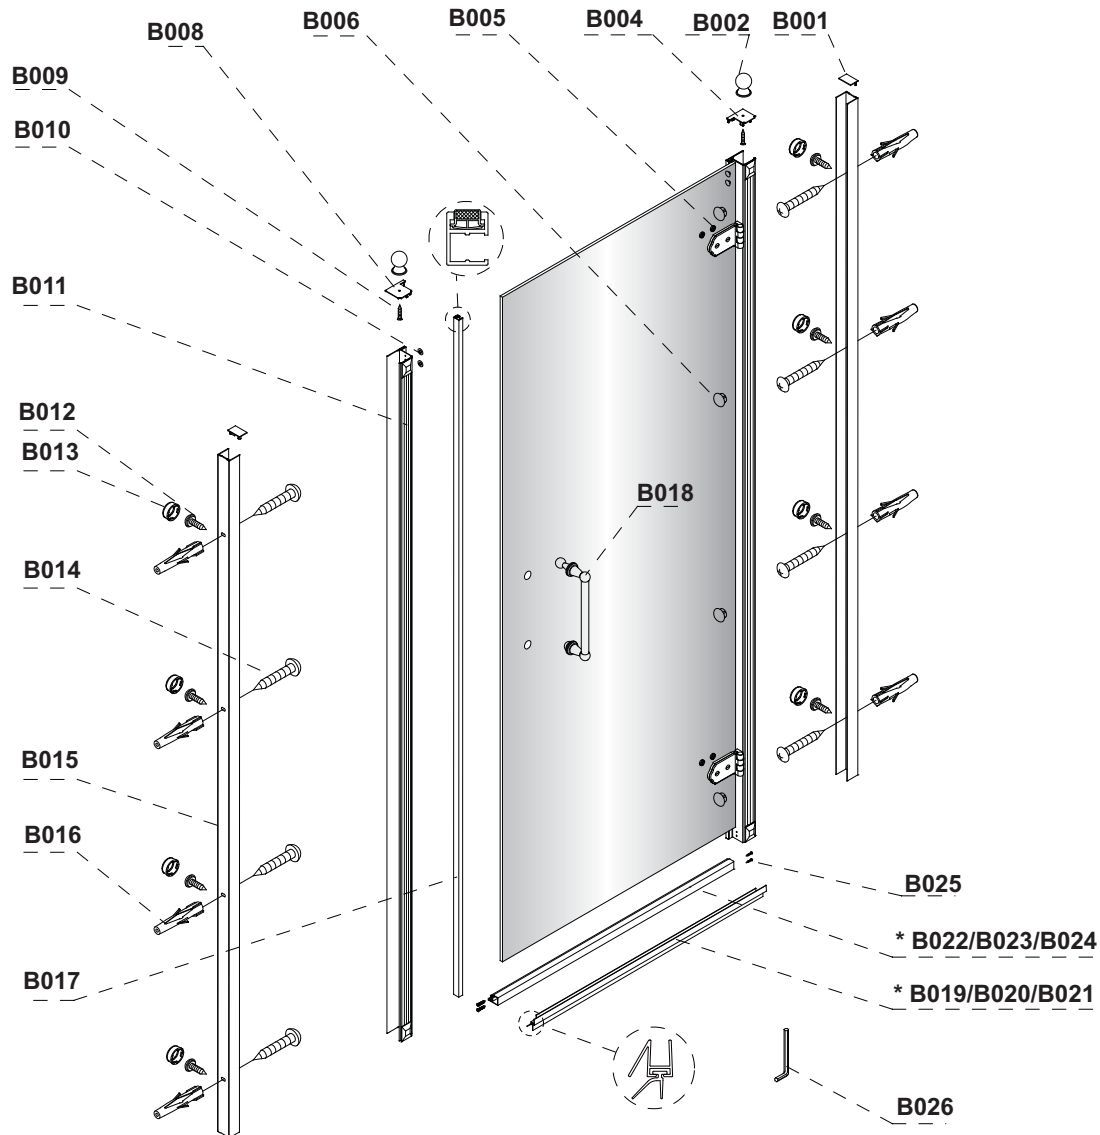


B001 2x	B002 2x	B003 1x LH	B004 1x RH	B005 4x	B006 4x
B007 1x LH	B008 1x RH	B009 2x ST3.5*16mm	B010 4x	B011 1x	B012 8x ST3.5*10mm
B013 8x	B014 8x ST4*50mm	B015 2x	B016 8x	B017 1x	B018 1x
* B019/B020/B021 1x - B019 is for 760 Hinged door - B020 is for 800 Hinged door - B021 is for 900 Hinged door		* B022/B023/B024 1x - B022 is for 760 Hinged door - B023 is for 800 Hinged door - B024 is for 900 Hinged door		B025 4x ST4*30mm	B026 1x 4mm

Tools required:

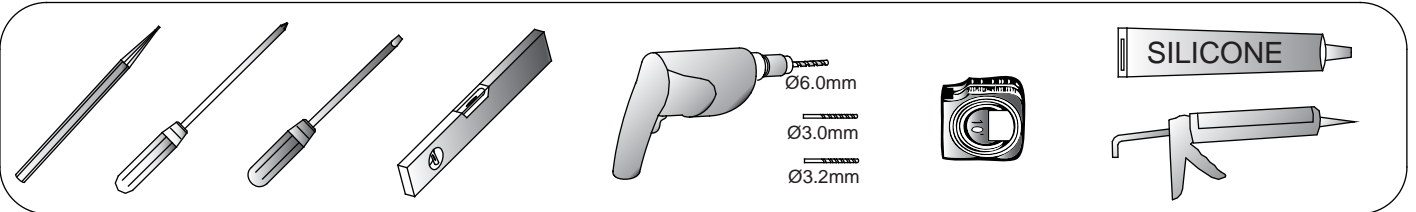

Parts supplied:

Side Panel Box - C11/C12/C13/C14

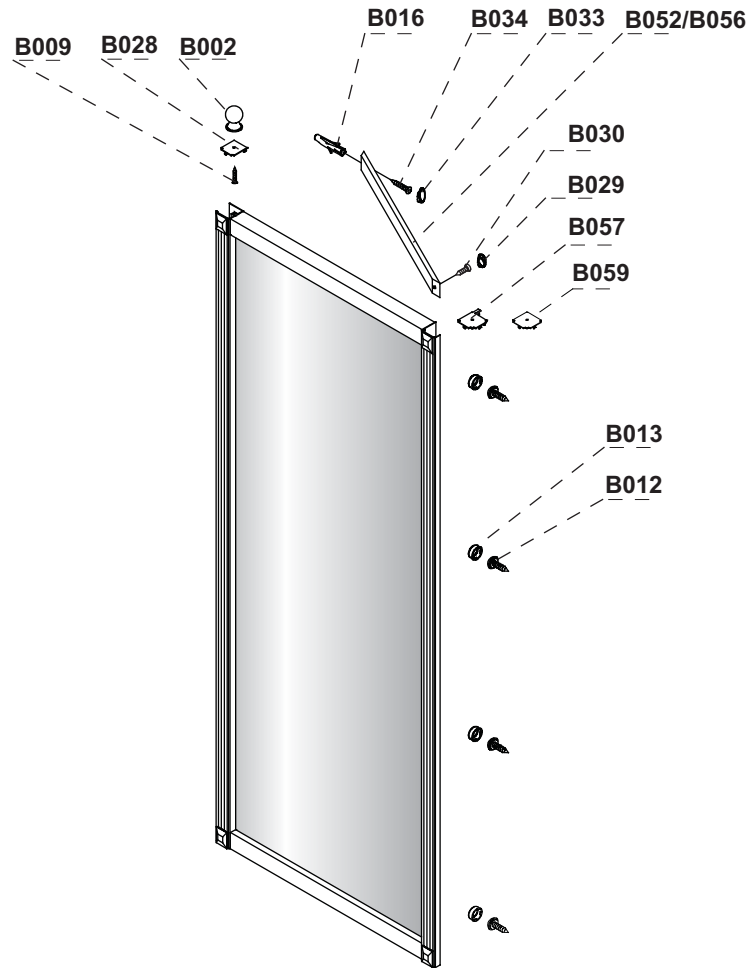

B002 1x	B027 1x	B028 1x	B009 ST3.5*16mm 1x	B034 ST4*35mm 1x
B033 1x	B030 ST4*25mm 1x	B029 1x	B016 1x	B012 ST3.5*10mm 4x
B013 4x	B057 1x RH	B058 1x LH	B059 1x RH	B060 1x LH
B052/B056 1x <div style="text-align: right;"> - B052 is for 700, 760, 800 side panel - B056 is for 900 side panel </div>				

Hinged Door and 2x Inline Panel (Pages 5 - 10)




The hinged door is supplied for Right Handed installation. For Left Handed installation please loosen the hinges and reverse the glass as shown below.


Right Hand



Left Hand

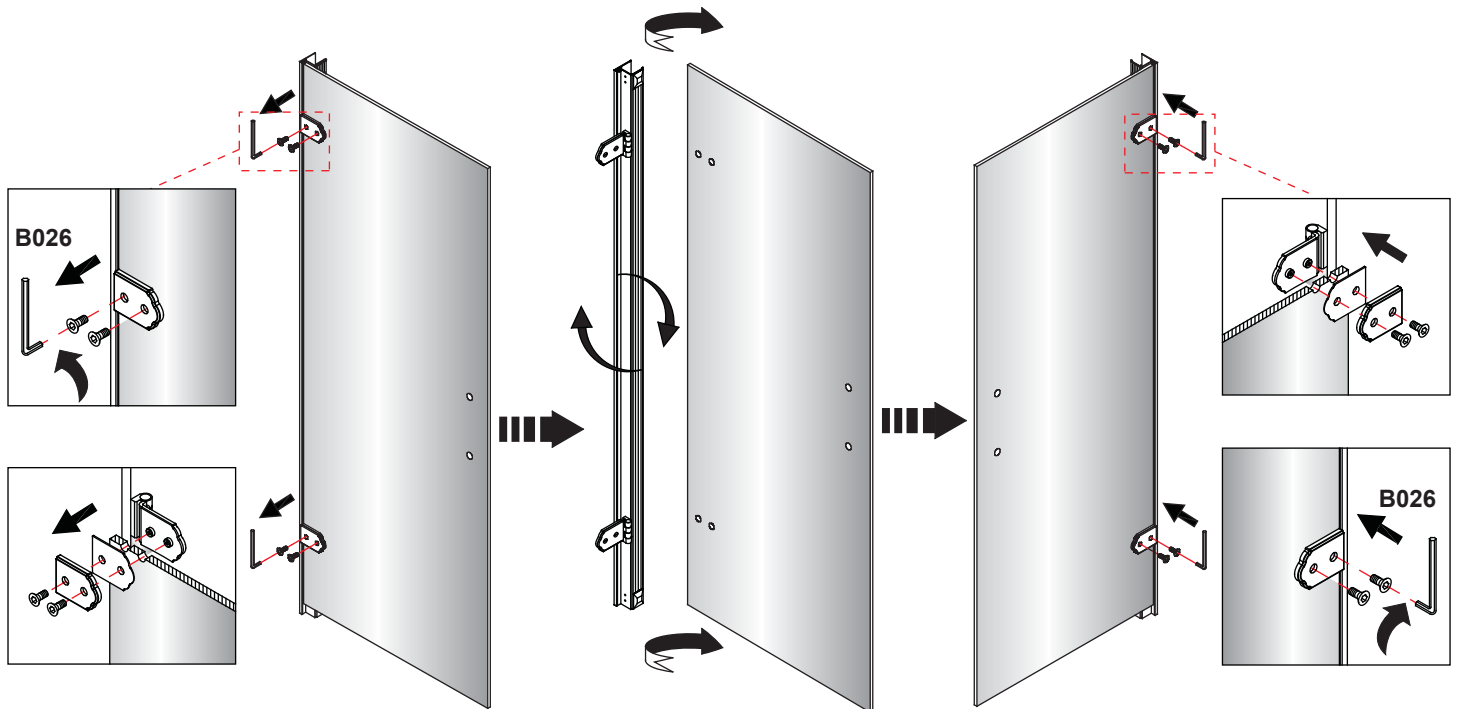


①

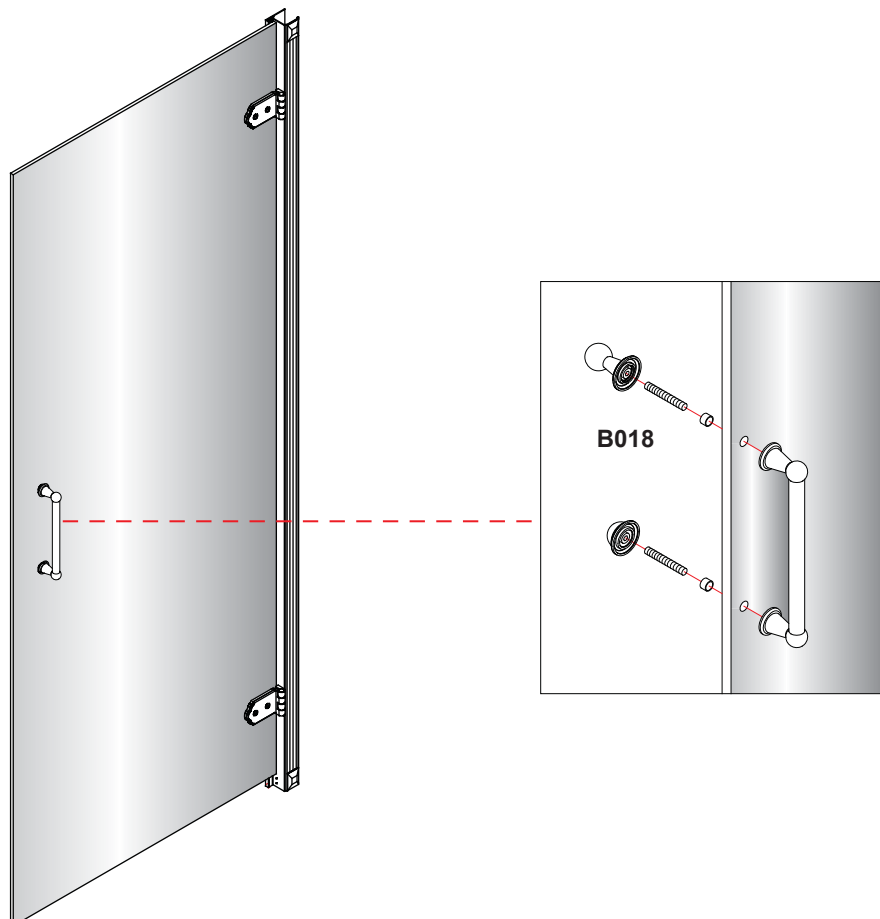

②






LH

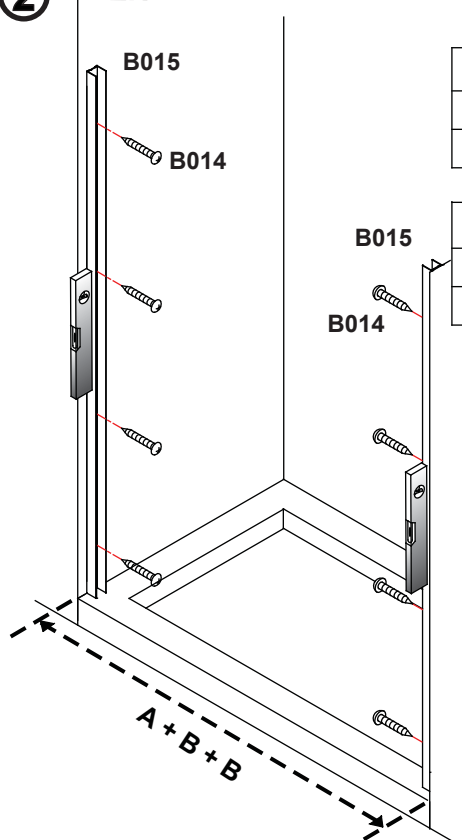


Item		A (mm)
C20	800 Hinged door	760
C21	900 Hinged door	860

Item		B (mm)
C16	300 Inline Panel	300~320
C17	400 Inline Panel	400~420


RH

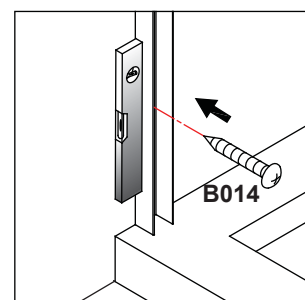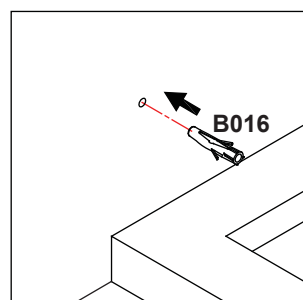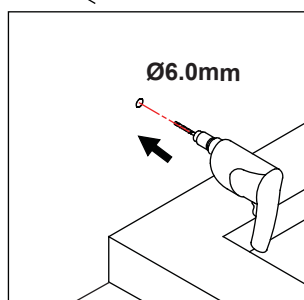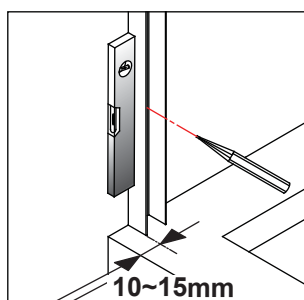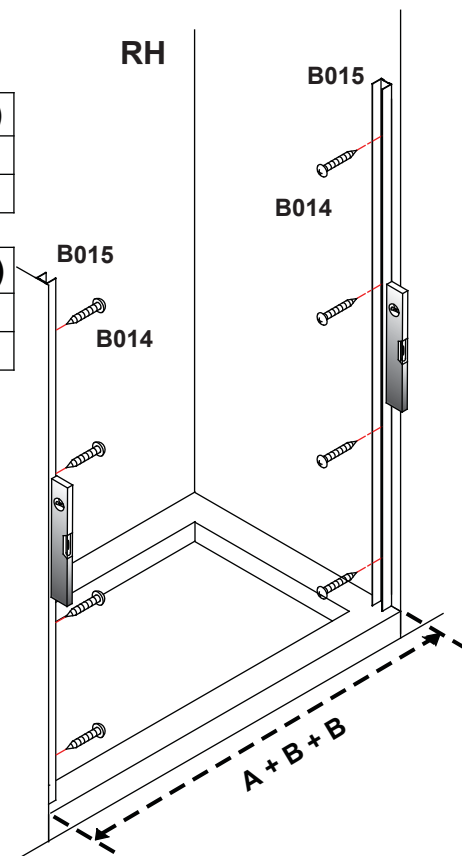


③

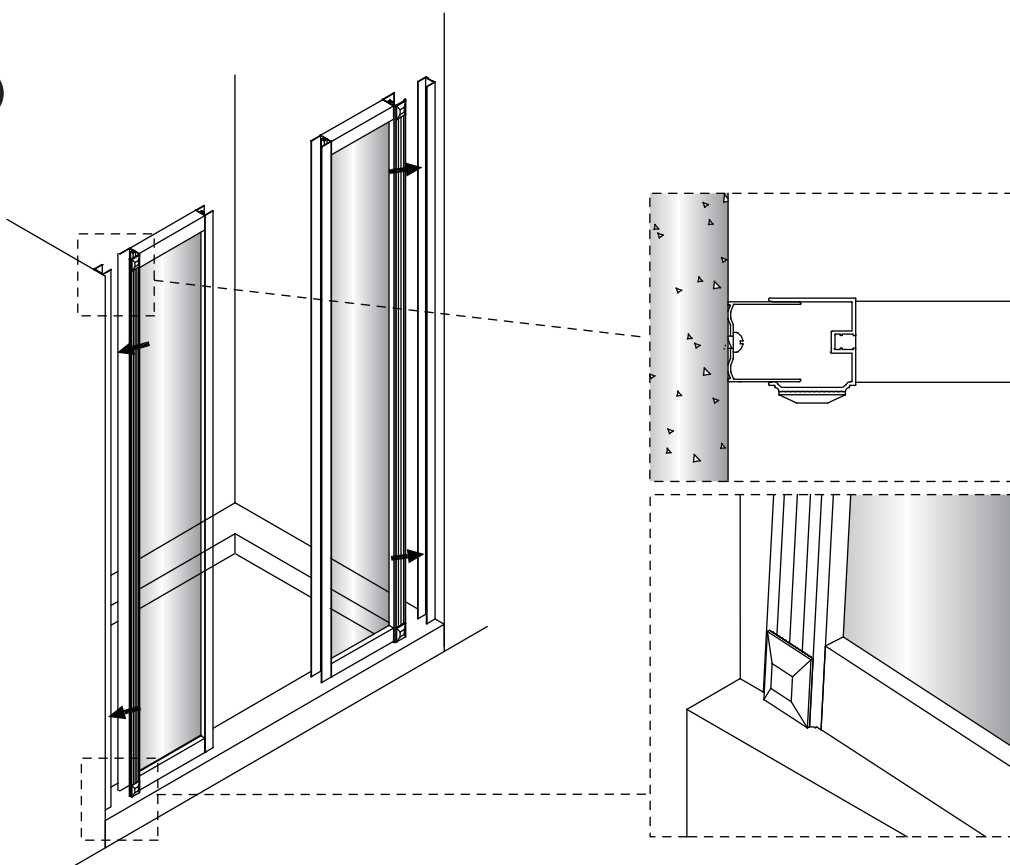


④

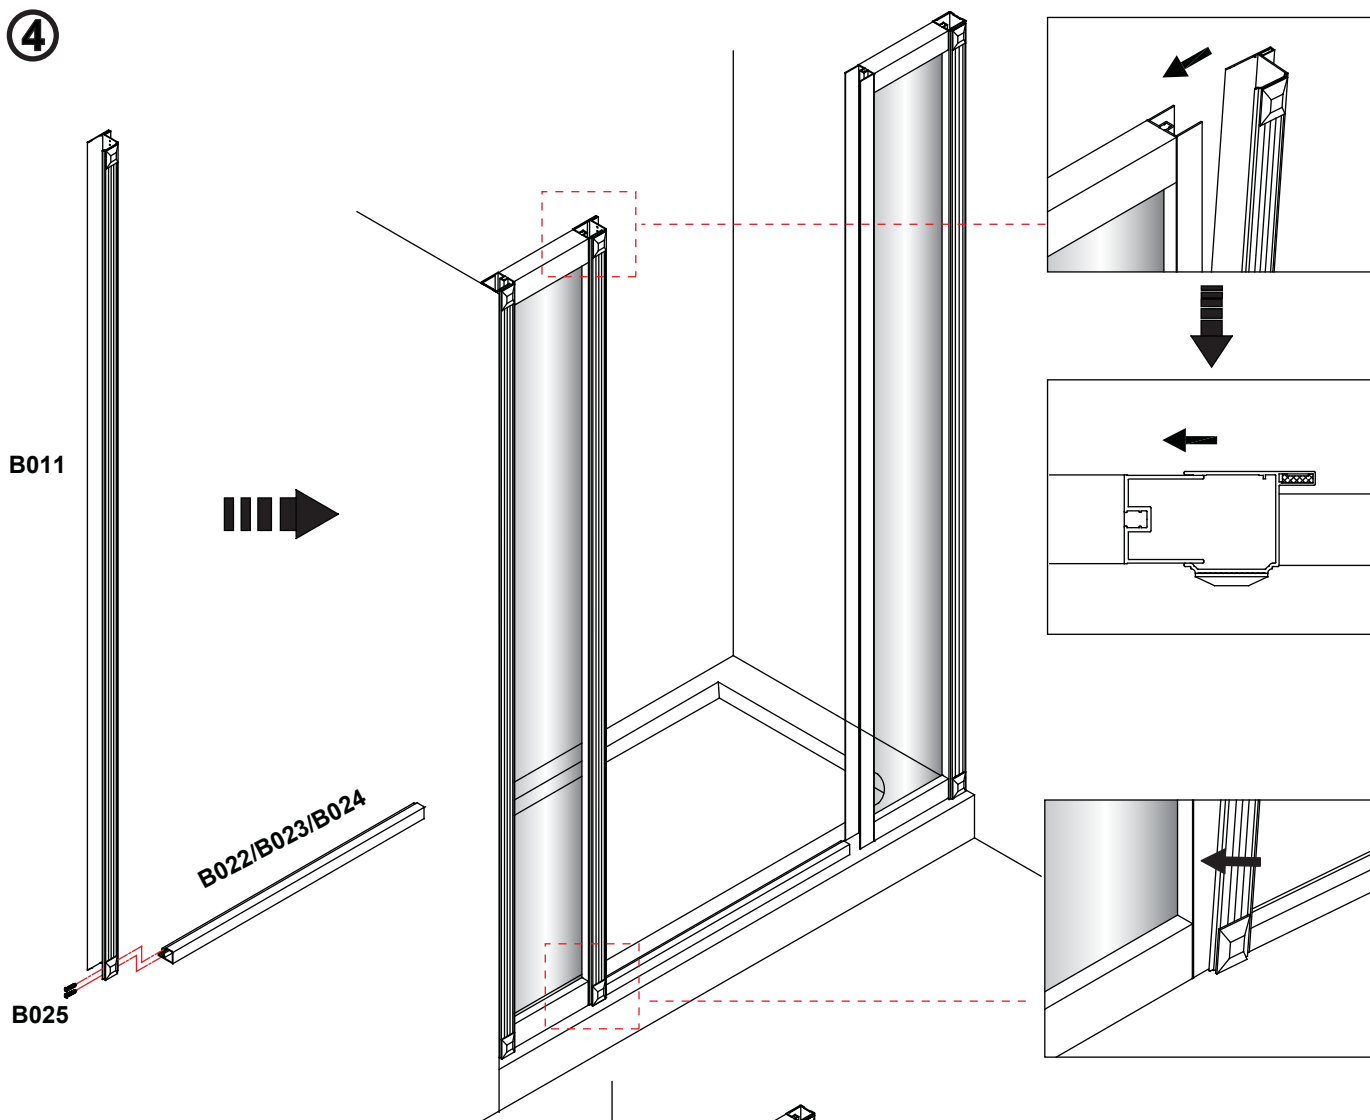


⑤

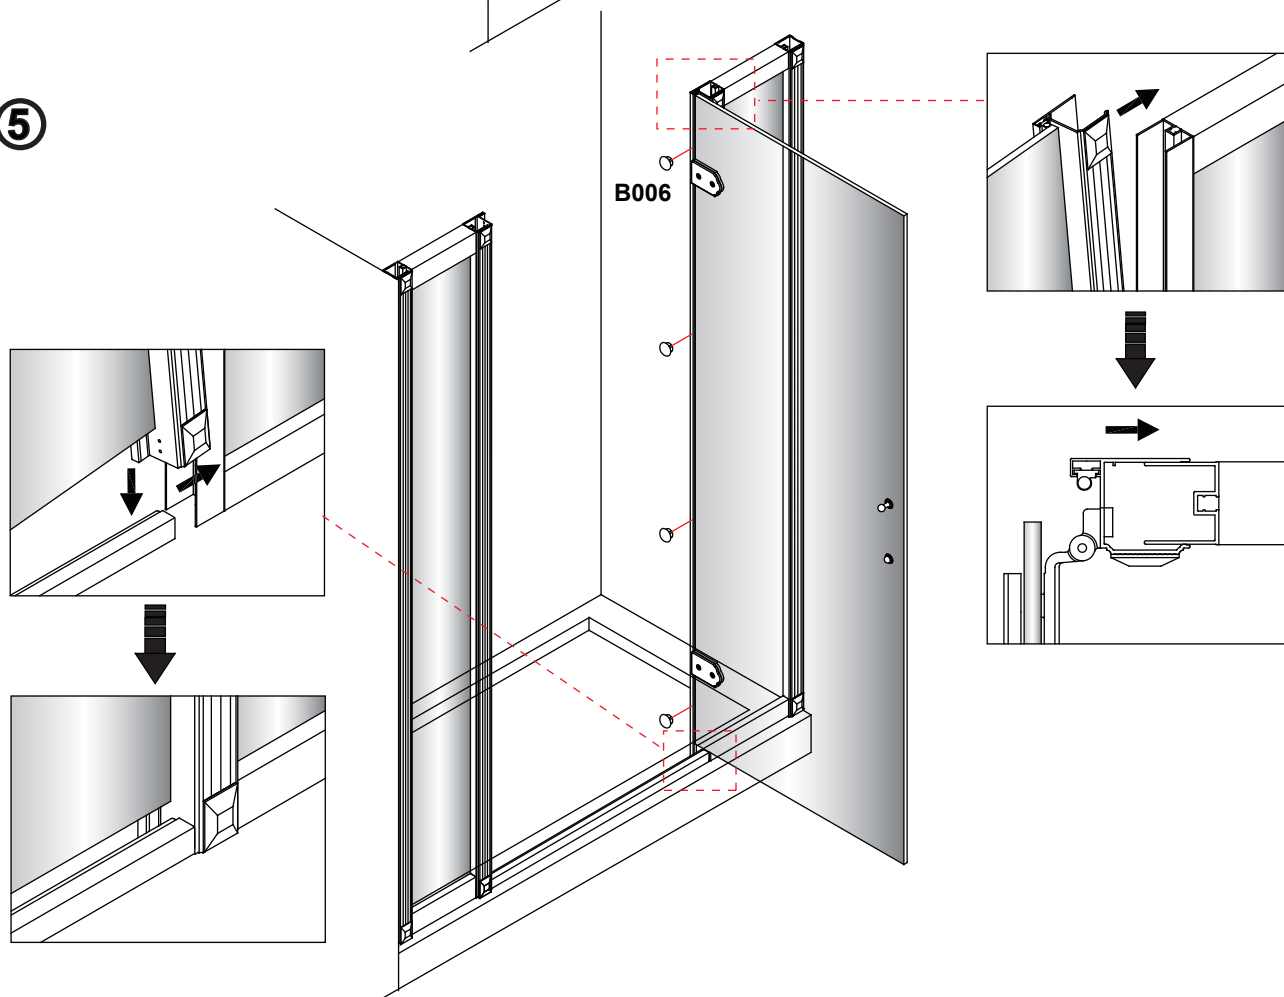


⑥

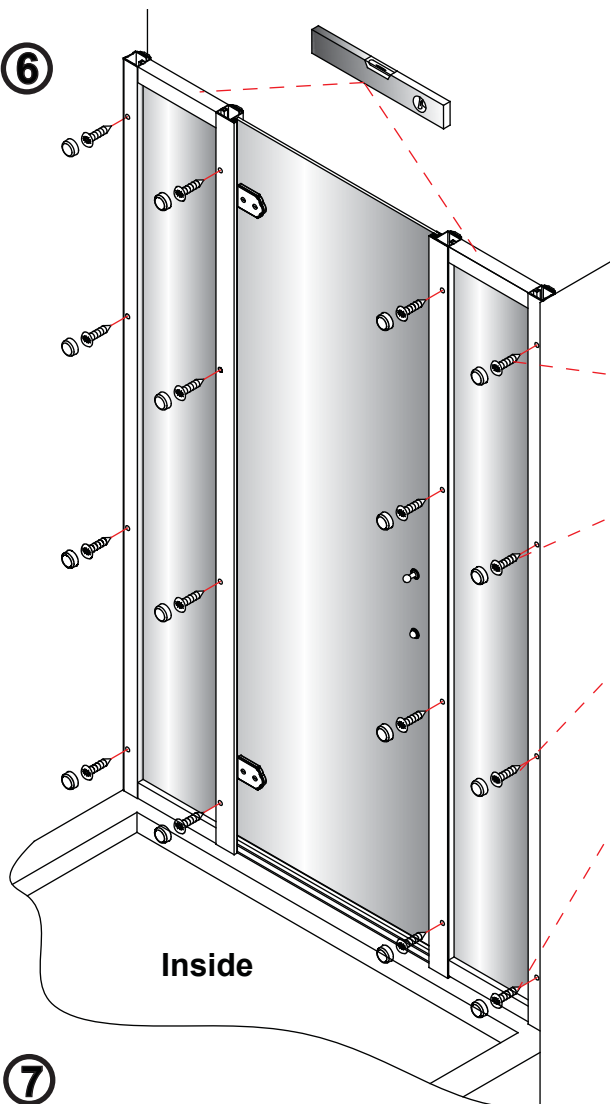



Once you have checked that the door opens and closes correctly fix the door to the wall channels. From inside drill 4 holes through the door frame (in the marked positions).
Fix using screws (B012), attach on the covers (B013).

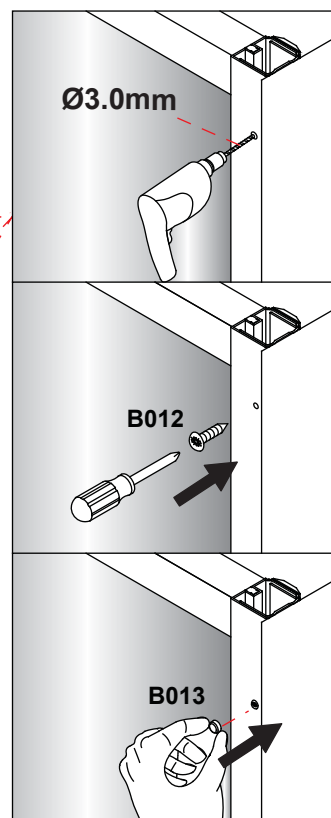

⑦


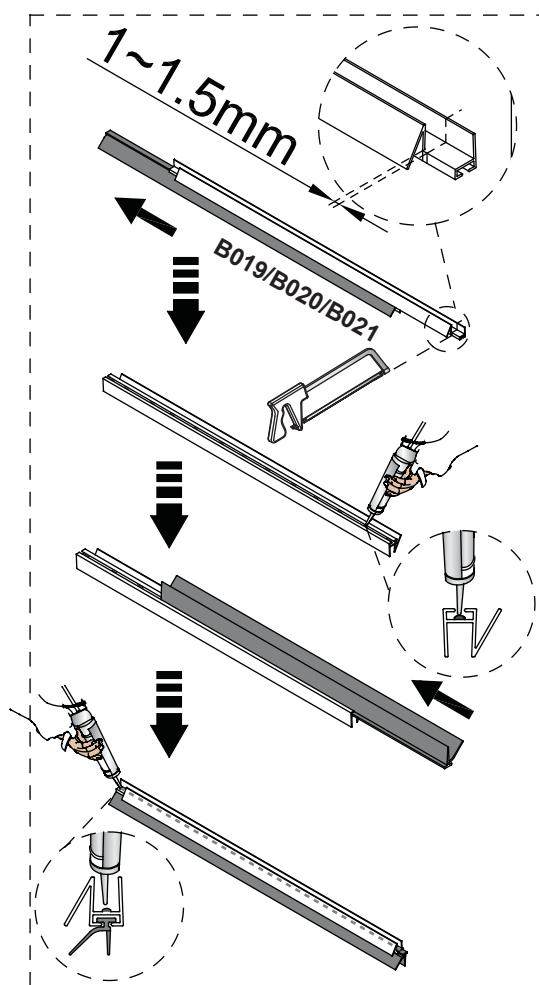


* Please note when cutting parts B019/B20/B21 a sharp fine tooth hacksaw should be used.



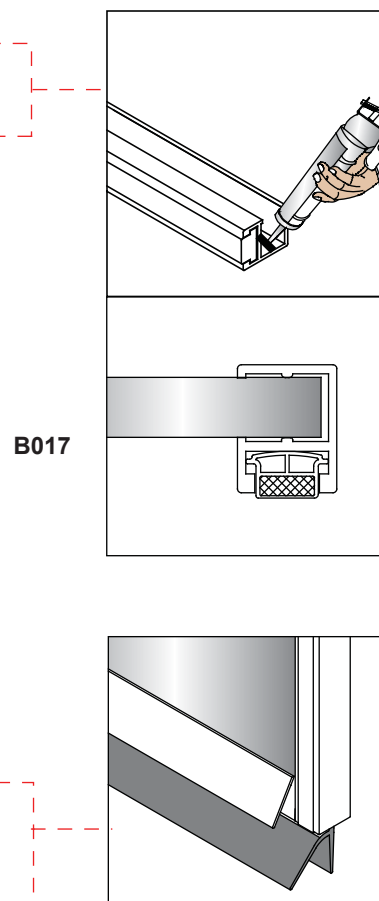
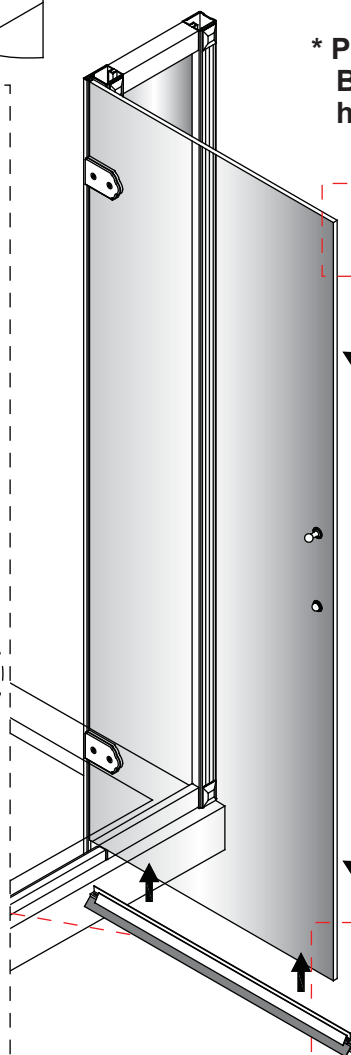











Only if adjustment is required.

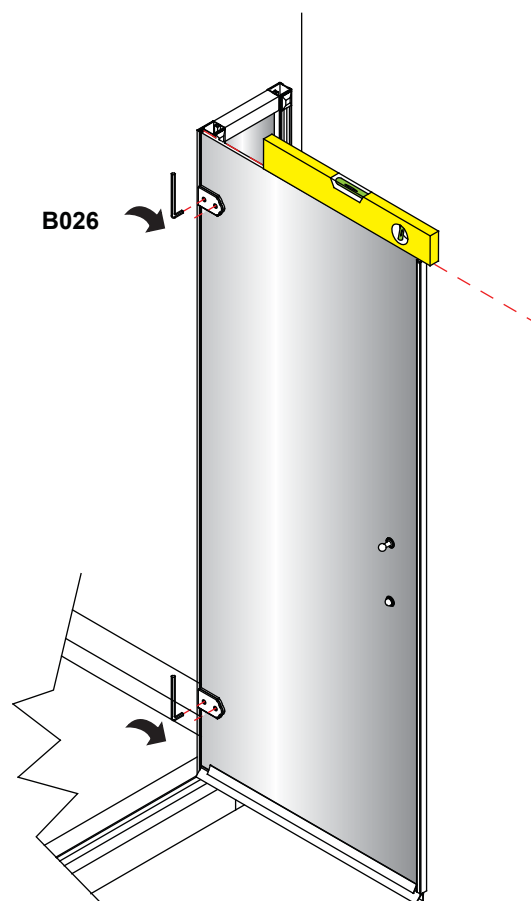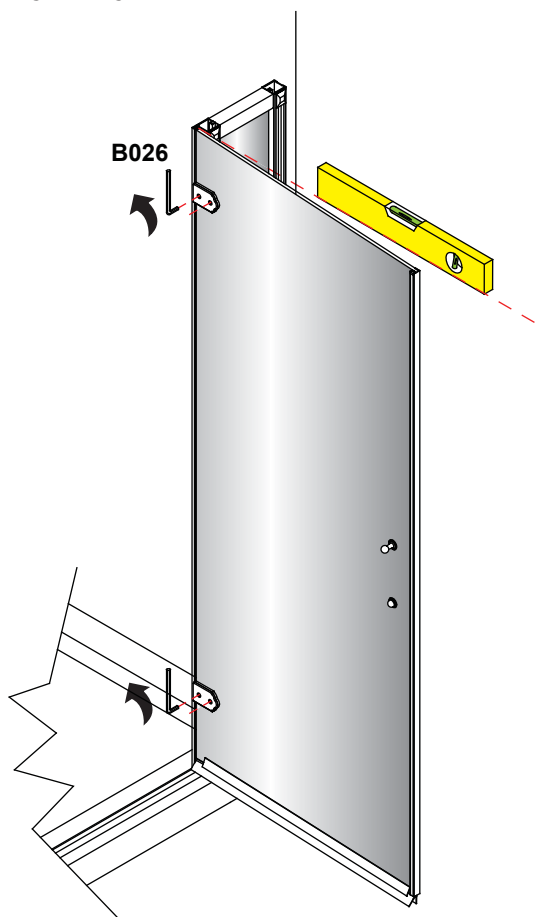





⑧

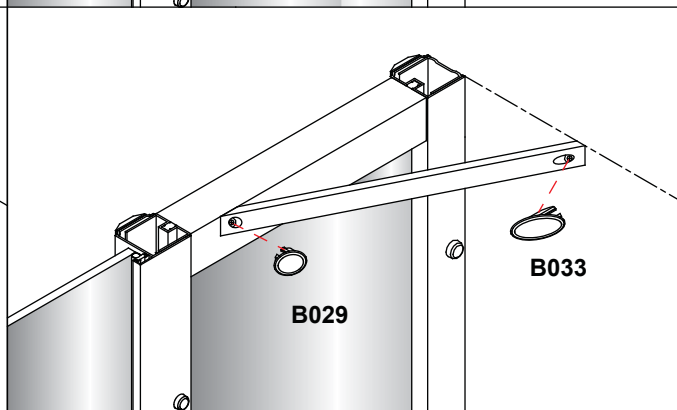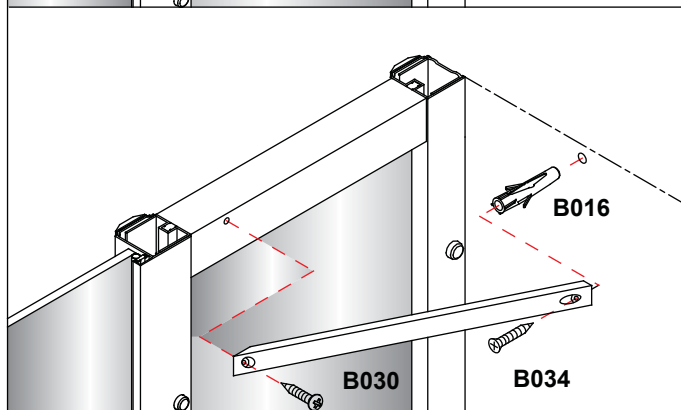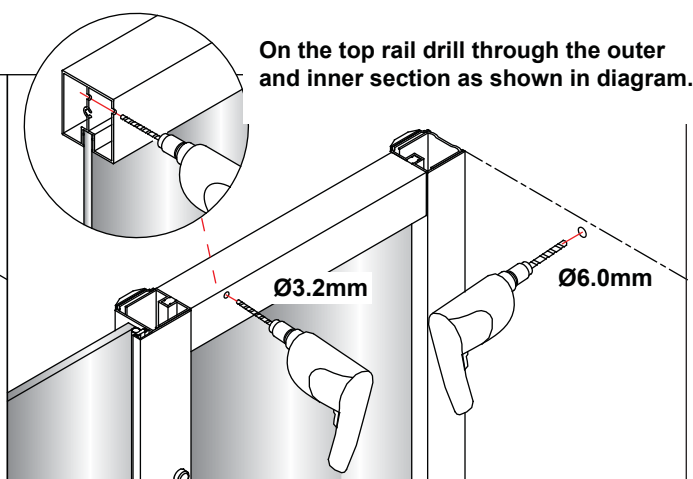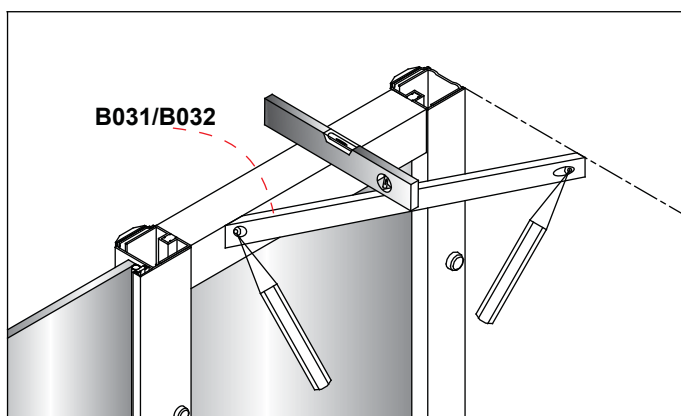

9

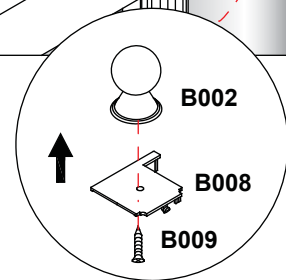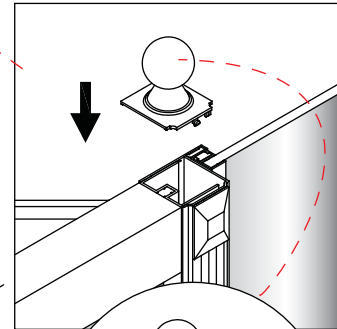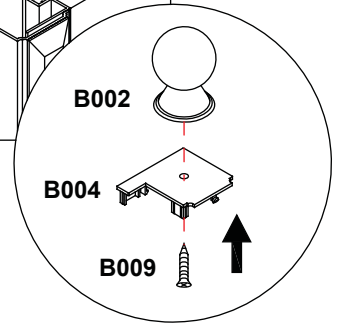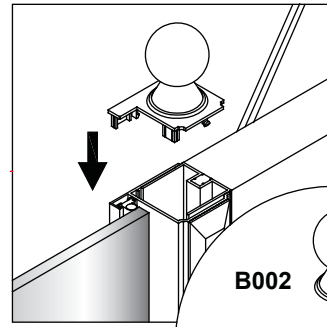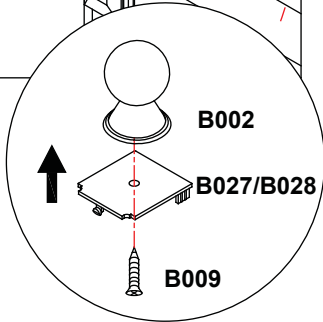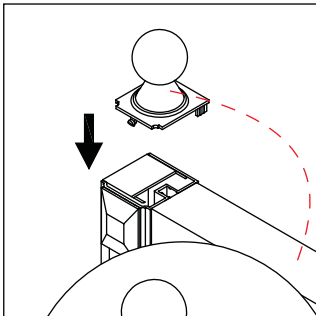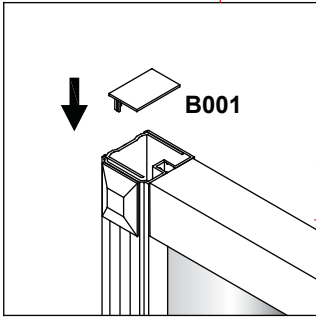

10

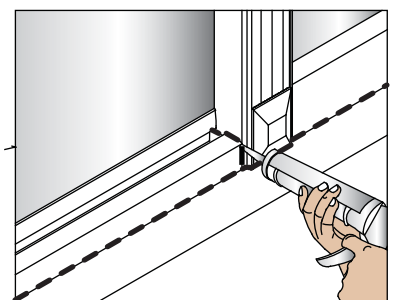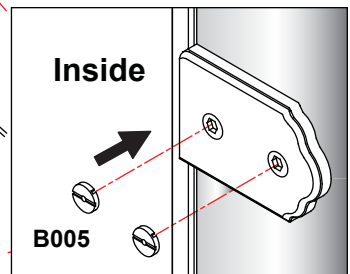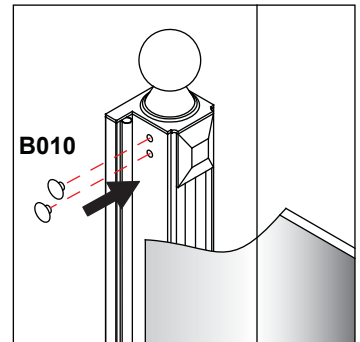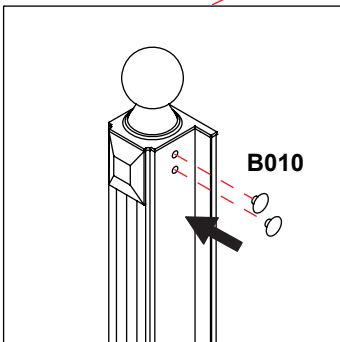

Hinged Door and 2x Inline Panel Installation Complete




The hinged door is supplied for Right Handed installation. For Left Handed installation please loosen the hinges and reverse the glass as shown below.


Right Hand




Left Hand

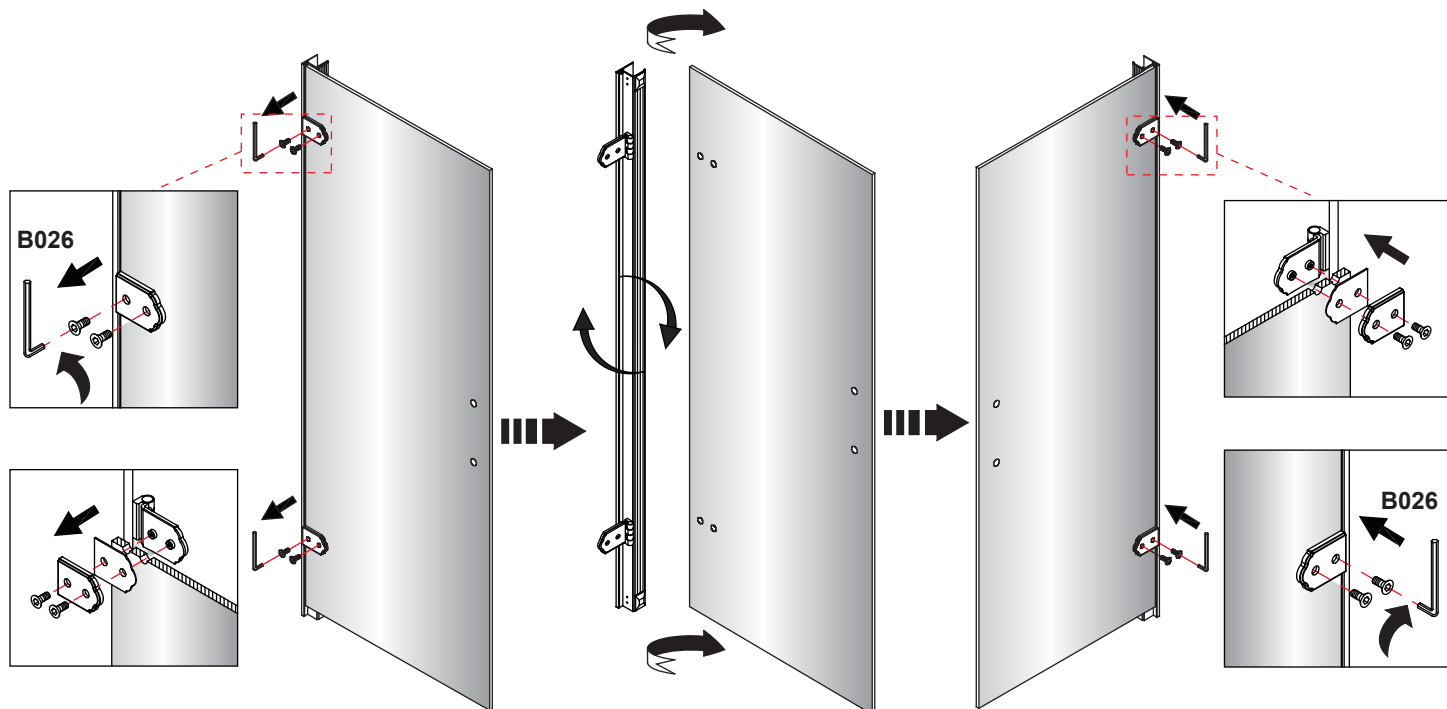

①

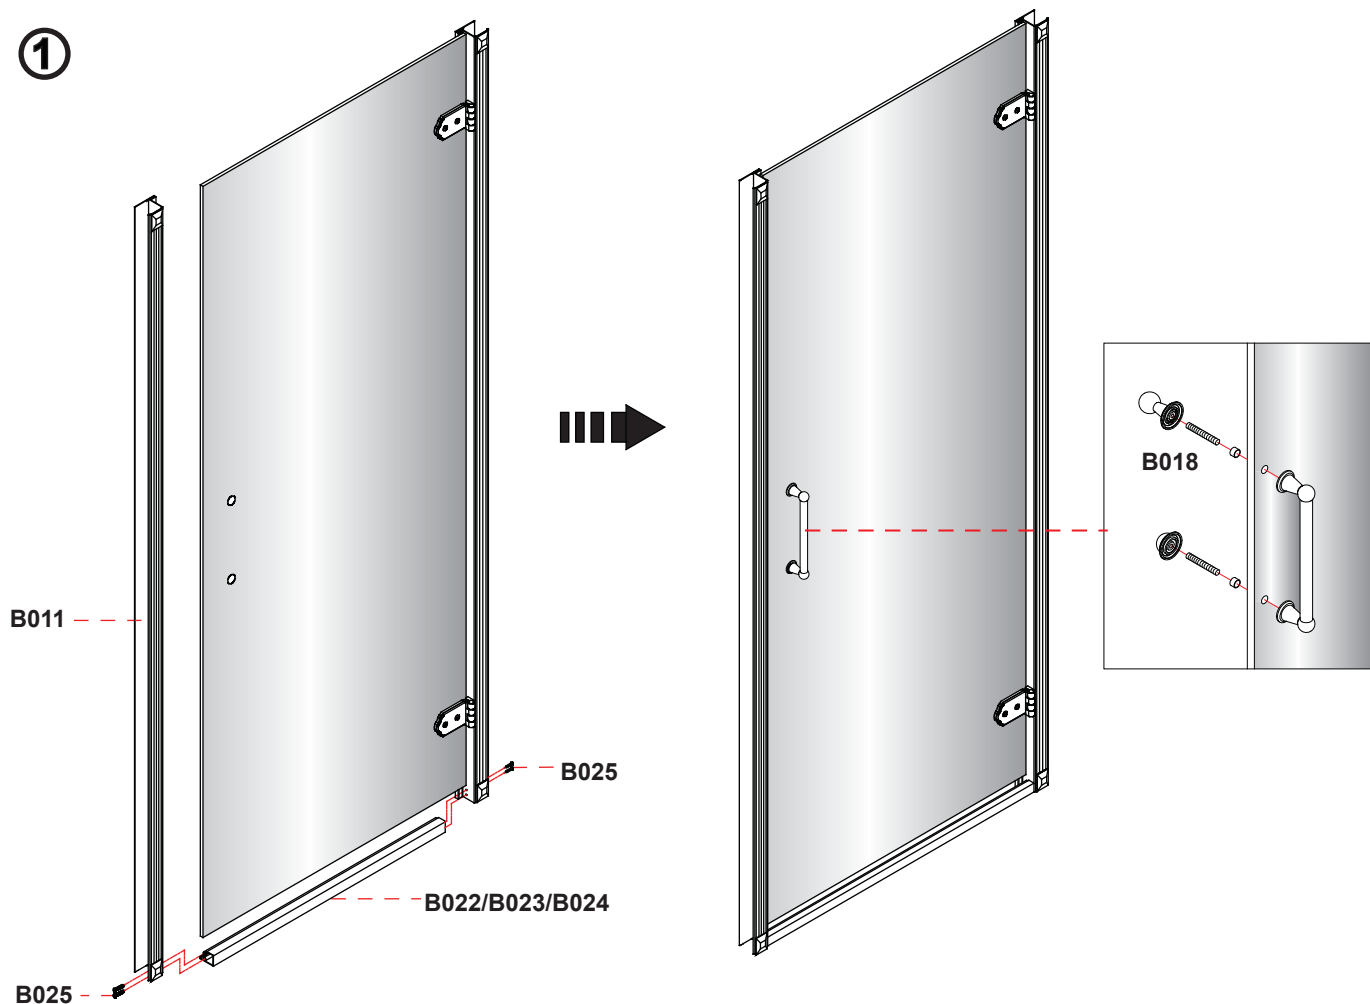

② LH





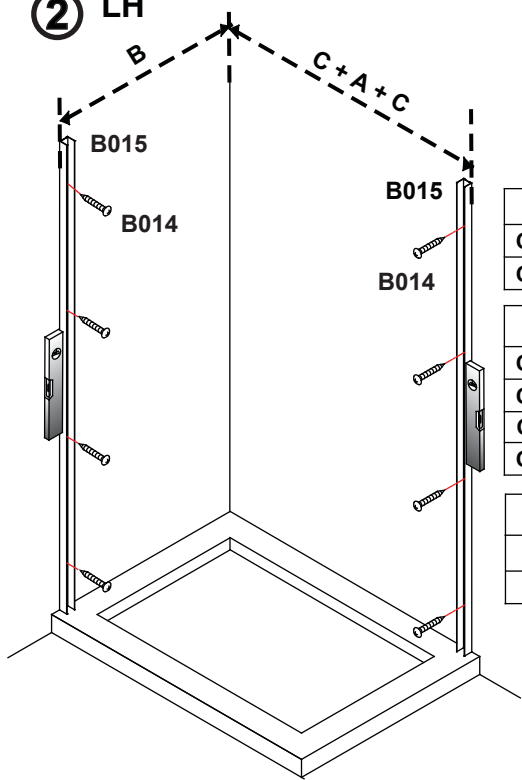


Item	A (mm)
C20	800 Hinged door
C21	900 Hinged door


Item	B (mm)
C11	700 Side Panel
C12	760 Side Panel
C13	800 Side Panel
C14	900 Side Panel

Item	C (mm)
C16	300 Inline Panel
C17	400 Inline Panel


RH

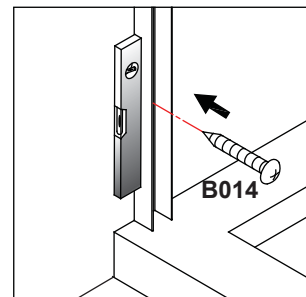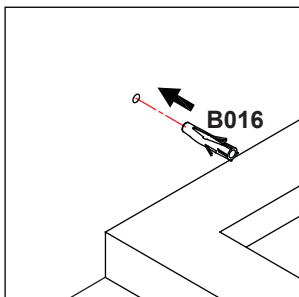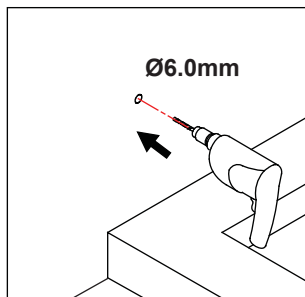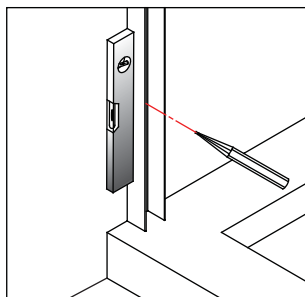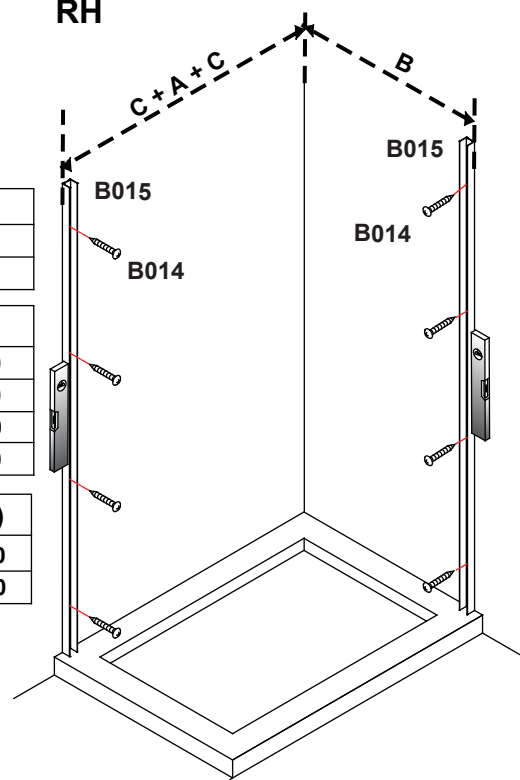

③

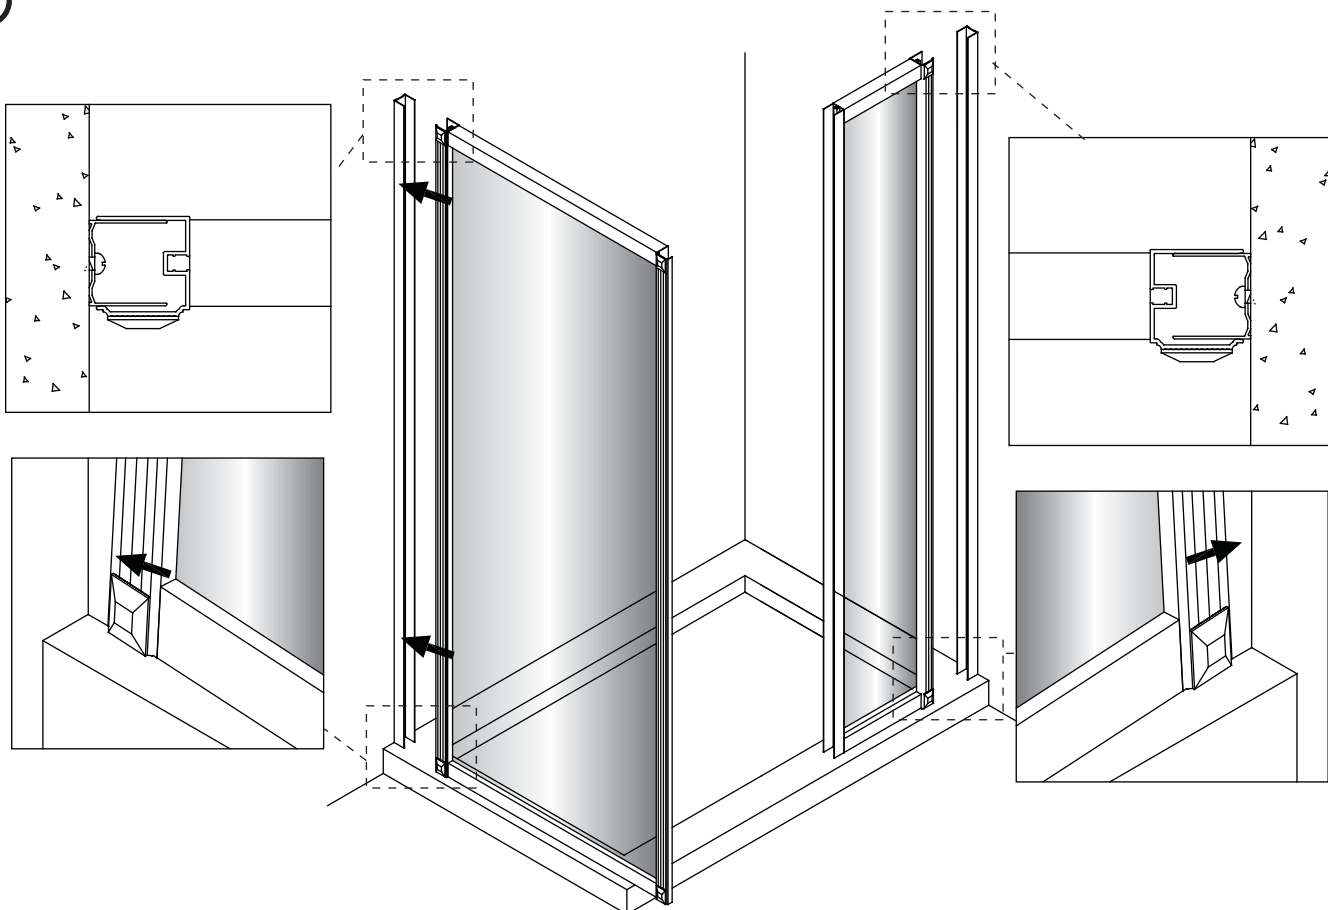


④

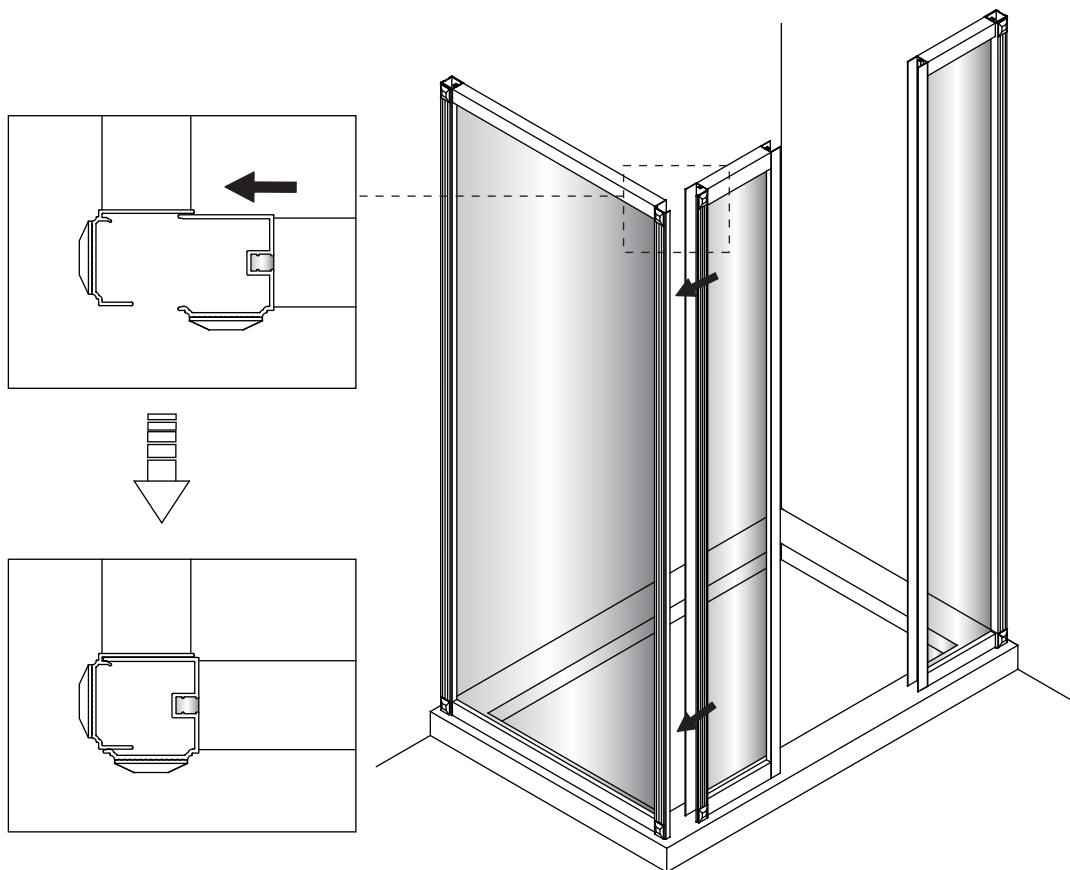



The moving door **MUST** be fitted to the inline panel attached to the wall.

⑤

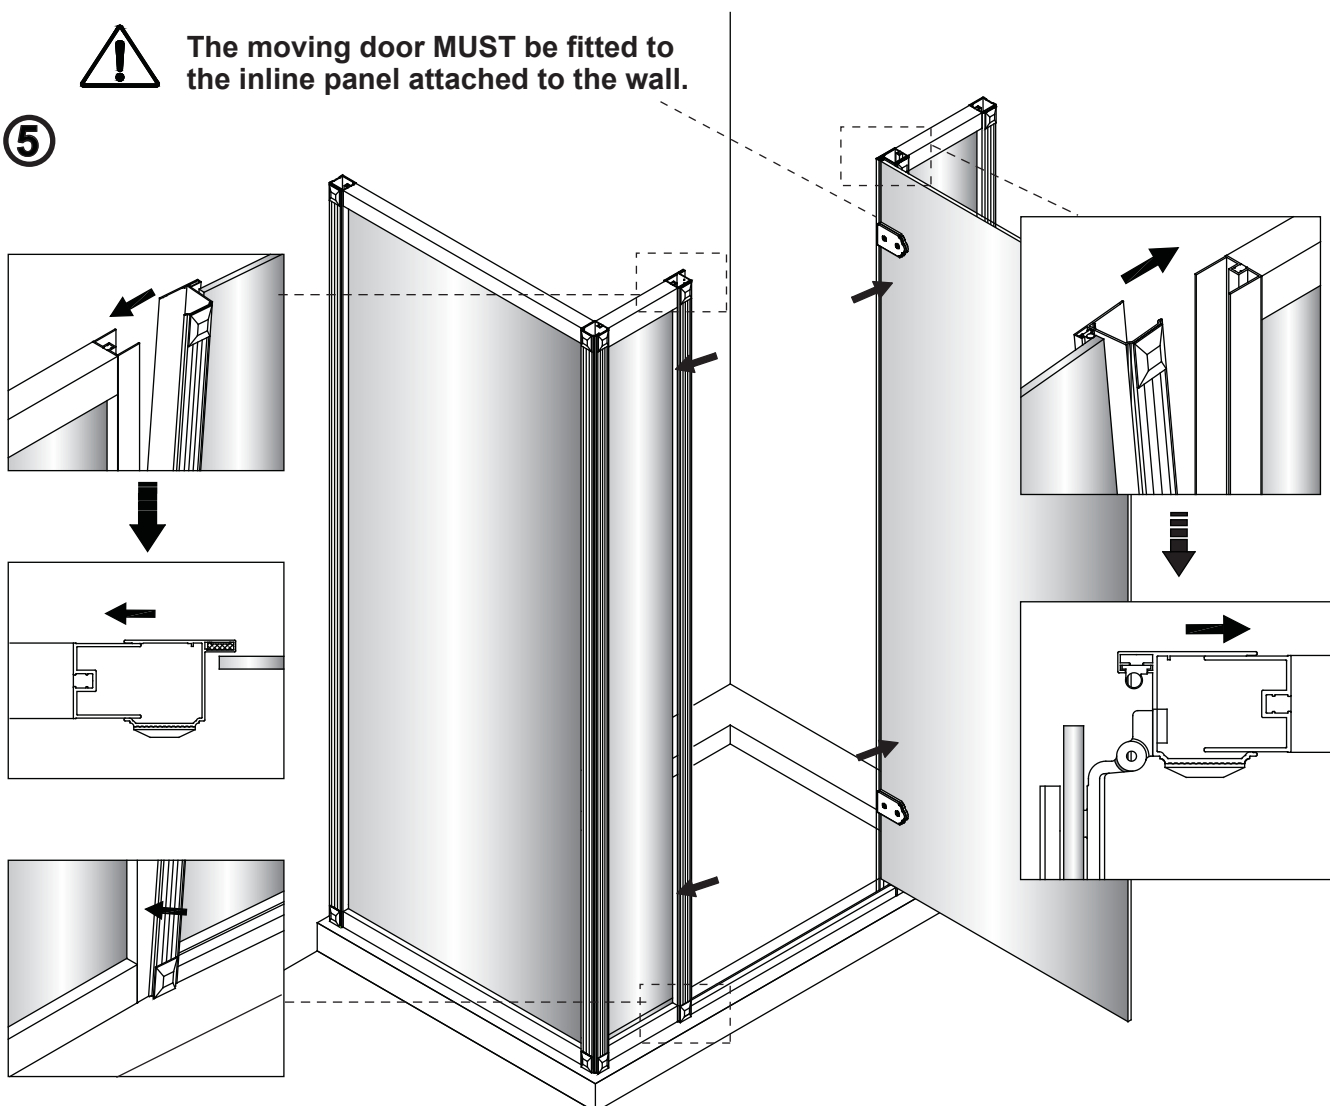



⑥

- Inline panel should be totally fitted within side panel and door profiles.
- Any adjustment required, can be gained from the wall profiles only.

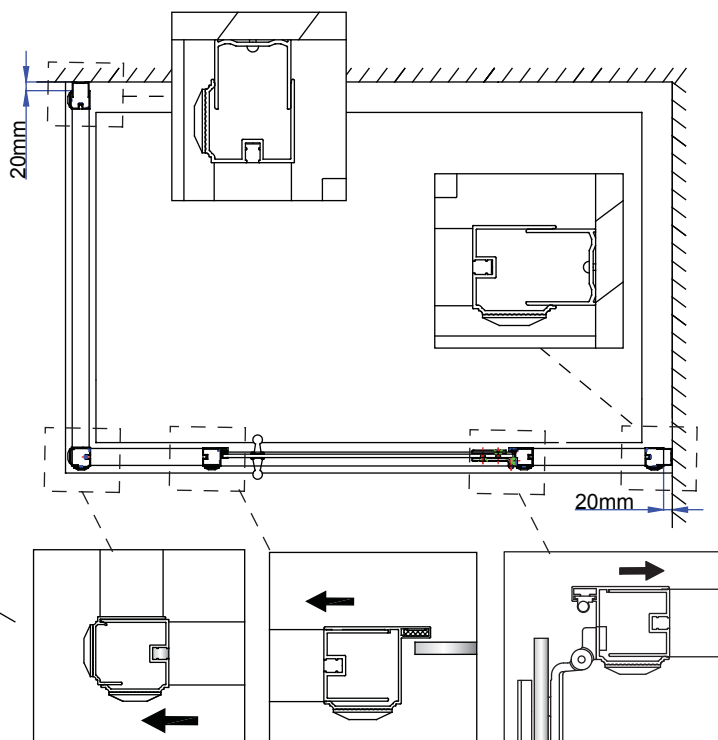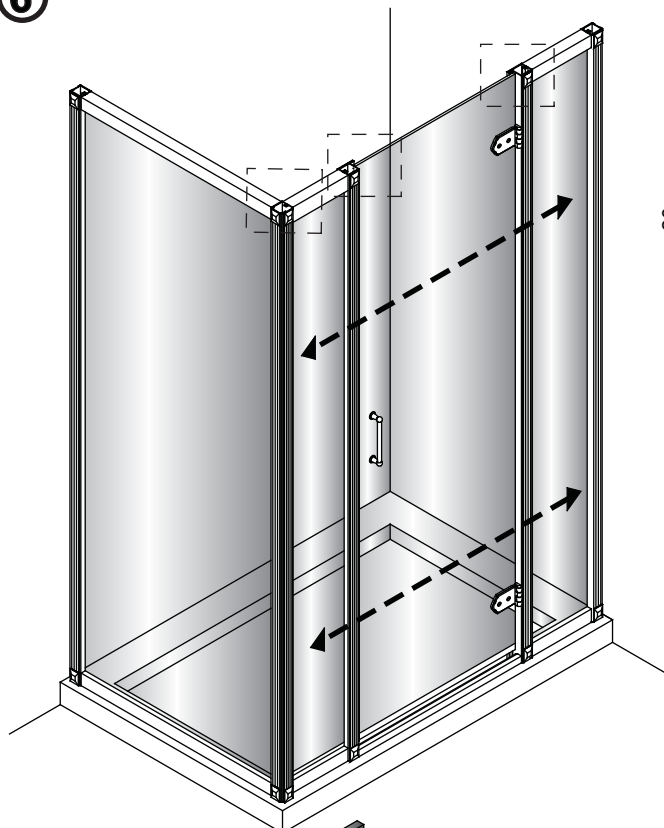


⑦


Once you have checked that the door opens and closes correctly fix the door to the wall channels. From inside drill 4 holes through the door frame (in the marked positions). Fix using screws (B012), attach on the covers (B013).

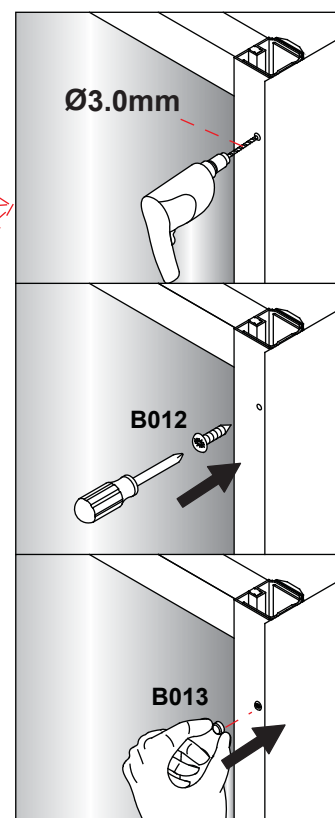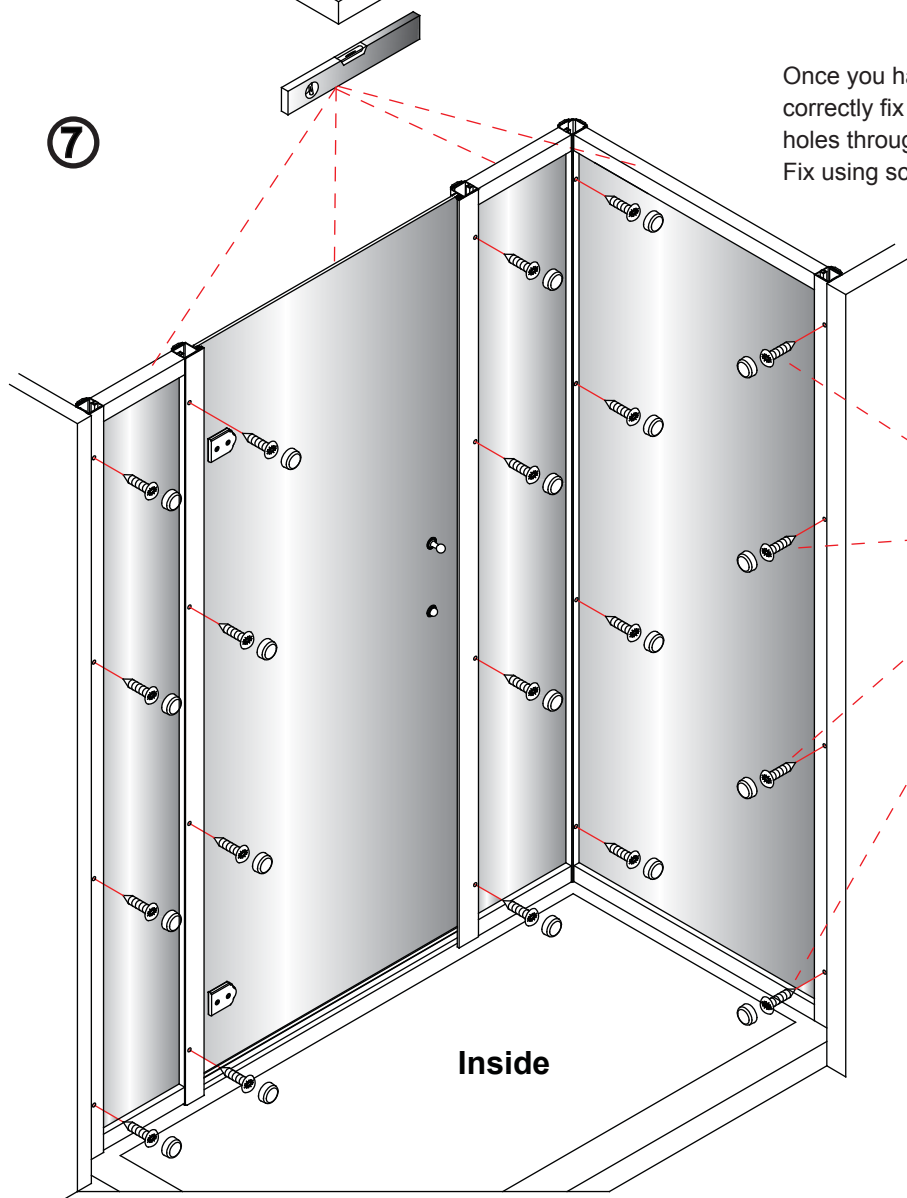

⑧

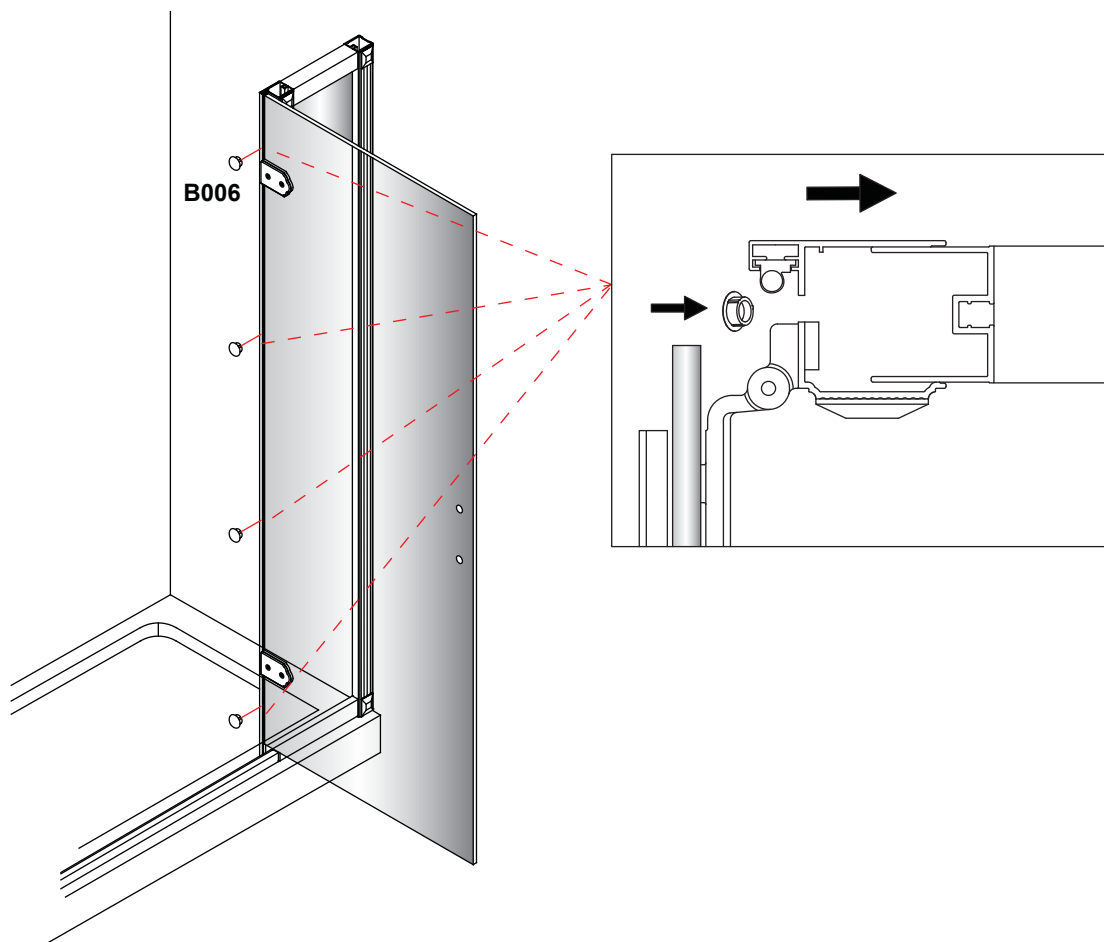


⑨



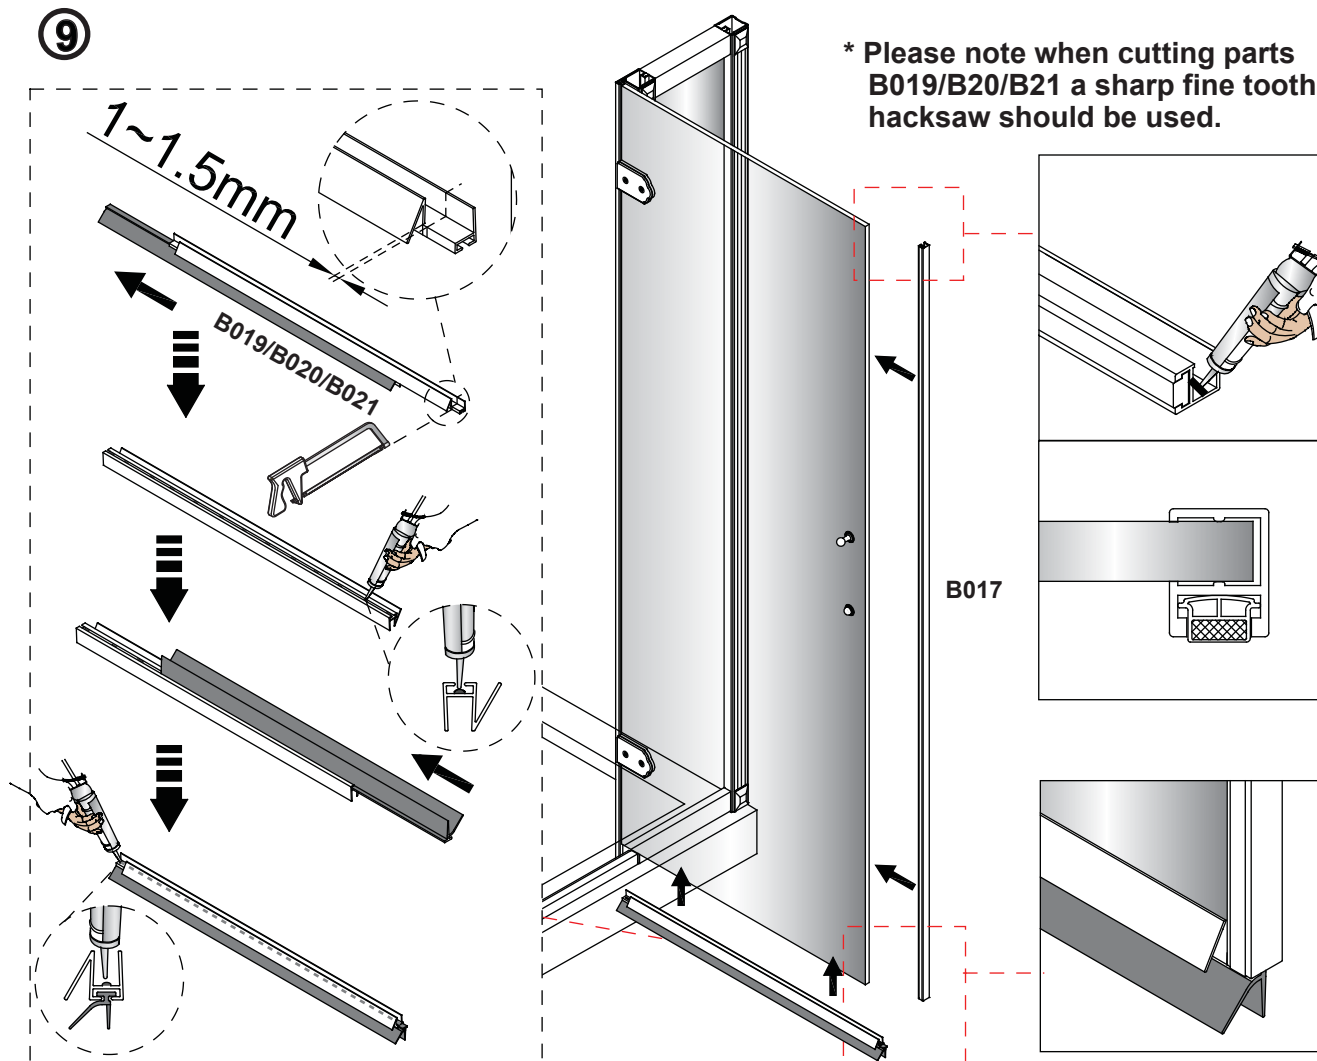









Only if adjustment is required.

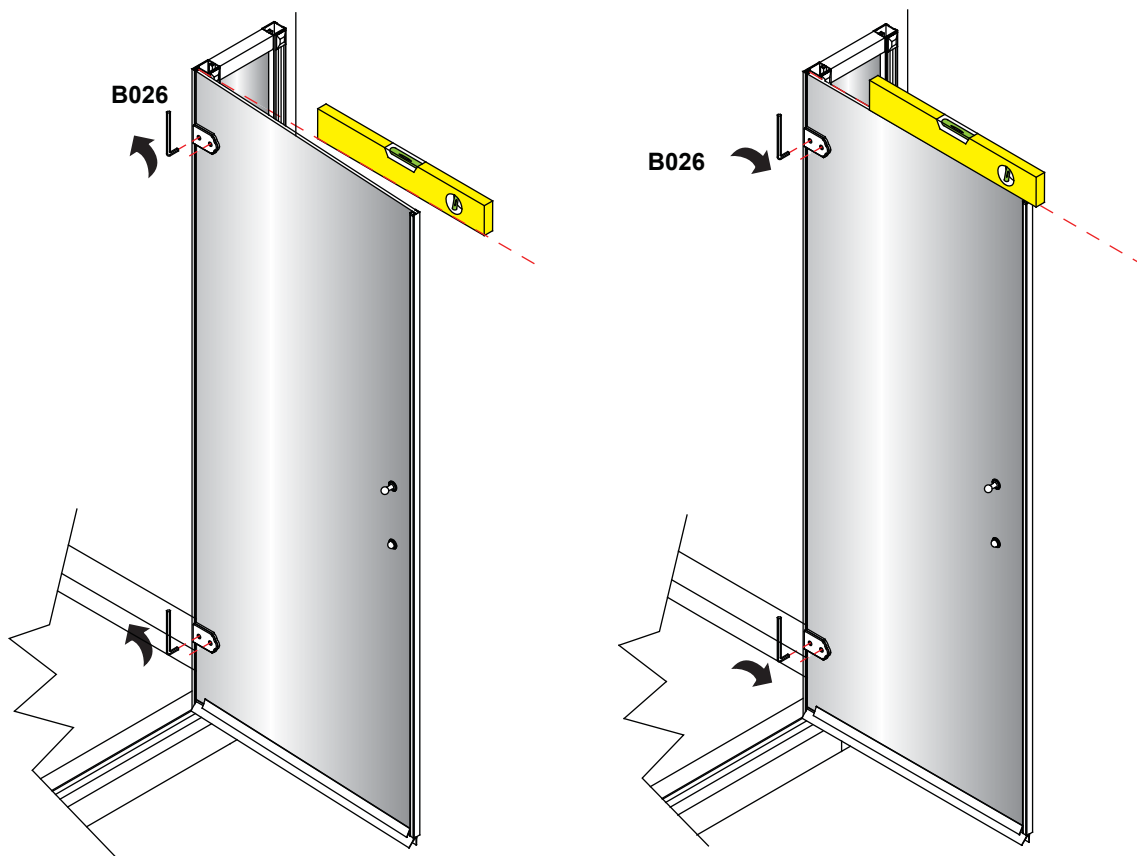



10

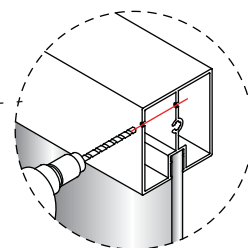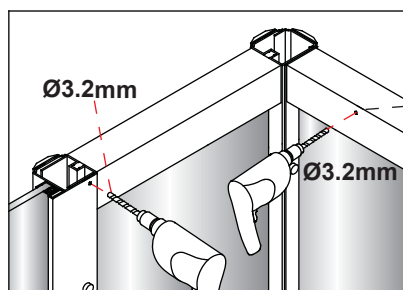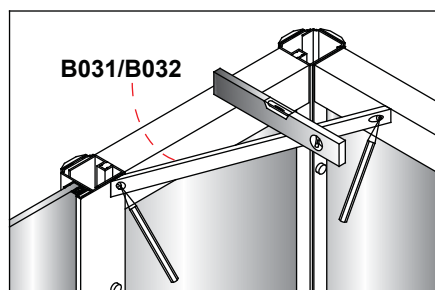


On the top rail drill through the outer and inner section as shown in diagram.

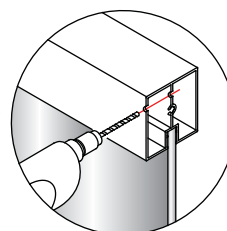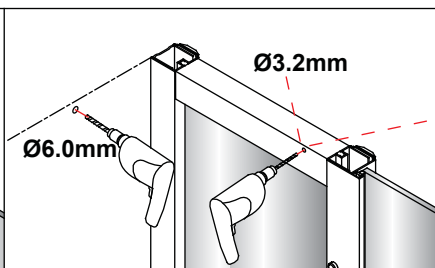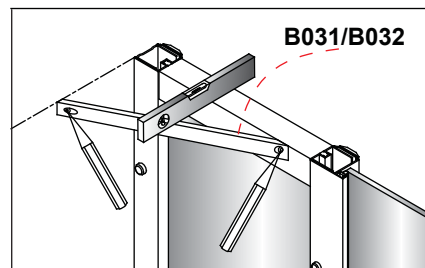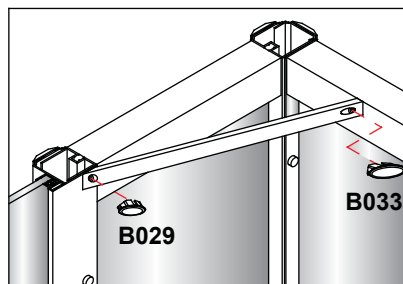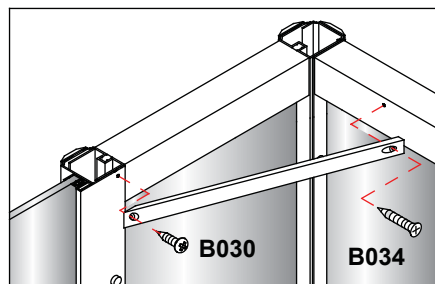



On the top rail drill through the outer and inner section as shown in diagram.

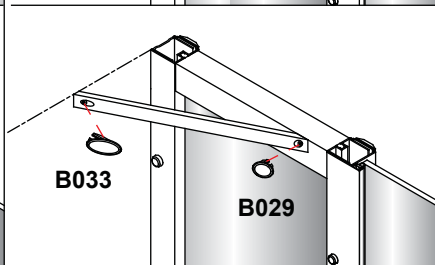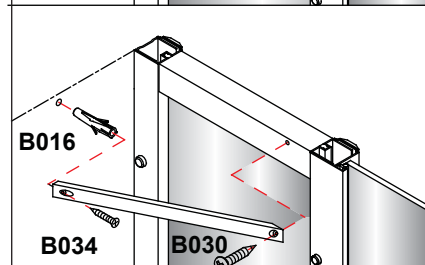

11

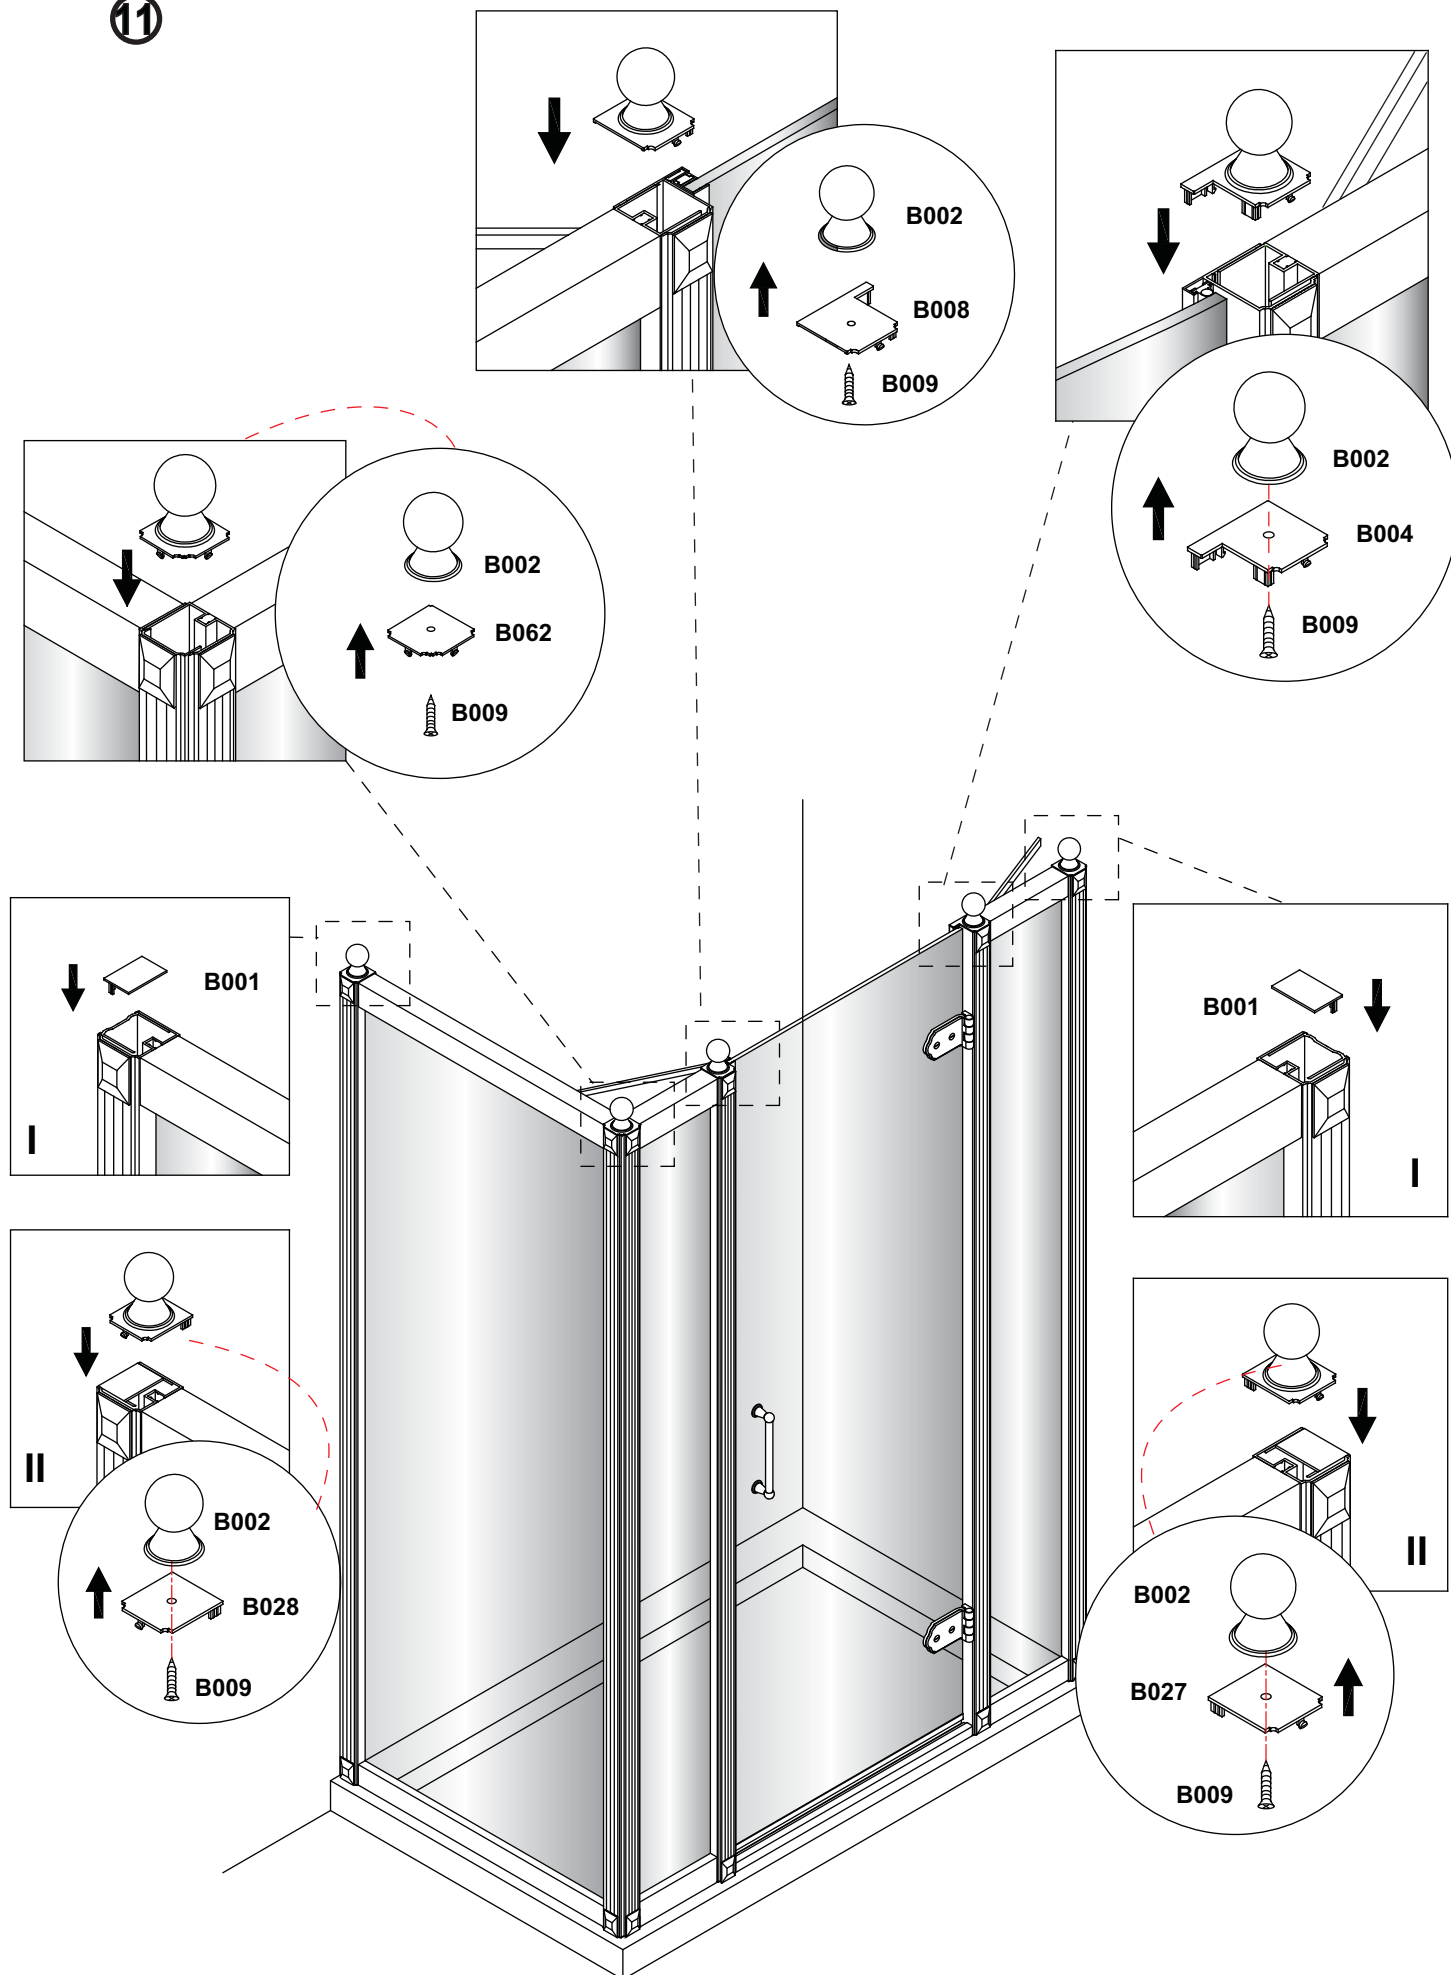

12 Install the supporting bar supplied with the side panel if necessary.

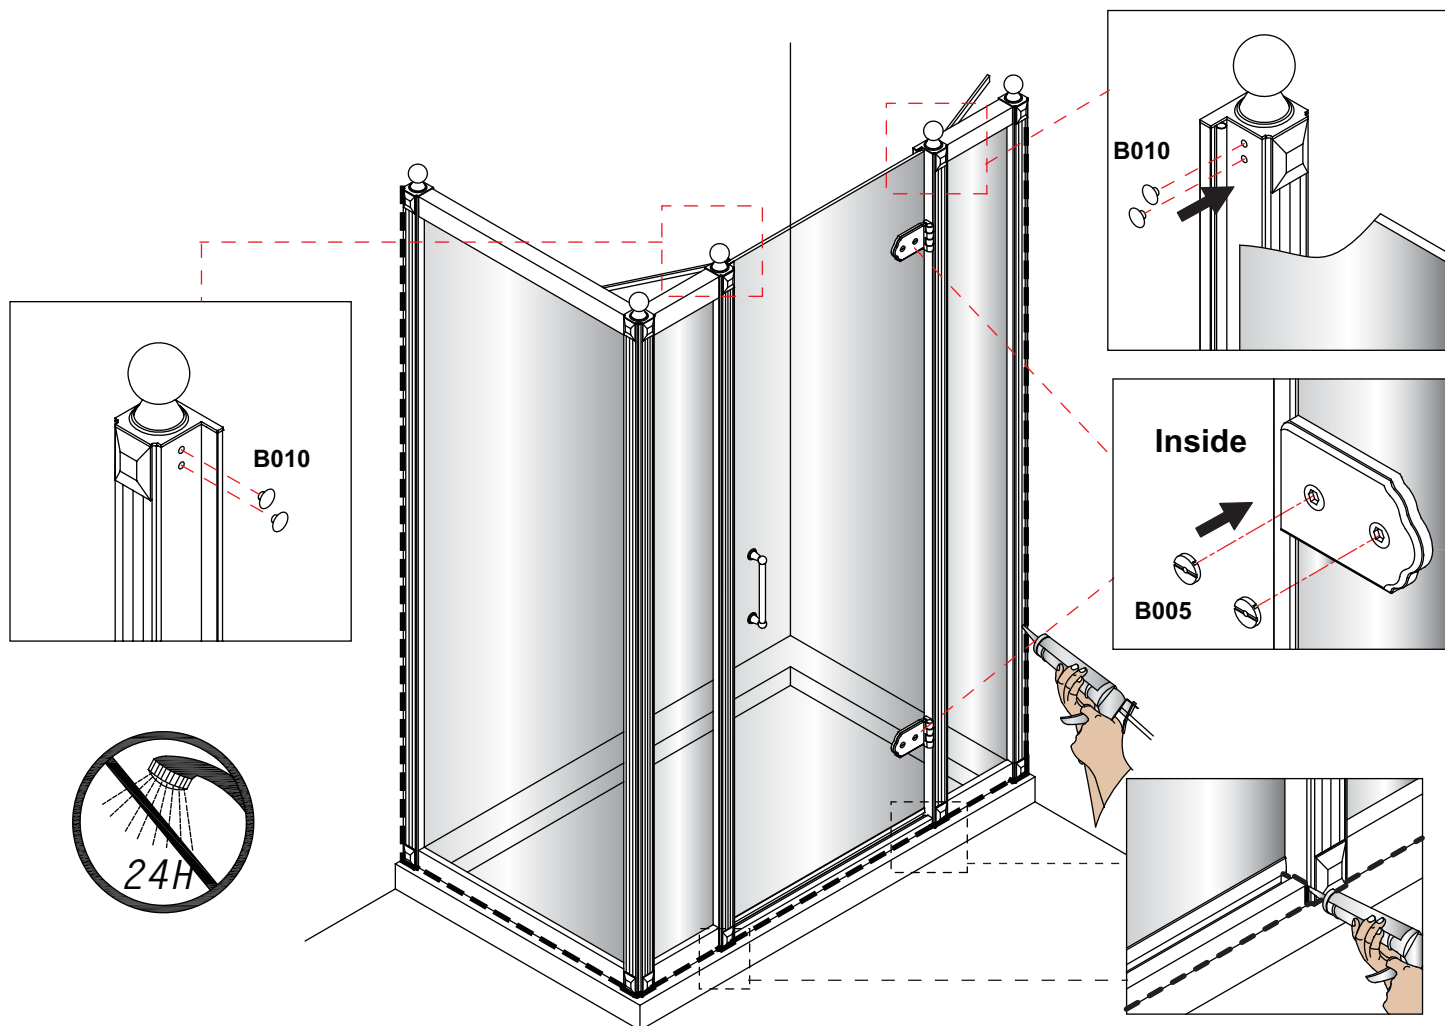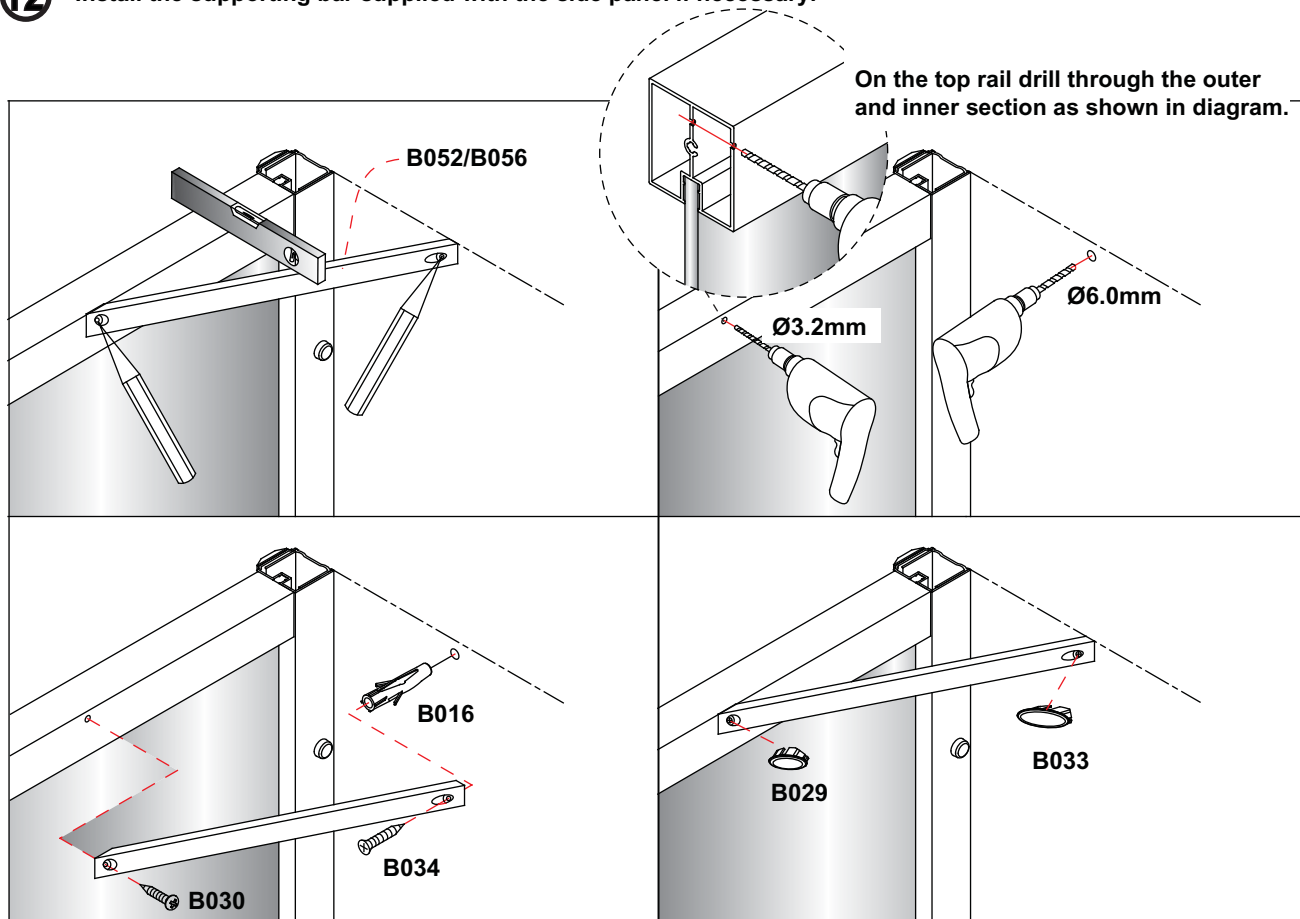

Hinged Door and 2x Inline Panel with Side Panel Complete